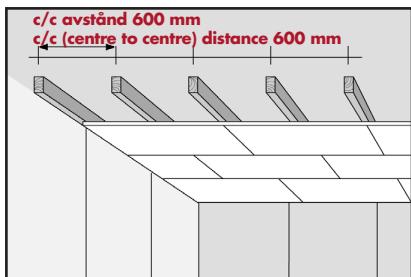
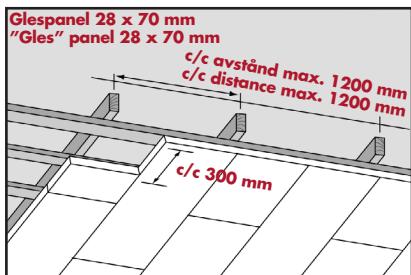
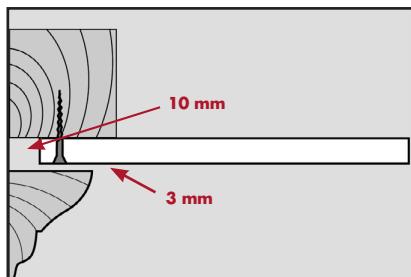
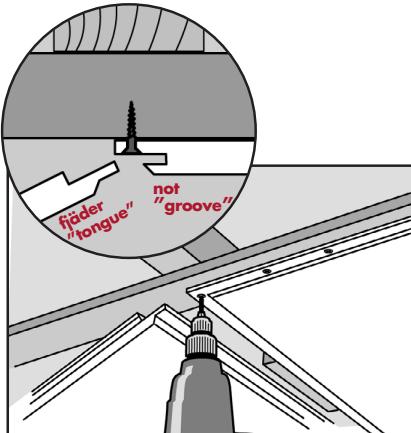


### Monteringsanvisning Elittaket

#### Fitting Instructions

**A**

**B**

**C**

**D**

**E**

**F**

**G**






## Fitting Instructions

GB

### Before you start...

Read carefully through all the fitting instructions before you start work on mounting your Elit Ceiling. Handle the panels with care so that the surface, or tongues and bevelled edges are not damaged. Damaged panels should not be mounted. Store Elit Ceiling in its unopened packaging, stacked on a flat surface, indoors, until you begin the fitting of the ceiling. It does not require airing. Chipboard based products are effected by changes in humidity so the Elit Ceiling should be protected from damp both during transport and storage. It is also extremely important that the building's dampness is aired/dried-out before you start work with Elit Ceiling. Other damp-inducing building work such as concreting must be completed before you start work on the Elit Ceiling. Even the fitting of doors and windows should be completed. The Elit Ceiling contains about 6-8 % moisture content when it leaves the factory, which is equivalent to 30-60 % relative humidity. A suitable temperature range when fitting the ceiling would be 15-20 °C. Relative air humidity should not exceed 65 %. If you should, for example, fix the Elit Ceiling to battens, against a concrete ceiling in a cellar that is not properly heated, then it is important that the concrete is thoroughly dry. If you are unsure if this is the case then you should mount a damp-proof membrane between the ceiling and the battens. This is to prevent the chipboard from absorbing moisture and expanding. Remember damp spreads from the warm to the cold side.

### Here is what you need to fit your Elit Ceiling:

Drill	Saw
Rule	Nail-gun
Setsquare	Screwdriver
Hammer	String
Nails/Screws	Pencil

### Areas where Elit Ceilings may be used

Elit Ceilings can be used in areas wherever timber-based materials can normally be used. Elit Ceilings can even be used in ventilated bathrooms. Note that the surface layer of Elit Ceiling does not function as a barrier against water vapour. In areas where a barrier against water vapour is necessary first mount a damp-proof membrane in the usual way.

### Foundations for Elit Ceiling

If the existing ceiling can be nailed into, and is flat, Elit Ceiling can quite well be mounted directly onto it. Elit Ceiling panels of sizes 600x1200, 300x1200, and 300x1800 mm can be mounted directly to joists of c/c 600 mm. They can also be fixed to battens of

34x45 mm or 28x70 mm. The battens should in that case be fixed across joists of c/c 600 mm. It is preferable to fix the ceiling onto battens as it will then be easier for the electrician to draw his cables. If you mount the Elit Ceiling panels directly onto joists c/c 600 mm then they should be at right angles to them (see diagram A). If you mount the ceiling panels onto battens then they can run either along the battens or across them. When mounting across battens or joists the panels' short sides should always be joined on the batten or joist. If the 600x1200 mm panels are mounted along the battens you should fasten a 200 mm block to the joist (see diagram B). This is to prevent the panel from sagging. If you wish to mount the 300x1200 mm or 300x1800 mm along the battens then you should, of course, fix the battens at c/c 300 mm. If the distance between joists is c/c 1200 mm then battens of 34x45 or 28x70 mm must be fixed across the joists at c/c 300 mm (see diagram C). Even here you can mount the panels across or along the battens.

### Preparation before mounting the Elit Ceiling

Make a sketch of how you wish the pattern of your ceiling to look. Work out how the first and last row of panels must be split so that the pattern will be symmetrical (see diagram D).

Open the packaging and sort out any damaged panels. We will only refund the value of panels in the event of any compensation claim following damage. Stretch a string across the ceiling as a guide along which to mount the first row of panels. With the help of this guide it is extremely easy to get the first row straight.

### Mounting the Elit Ceiling

Split the first row according to the sketch you drew of the ceiling's design. Leave an expansion joint of about 10 mm along the wall's long and short sides and against any pipes or other solid objects, such as chimney breasts and such like. If the ceiling is more than 20 metres in length then an expansion-joint of 10 mm must be included.

When cutting or splitting Elit Ceiling panels with a handsaw then saw from the foil side (front). But if using an electric circular saw then you must saw from the back. Elit Ceiling is mounted with so called hidden fasteners on the bevelled edges (see diagram F). The ceiling can be easily screwed using a screwdriver, use a Spax TFX 25x3.5 mm, Graber 308 32x3.9 mm or equivalent. If you prefer to use nails then use "comb" nails 30x2.8 mm or "thread" nails 35x1.7 mm. You can even use clamps to fix the panels in place. Though the back length of the clamps should not be less than 10 mm and their leg length should be at least 35 mm. If using a nail-

gun it should be adjusted so that the head of the nail is flush with the surface of the panel, no deeper. (see diagram G).

Start mounting the panels in one corner with the tongue side against the wall. The first row is screwed visibly against the walls. The expansion-joint and panel are then covered by beading (see diagram E). When mounting across the ceiling joists or battens screws should be driven in every 150mm at the short end but with two screws wherever the panel's bevelled edge crosses a joist or batten along its long side. When mounting along the direction of the battens drive in a screw every 150mm along the panel's long side. The short end is then fastened with two screws into the wood block or the batten (see diagram B). Fitting is made easier if you drive the screws or nails into the panels while they are still laying down. The panels should not be glued at the joints. The Elit Ceiling is mounted with push-fit joints.

If using nails then use a "nail-punch". In that way you will avoid damaging the panels with misjudged hammer-blows. At temperatures below 0 °C the foil on the panel becomes stiffer. So handle the panels carefully when cold.

Movement in the building can create creases in the foil of the panel if the cover beading is pressed too hard against the panel. Therefore always leave a small gap between the beading and the ceiling. Use cover beading (see diagram E).

Elit Ceiling is constructed for hidden nailing, which means the panels are fixed on two sides. The other sides are fixed by its adjoining panel's joint. Extremely careful mounting is therefore necessary.

We reserve the right to alter technical specifications to Elit Ceiling without previous notice.  
Good luck with your new Elit Ceiling!

Product facts, ceiling	
Designs:	White structure, White glazed oak, Snow-white pine, White top
Manufacture:	Groove and tongue on 4 sides plus V-joints
Base Material:	Chipboard of E1 quality
Foil:	Environmentally friendly foil
Panels per pack:	Width 600 mm 5 pcs, width 300 mm 5 pcs
Weight per m <sup>2</sup> :	8.5 Kg
Surfaces:	resistance to light: 6 according to DIN standard 53389

Swedish work-safety regulations requiring "foot-through" safety is only fulfilled if an approved safety foil is mounted between "gles" panel and joist.

## Инструкция по монтажу Потолочные панели

RU

НАДЕЖНЫЕ – ПРОСТАЯ И БЫСТРАЯ  
УСТАНОВКА – ЛЕГКО МОЕТСЯ

На 4 сторонах потолочной панели ЭЛИТ есть соединительные шипы и пазы, покрытые, как и поверхность панели, экологически чистой фольгой. Эта фольга образует твердое антистатическое долговечное и простое в уходе покрытие (класс 6 по стандарту DIN 53389). Материал основы – ДВП качества Е1. Потолочные панели можно использовать в тех помещениях, условия в которых позволяют использовать древесные материалы, даже в ванных комнатах при достаточной вентиляции. Запрещается использовать эти потолочные панели как барьер от водяного пара.

### Перед монтажом:

Перед началом монтажа нужно внимательно прочесть данную инструкцию. Оставить потолочные панели ЭЛИТ в закрытой упаковке на 2 часа в том помещении, в котором будет установлен потолок. Разложить панели на ровной поверхности. Перед началом установки проверить панели на предмет повреждений. Чтобы уменьшить количество отходов, перед

началом работ рекомендуется начертить план установки (см. рис. D). Отложить поврежденные панели или попробовать отрезать поврежденные части. Использовать потолочные панели ЭЛИТ только в сухих помещениях с температурой от 15 до 20 градусов и максимальной относительной влажностью 65 %.

### Во время монтажа:

Лучше всего устанавливать панели ЭЛИТ на винтах (3\*20/3,5\*20 мм). (См. рис. G). Эти винты ввинчиваются в склоненный край панели по обеим ее сторонам (см. рисунки В и F) через каждые 15 см (примерно 12 винтов на панель). Первую панель устанавливают обоими шипами к стенам и привинчивают насквозь (винты 3\*35/3,5\*35 мм). В конце установки эти винты закрывают молдингом. Оставить 10-мм температурный шов вдоль стены и вокруг препятствий. Если длина потолка превышает 10 метров, то температурный шов нужно предусмотреть и в середине. В конце работы все температурные швы, в том числе и по краям, закрывают молдингом (см. рисунок Е). Панели ЭЛИТ устанавливают на деревянные лаги (или специальную крепежную систему), расположенные с интервалом примерно в 60 см (см. рисунки А и В). Если расстояние между опорными балками составляет 1200 мм (с середины балки до середины следующей

балки), прикрепите панели размером 34 x 45, при расстоянии балок 300 мм (от середины до середины) – панели размером 28 x 78 мм (см. рис. С). Панели можно крепить как вдоль, так и поперек опорных балок. Вы даже можете воспользоваться скобами для фиксации панелей. При этом задняя длина скоб должна быть не менее 10 мм, а длина ножек – не менее 35 мм. При использовании пневматического молотка его следует настроить так, чтобы головка забываемого гвоздя оставалась на уровне поверхности панели и не уходила глубже (см. диаграмму Г).

### После монтажа:

Протереть панели сразу после установки и до крепления молдинга. Протирать новый потолок влажной тканью не реже одного раза в год. Запрещается использовать при уборке химические средства, чтобы не сократить срок эксплуатации панелей. Желаем вас успеха с новым потолком ЭЛИТ.

Размер брутто:	122 x 62 см
м <sup>2</sup> брутто в пачке:	3,782 м <sup>2</sup>
Размер нетто:	120 x 60 см
м <sup>2</sup> нетто в пачке:	3,60 м <sup>2</sup>
Толщина:	12 мм
Штук в пачке:	5 штук



