

GELIA

FD-40A



SÄKERHETSANVISNINGAR


- 1.Säng av och dra alltid ur kontakten före rengöring.
- 2.Slå inte på fläkten om fläktbladet har sprickor eller skador.
- 3.Anslut apparaten endast till 220V-240V~50Hz.
- 4.Om anslutningssladden är skadad får den endast repareras av tillverkaren eller av en behörig elektriker.
- 5.Stoppa ej in fingrar eller föremål genom fläktskyddet.
- 6.Spraya inte in någon form av vätska i fläktskyddet.
- 7.Pressa inte hårt på det bakre fläktskyddet.
- 8.Ställ fläkten på en jämn och vågrät yta för att undvika gängskärning.
- 9.Placera inte apparaten nära fönster för att undvika elektrisk vid regn.
- 10.Använd inte apparaten vid följande situationer.
 - höga temperaturer och fuktighet
 - i närheten av lättantändliga föremål
 - i närheten av kemikalier, flytande eller pulverform
- 11.Apparaten är inte avsedd att användas av barn utan uppsikt.
- 12.Använd inte apparaten tillsammans med någon timer eller någon annan anordning som slår på automatiskt eftersom det föreligger en brandrisk om apparaten är övertäckt.

VIKTIGT

Första gången ni använder apparaten kan ni känna en lätt lukt under de första minuterna. Detta är normalt och försvinner snabbt.

BESKRIVNING

- 1 fot
- 2 screw x 4
- 3 stand
- 4 base cover
- 5 stand ock
- 6 stativ
- 7 bakre galler
- 8 fäst mutter
- 9 fläktblad
- 10 blad mutter
- 11 frontgaller

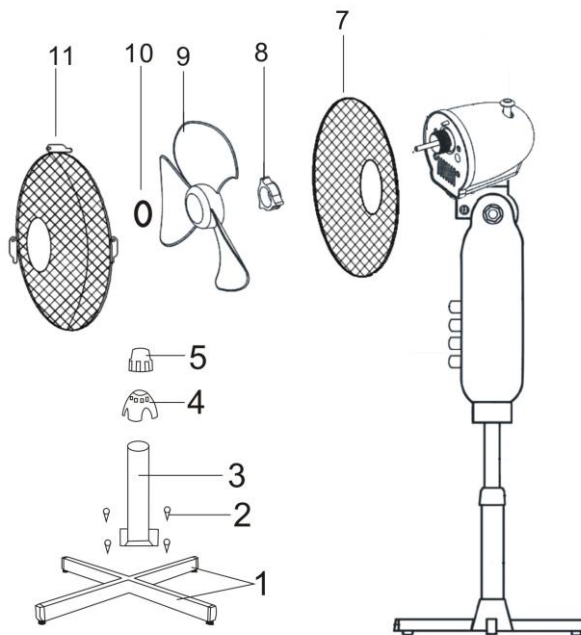

MONTERING

1. Montera det bakre gallret på motoraxeln genom tt passa in pinnarna i hålen på gallret och montera fästmuttern.
2. Sätt propellern på motoraxeln och sätt fast den genom att skruva dit bladmuttern.
3. Sätt fast foten med stativet.

ANVÄNDNING

- 0 = av 1 = låg hastighet 2 = medium 3 = hög hastighet
- Dra upp knappen för att stoppa oscillationen.
 - Luftströmmen kan regleras genom att fläkten vickas uppåt eller nedåt.

RENGÖRING

- Slå av fläkten och dra ur kontakten innan rengöring
- Fläktbladet kan rengöras genom att avlägsna frontgallret.

SAFETY PRECAUTIONS

1. Always press this appliance off and unplug after using and before cleaning.
2. Do not turn this appliance on when blade have fissure or damage.
3. Check the voltage whether is match the specific voltage of the appliance.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Do not insert finger or rubbish into the fan guard.
6. Do not spray any insecticide or liquid into the fan guard.
7. Unplug the appliance when cleaning and moving the appliance.
8. Do not press the rear guard strongly.
9. Place fan on a flat, level surface to avoid tapping.
10. Do not place the appliance near window to avoid electrical leakage when rainy.
11. Do not operate the appliance under the following situations:-
 - High temperature and humidity
 - Tinder
 - Chemicals, oily or dusty


WARNING

- * If the main cord of this appliance is damaged, it must only be replaced by the manufacturer or their service representative, as special tools and/or parts are required.
- * The appliance is not intended for use by young children or infirm persons without supervision.
- * Young children should be supervised to ensure that they do not play with the appliance.
- * Do not use this appliance with a programmer, timer or any other device that switches the appliance on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
- * This appliance is for household use and may be plugged into any 220V-240V ~ 50Hz electrical outlet (ordinary household current). Do not use any other electrical outlet.
- * When fans on power, do not insert finger or things into the cover and blade area.
- * Do not locate the appliance immediately below a socket-outlet.

IMPORTANT

- * During the first few minutes of initial use, you may notice a slight odor. This is normal and will quickly disappear.

PARTS DESCRIPTION

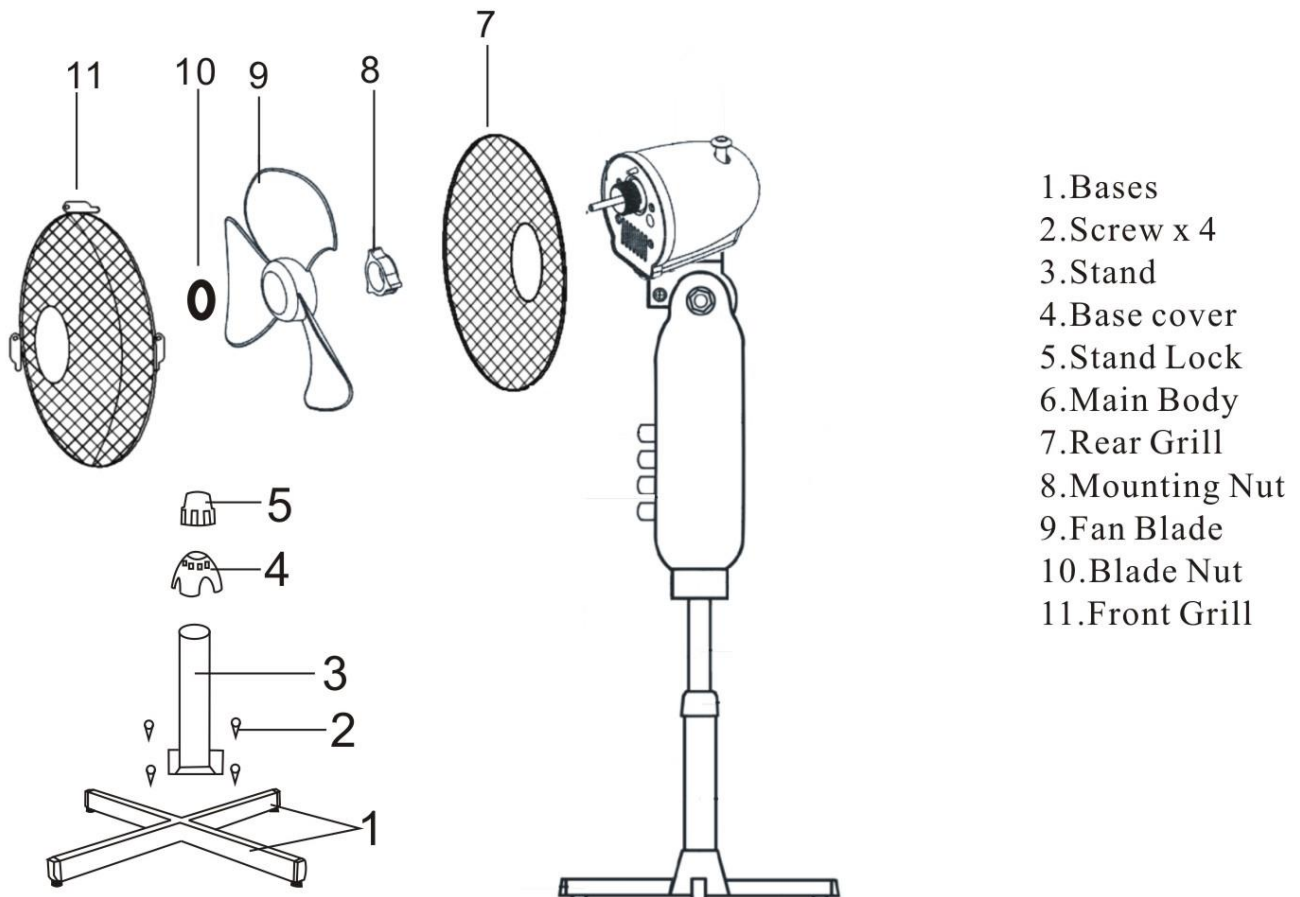

HOW TO ASSEMBLE

1. Fit the bases by the central indented positions. Remove the screw and position the lower stand holes with the holes on the bases. Then tighten the screws to fix the stand.
2. Remove the stand lock and insert the base cover through the stand to cover the bases. Pull out the upper stand to lengthen the stand and tighten by the stand lock.
3. Insert the main body into the stand by the lower stand hold and tighten by the screw knob.
4. Remove the mounting nut on the main body and insert the rear grill through the shaft of the motor. Tighten the mounting nut to fix the rear grill.
5. Insert the fan blade and tighten the blade nut with anti-clock direction.
6. Fit the front grill with rear grill by the four clips and tighten the bottom screw with nut.

HOW TO OPERATE

1. Press the buttons (1-Low 2-Med 3-High) for desired speed.
2. The fan will operate with oscillation. Pulling up the motor can halt oscillation.
3. The blowing angle can be adjusted and down by the pivot on main body.
4. Press 0 can turn off the fan.

MAINTENANCE

- Before cleaning, turn the fan off and unplug from electrical outlet.
- Fan blade can be uninstalled for cleaning by front grill removing.