
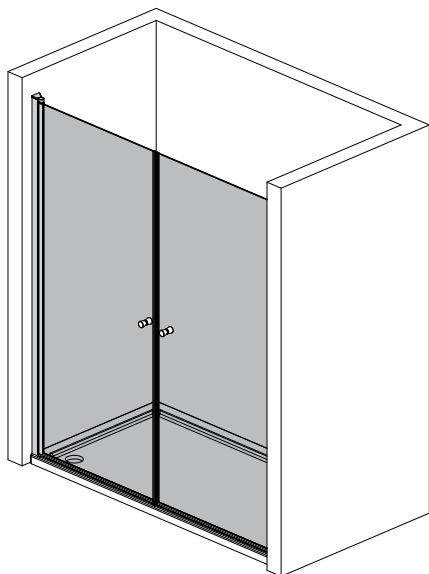
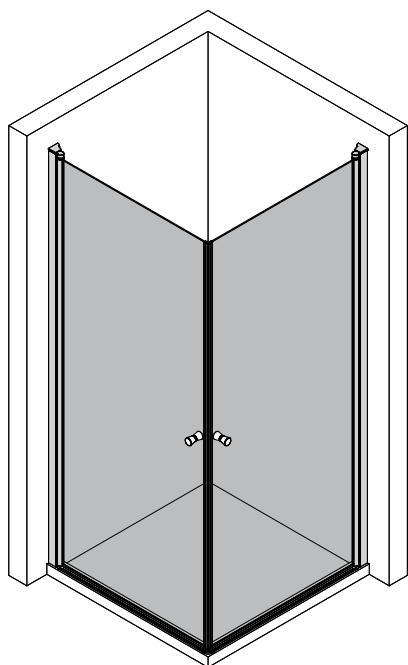


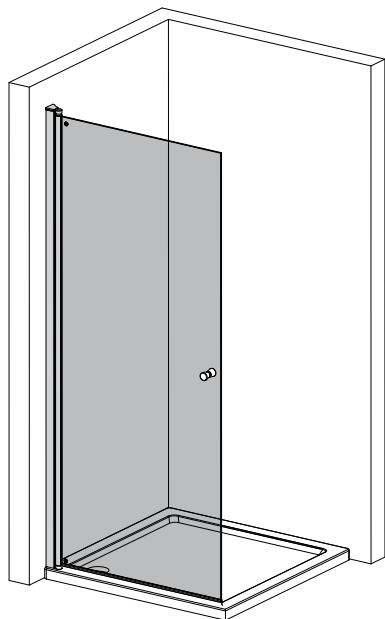

Før du starter monteringen

- Sjekk at alle delene er på plass
- Se etter at du har nok plass til monteringen
- Sørg for at det er rent og støvfritt
- Les først igjennom monteringsanvisningen
- Sørg for at du har vater og skrutrekker tilgjengelig

Sikkerhet


- Vær forsiktig. Glass kan knuse!
- Det trengs 2 personer til monteringen.
- Alle glass er herdet. Eventuelt knust glass må ikke erstattes med vanlig glass
- Pass på at ikke små barn har tilgang til delene

OBS!

- Eventuelle mangler ved produktet må omgående meldes til leverandør. Produsent / leverandør kan ikke holdes ansvarlig for kostnader relatert til montering av et mangelfullt produkt.
- Tenk på miljøet ved avhending av emballasje

Nødvendig verktøy


Vater

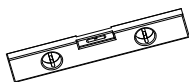

Blyant




Målebånd

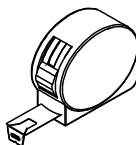


Drill




Silicon

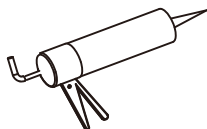

Hammer

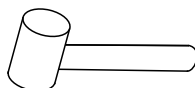


Skrutrekker

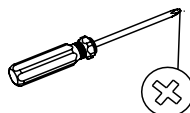

Pistol drill



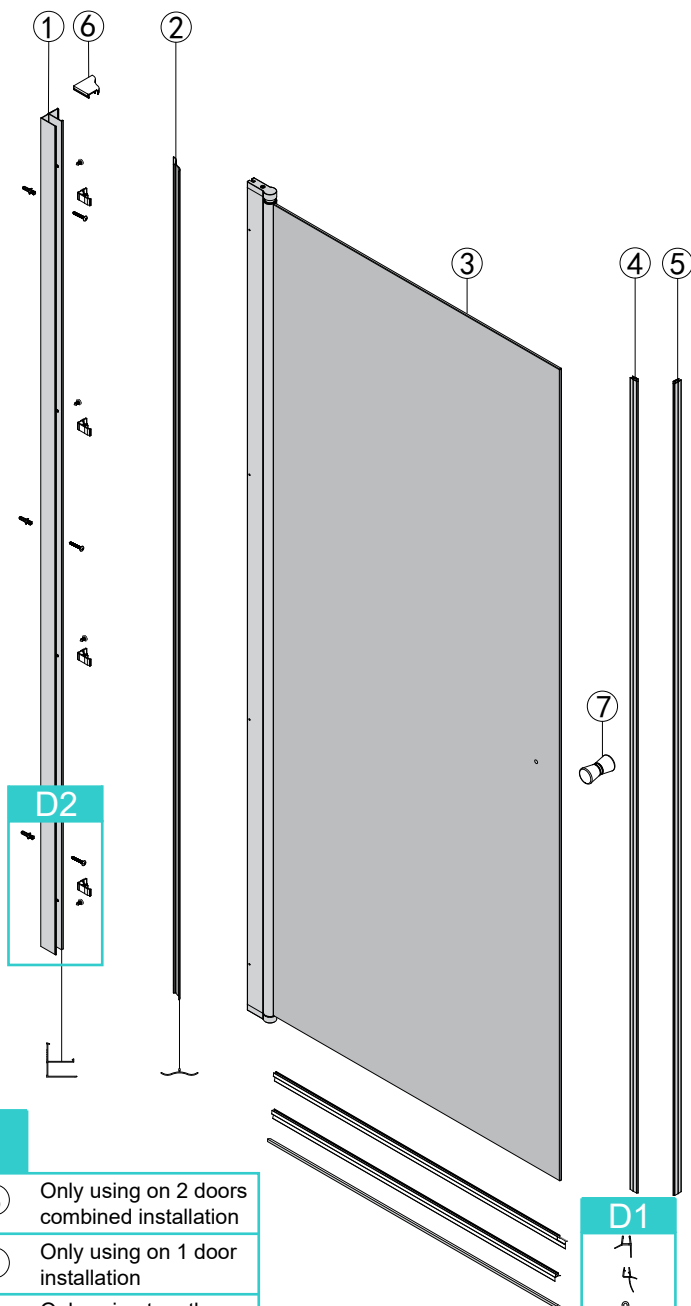

D1



⑧

Only using on 2 doors combined installation



⑨

Only using on 1 door installation



⑩

Only using together with part ⑧



⑫



⑪

⑫ using on 2 doors in corner

⑪ using on 2 doors in straight

D1



④



⑤



⑦

D2



⑫



⑮



⑭




⑬

Parts list


No.	Drawing	Parts Name	Q'ty	Article code
1		Wall profile	1	LC270C1980Z
2		Clip profile	1	LC257C1980Z
3		Door panel	1	/
4		Magnetic strip A	1	CT0401940
5		Magnetic strip B	1	CT0411940
6		Decoration cap A	1	SLB471
		Decoration cap B	1	SLB472
7		Handle	1	LS011A
8		Bottom seal strip	1	/
9		Bottom seak strip	1	/
10		Bottom seal profile	1	/
11		180° Connector	1	SLB573
12		90° Connctor	1	SLB484
13		Fixing part	4	SLG422
14		Screw	4	LD002A
15		Screw	3	LD001A
16		Anchor	3	SLD059

1 Door Panel


Step 1: Wall profile installation

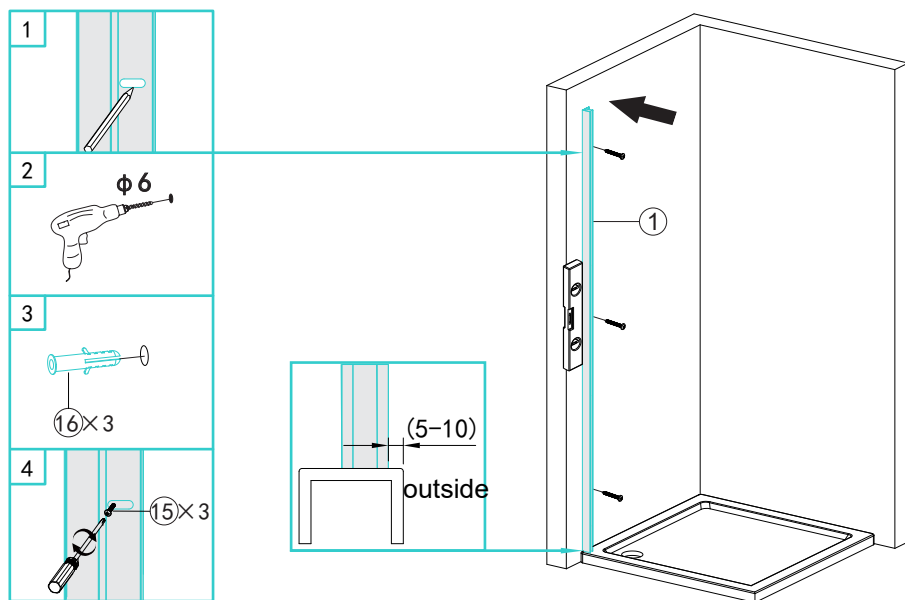


Step 2: Door panel installation

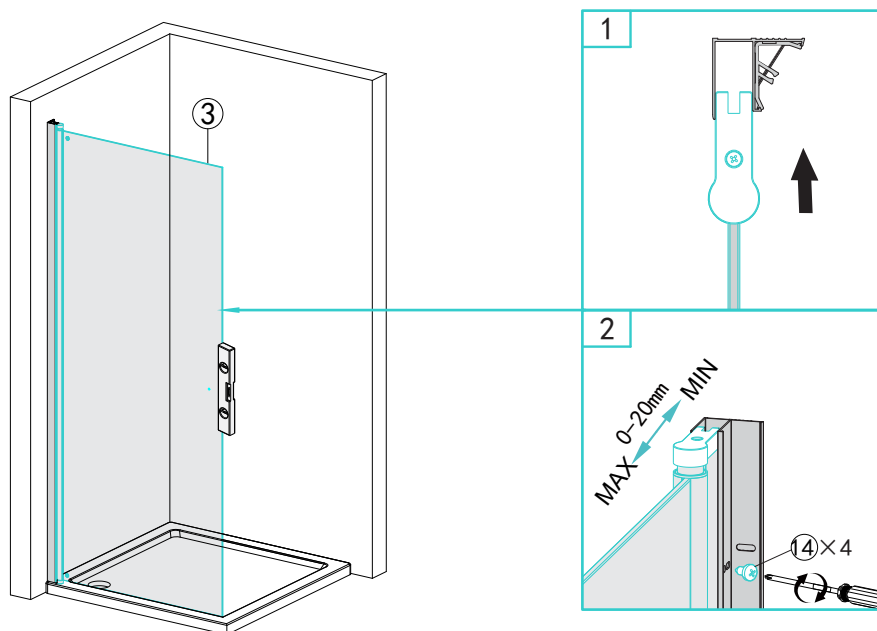


Step 3: Accessories installation

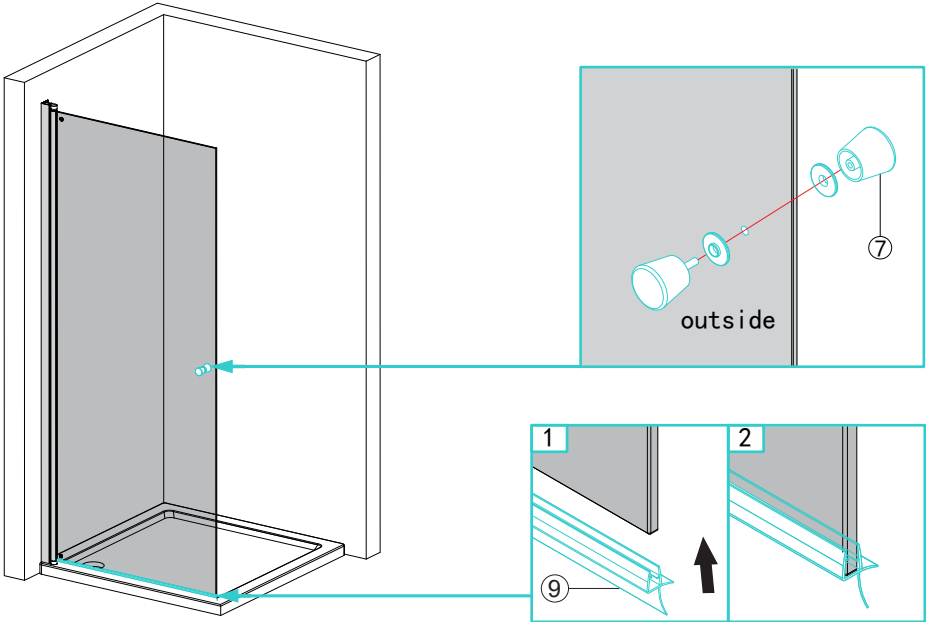

Step 4: Clip profile installation

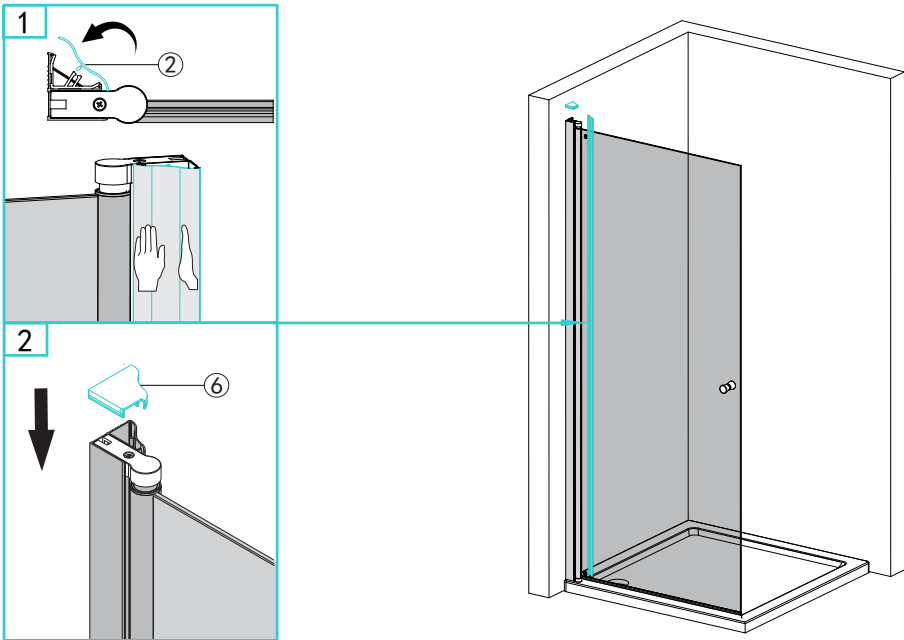

Step 5: Silicon


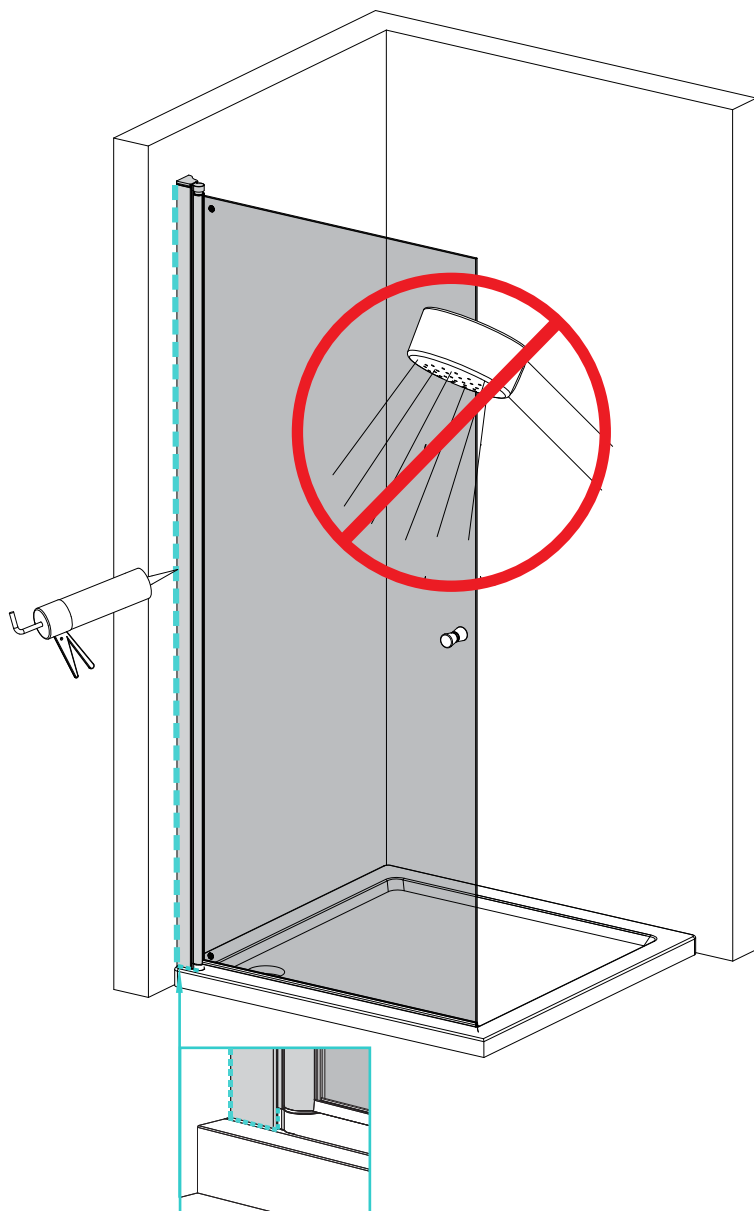


DO NOT USE IN 24hrs



HD+HD Combine in Corner

Step 1: Wall profiles installation



Product	W1/W2 (mm)
800	780 ~ 800
900	880 ~ 900
1000	980 ~ 1000

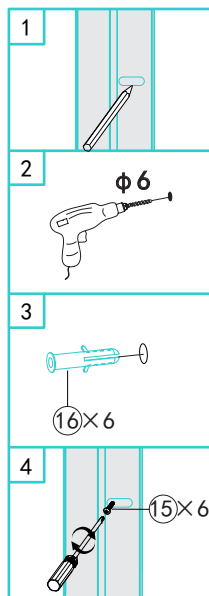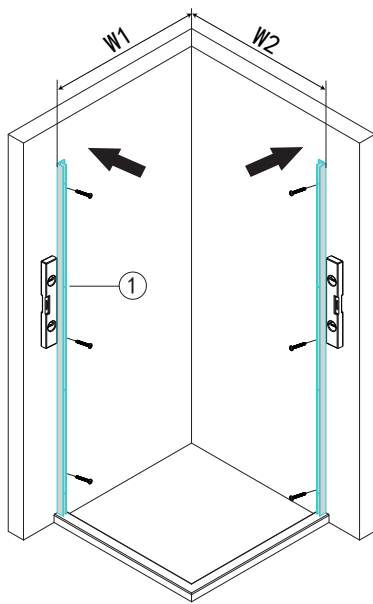





Step 2: Door panels installation

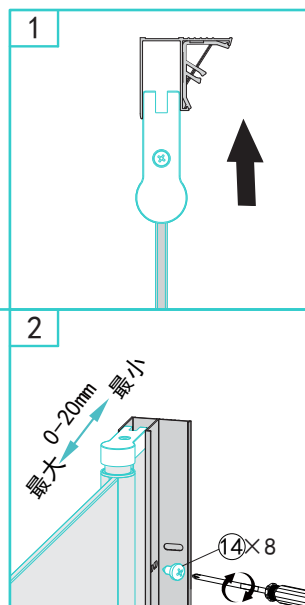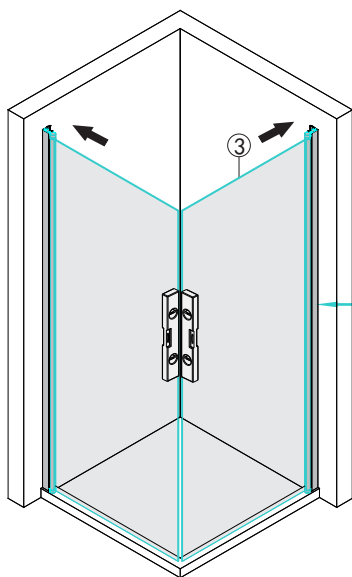



Step 3: Handle

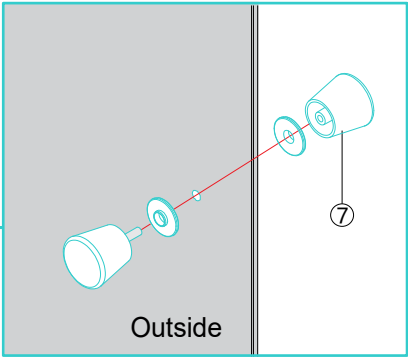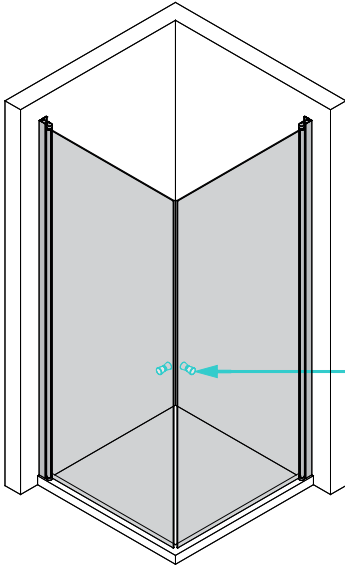



Step 4: Magnetic profiles and bottom seal strips installation

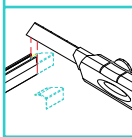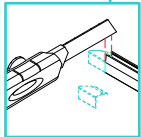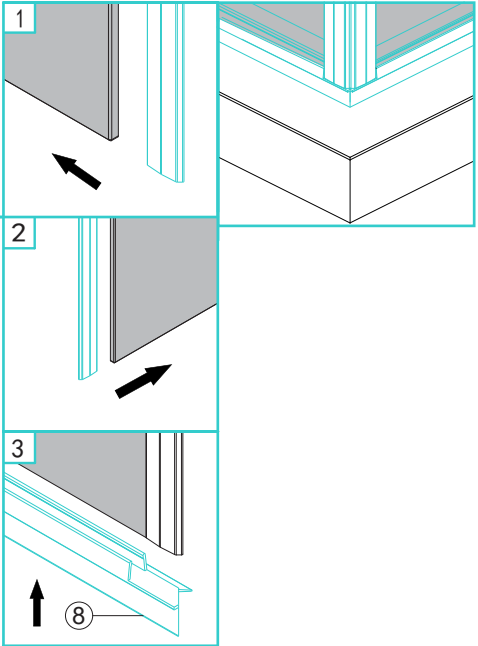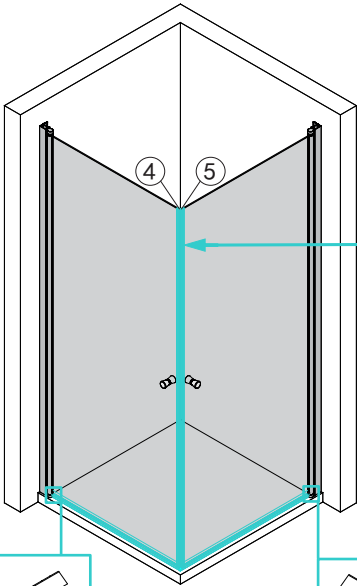

Step 5: Adjustment

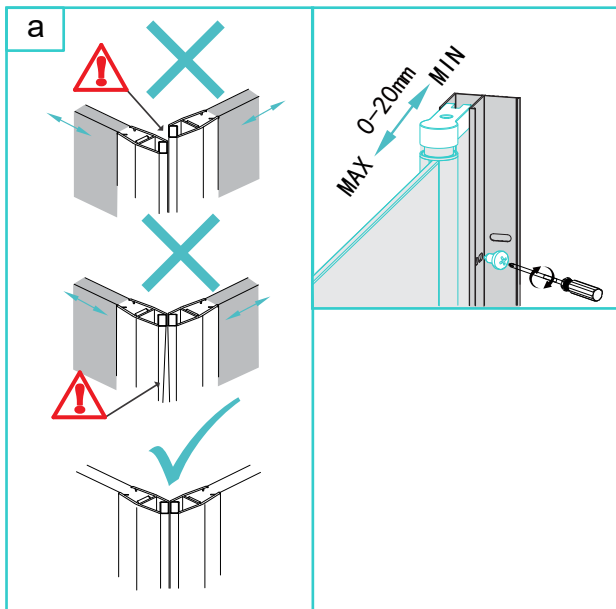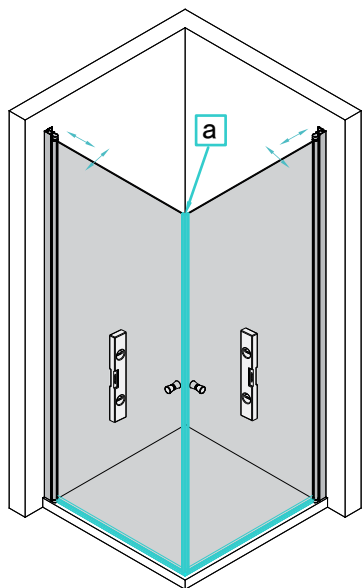


Step 6: Clip profiles and decoration caps installation

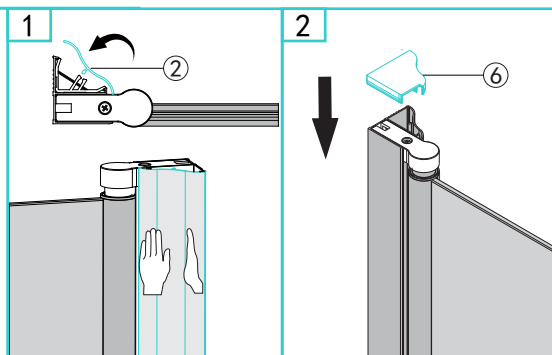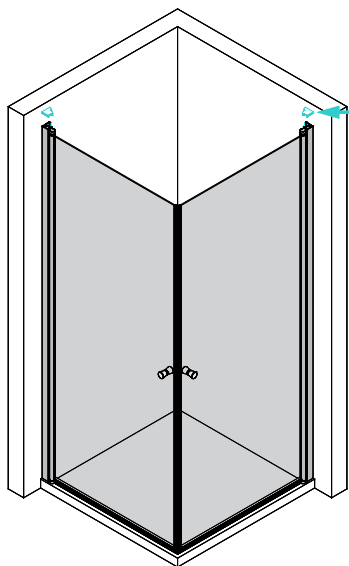


Step 7: Bottom water fender profiles installation

A1/A2	B1/B2 _(mm)
800	700
900	800
1000	900

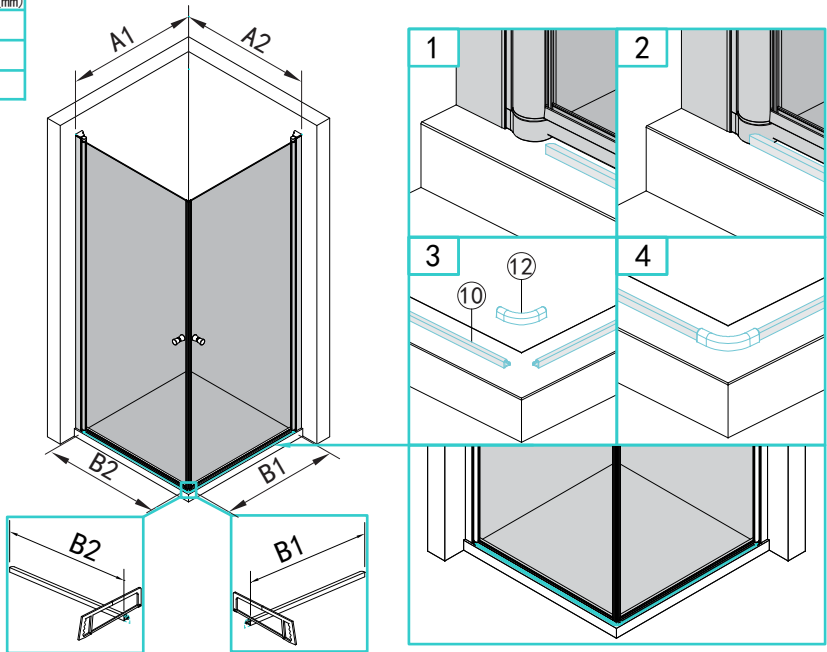



Step 8: Silicon

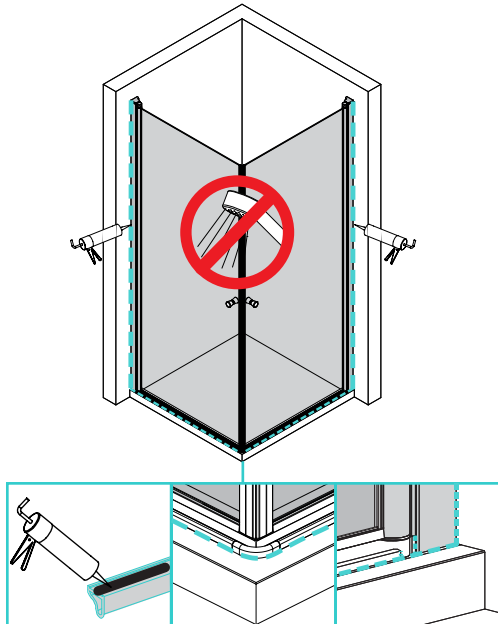

 **DO NOT USE IN 24hrs**


HD+HD Combine in straight

Step 1: Wall profiles installation

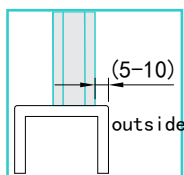
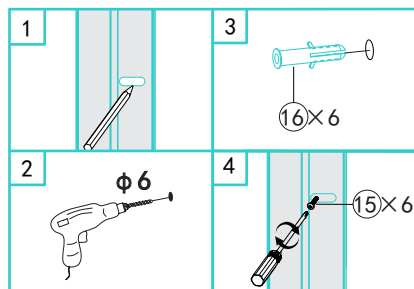




A1+A2 Size Overview

A1 \ A2	800	900	1000
800	1535~1575	1635~1675	1735~1775
900	1635~1675	1735~1775	1835~1875
1000	1735~1775	1835~1875	1935~1975





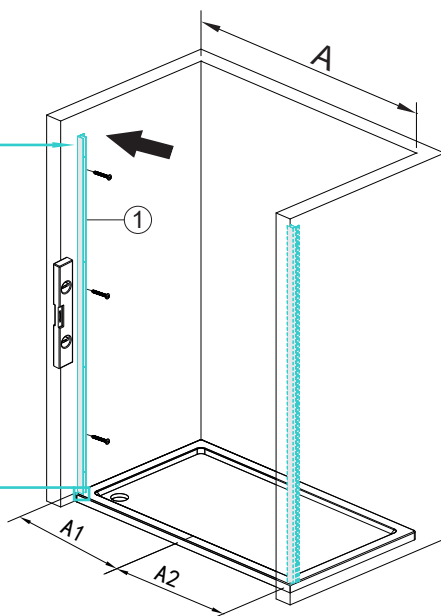


Step 2: Door panels installation

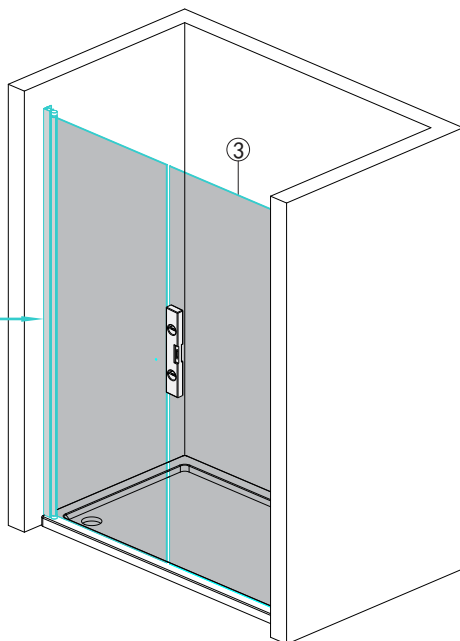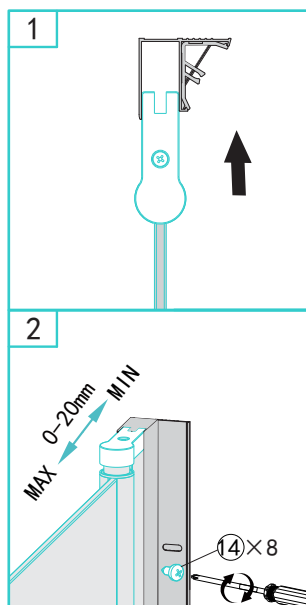


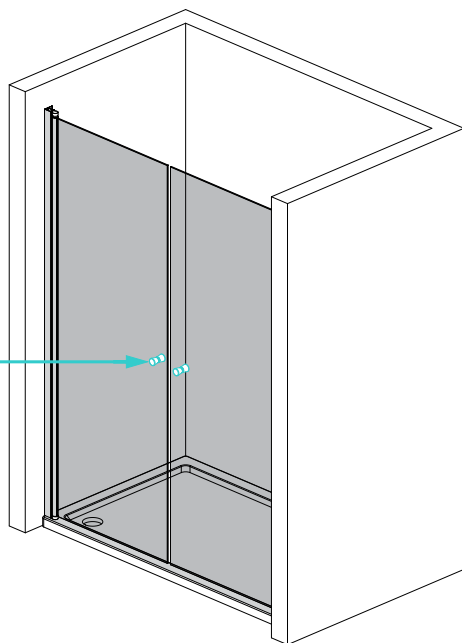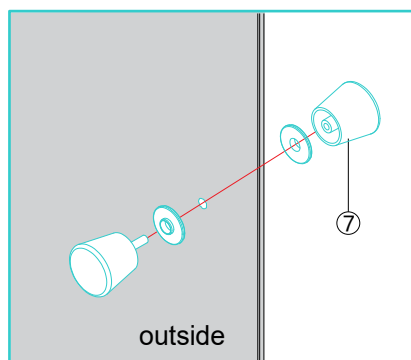


Step 4: Magnetic strips and bottom seal strips installation

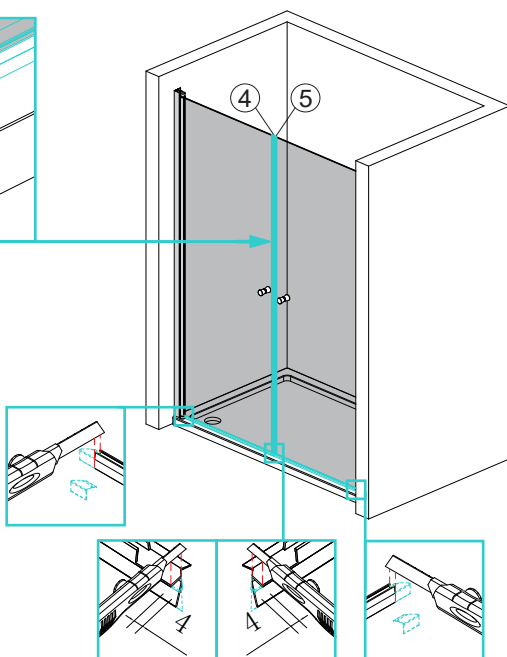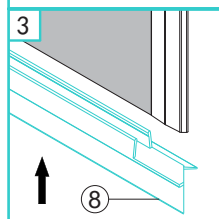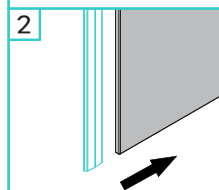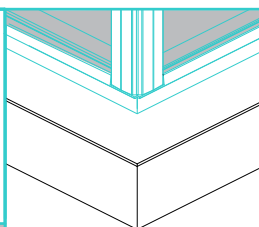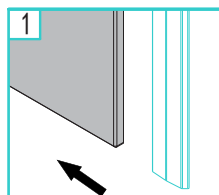


Step 5: Adjustment

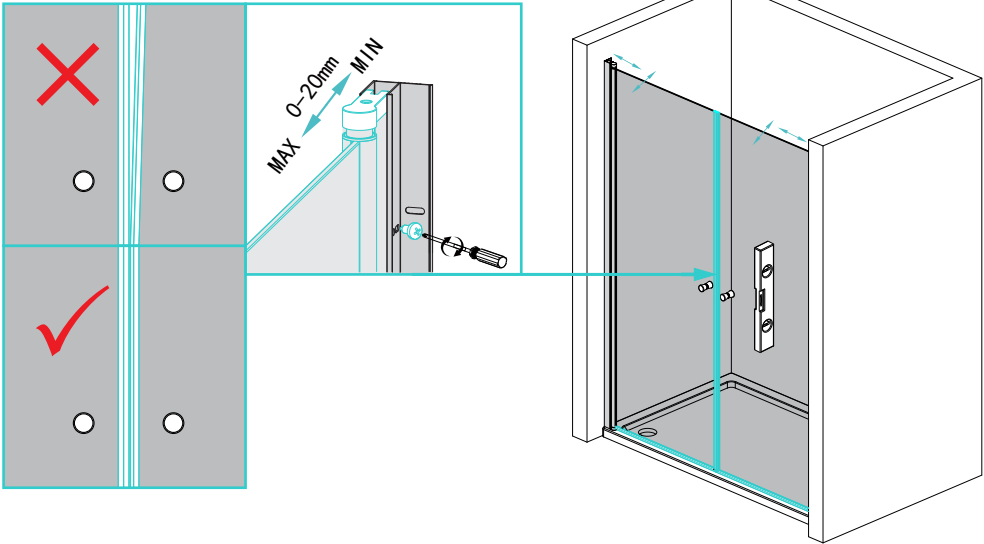

Step 6: Clip profiles and decoration caps installation

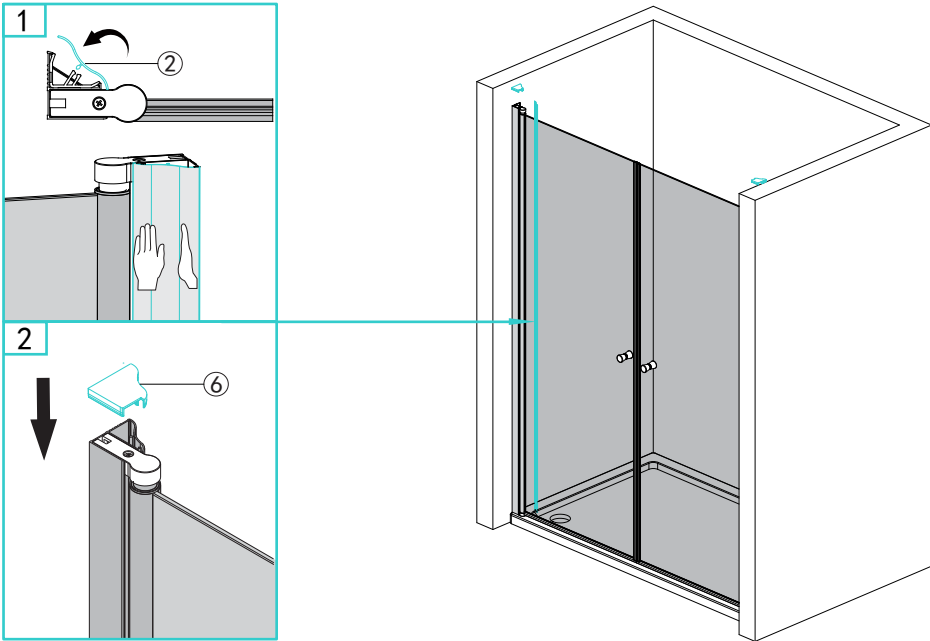

Step 7: Bottom water fender profiles installation

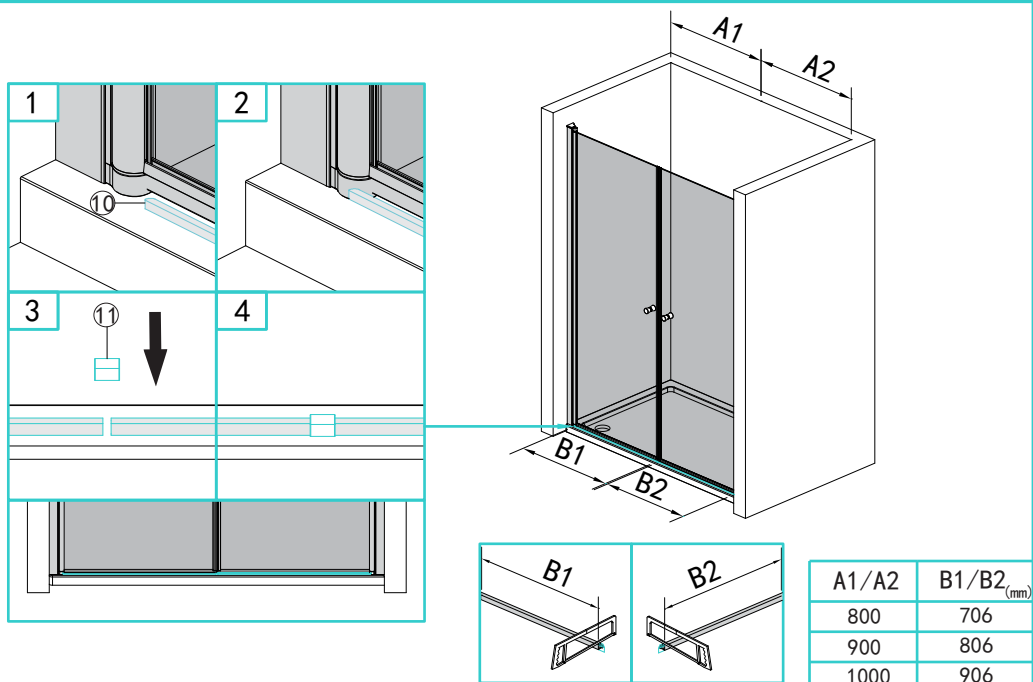

Step 8: Silicon

