
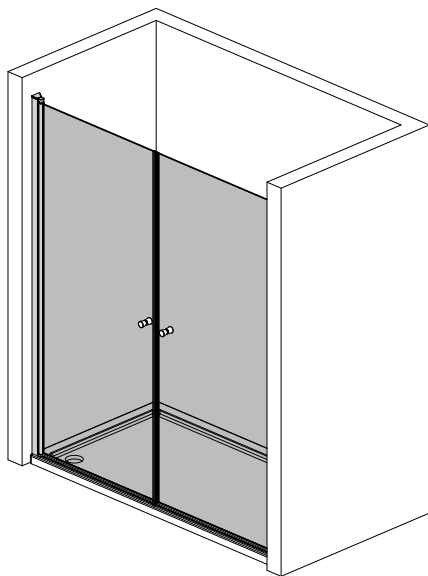
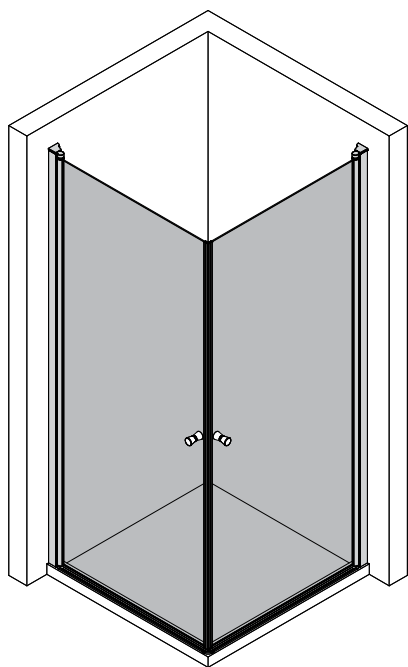


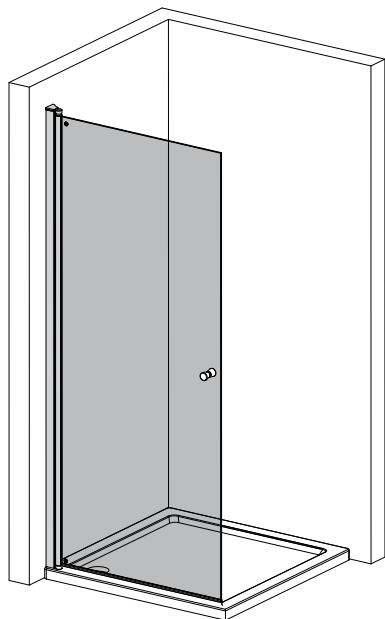

## Før du starter monteringen

- Sjekk at alle delene er på plass
- Se etter at du har nok plass til monteringen
- Sørg for at det er rent og støvfritt
- Les først igjennom monteringsanvisningen
- Sørg for at du har vater og skrutrekker tilgjengelig

## Sikkerhet


- Vær forsiktig. Glass kan knuse!
- Det trengs 2 personer til monteringen.
- Alle glass er herdet. Eventuelt knust glass må ikke erstattes med vanlig glass
- Pass på at ikke små barn har tilgang til delene

## OBS!

- Eventuelle mangler ved produktet må omgående meldes til leverandør. Produsent / leverandør kan ikke holdes ansvarlig for kostnader relatert til montering av et mangelfullt produkt.
- Tenk på miljøet ved avhending av emballasje

## Nødvendig verktøy


Vater

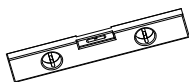

Blyant




Målebånd

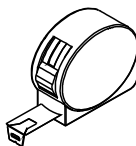


Drill




Silicon

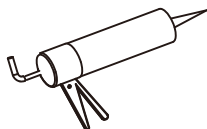

Hammer

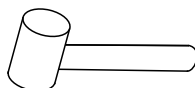


Skrutrekker

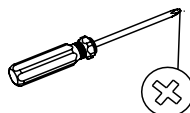

Pistol drill



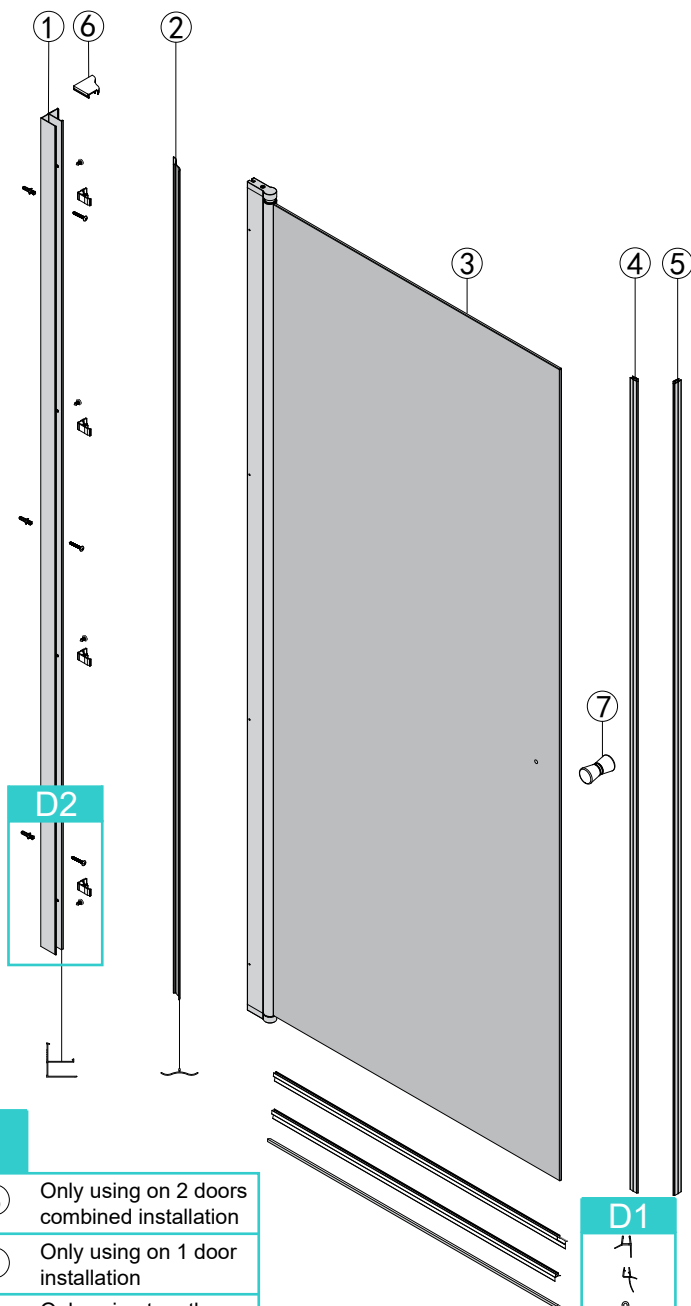

# D1



⑧

Only using on 2 doors combined installation



⑨

Only using on 1 door installation



⑩

Only using together with part ⑧



⑫




⑪

⑫ using on 2 doors in corner

⑪ using on 2 doors in straight

# D1



⑫

# D2



⑫

⑮



⑮



⑮




⑮

## Parts list


| No. | Drawing                                                                             | Parts Name          | Q'ty | Article code |
|-----|-------------------------------------------------------------------------------------|---------------------|------|--------------|
| 1   |    | Wall profile        | 1    | LC270C1980Z  |
| 2   |    | Clip profile        | 1    | LC257C1980Z  |
| 3   |    | Door panel          | 1    | /            |
| 4   |    | Magnetic strip A    | 1    | CT0401940    |
| 5   |    | Magnetic strip B    | 1    | CT0411940    |
| 6   |    | Decoration cap A    | 1    | SLB471       |
|     |    | Decoration cap B    | 1    | SLB472       |
| 7   |    | Handle              | 1    | LS011A       |
| 8   |    | Bottom seal strip   | 1    | /            |
| 9   |    | Bottom seak strip   | 1    | /            |
| 10  |    | Bottom seal profile | 1    | /            |
| 11  |    | 180° Connector      | 1    | SLB573       |
| 12  |    | 90° Connctor        | 1    | SLB484       |
| 13  |    | Fixing part         | 4    | SLG422       |
| 14  |   | Screw               | 4    | LD002A       |
| 15  |  | Screw               | 3    | LD001A       |
| 16  |  | Anchor              | 3    | SLD059       |

# 1 Door Panel


## Step 1: Wall profile installation

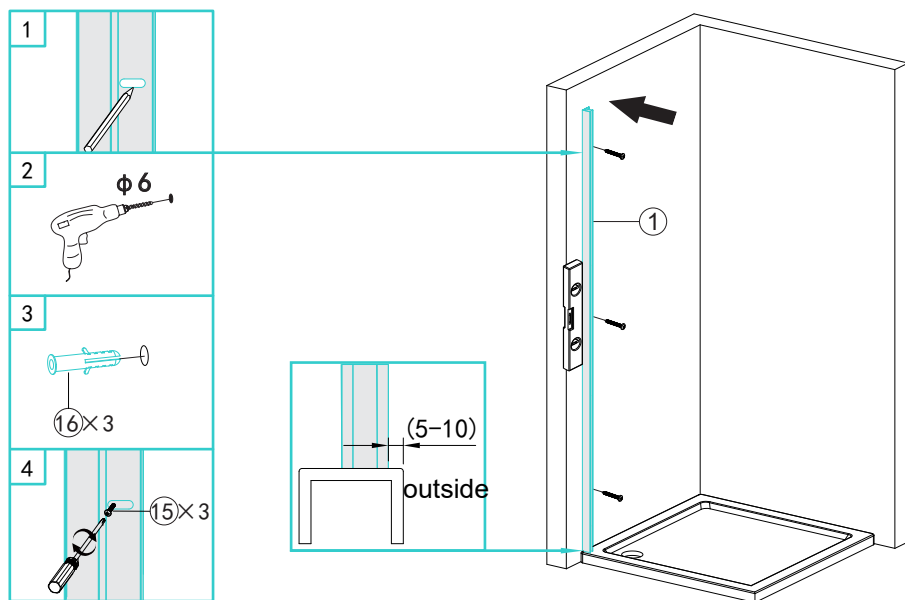


## Step 2: Door panel installation

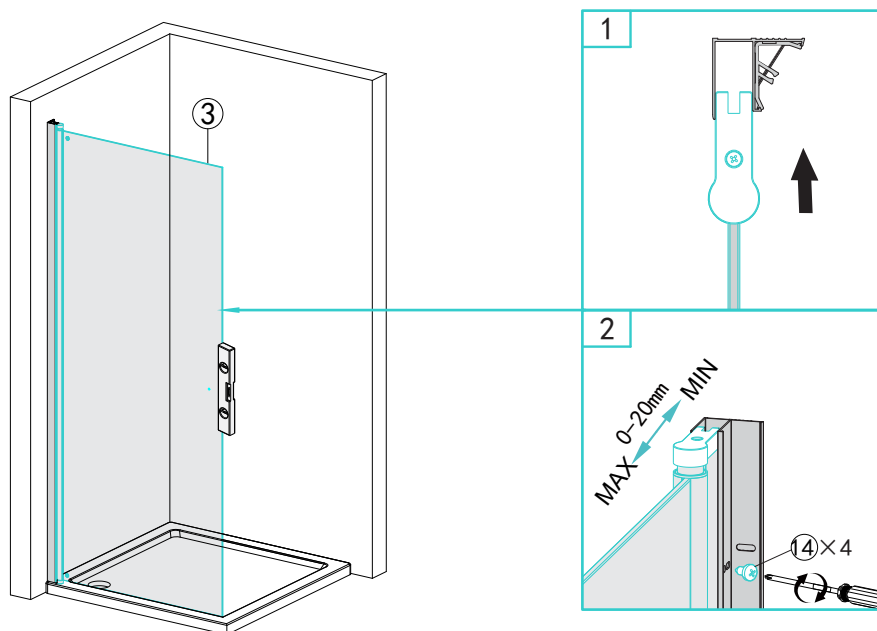


Step 3: Accessories installation

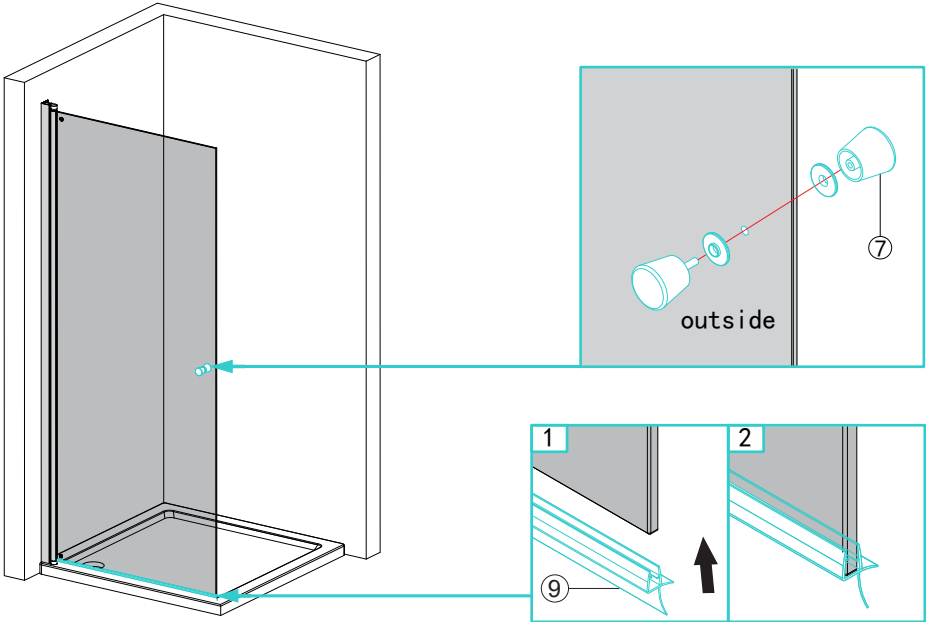

Step 4: Clip profile installation

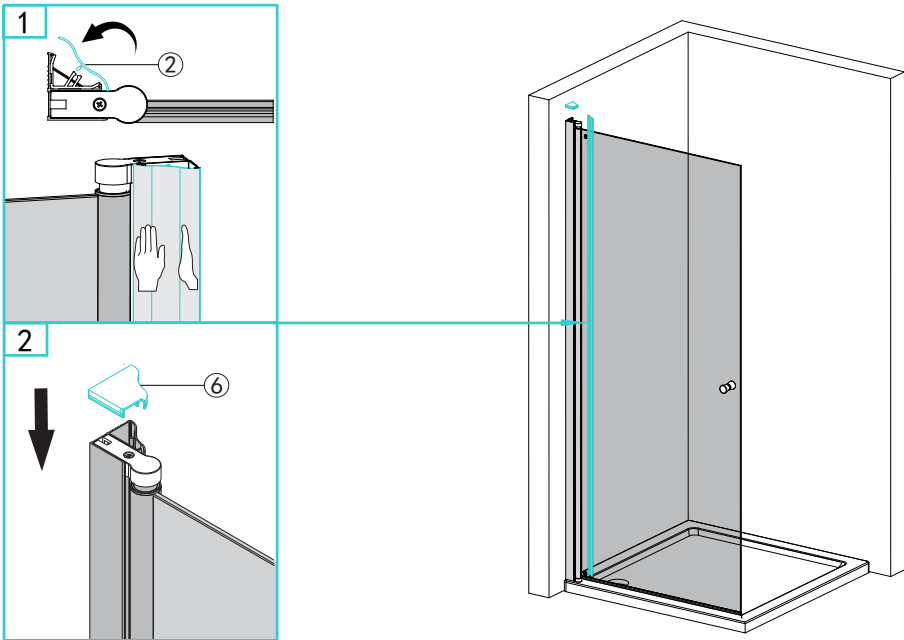

## Step 5: Silicon


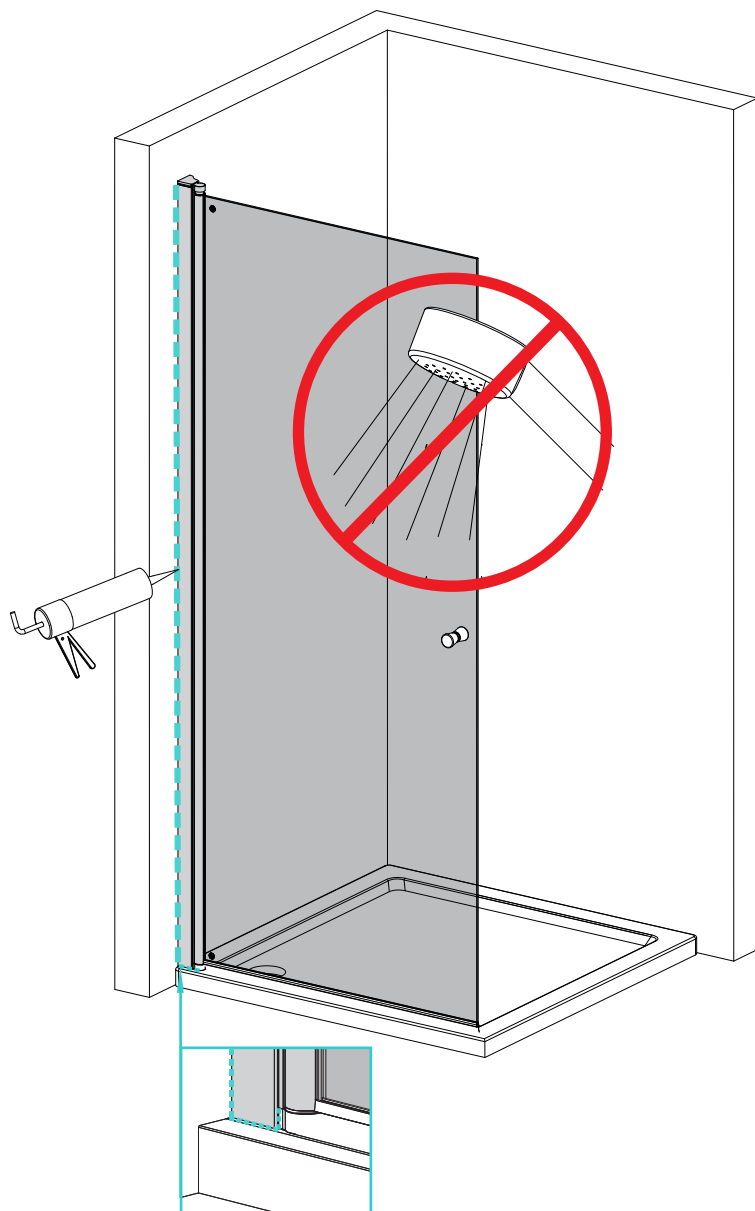


DO NOT USE IN 24hrs



# HD+HD Combine in Corner

## Step 1: Wall profiles installation


| Product | W1/W2 (mm) |
|---------|------------|
| 800     | 780 ~ 800  |
| 900     | 880 ~ 900  |
| 1000    | 980 ~ 1000 |

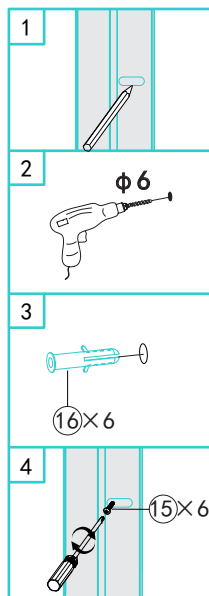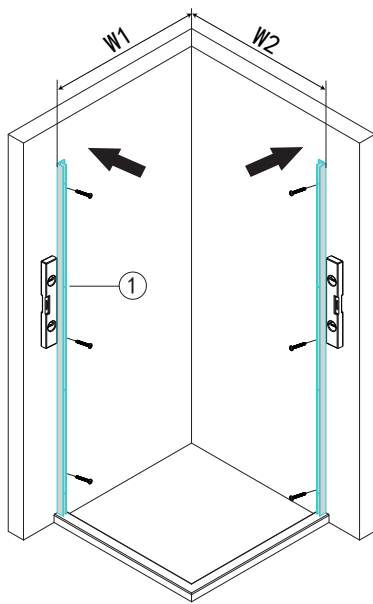


## Step 2: Door panels installation

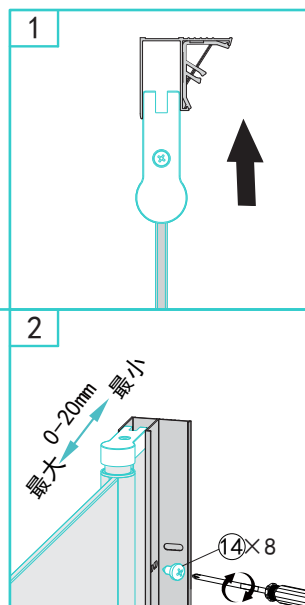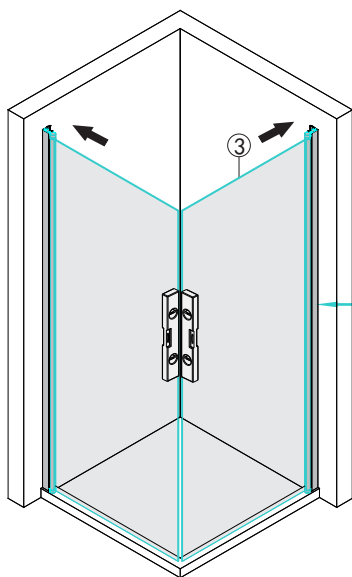



### Step 3: Handle

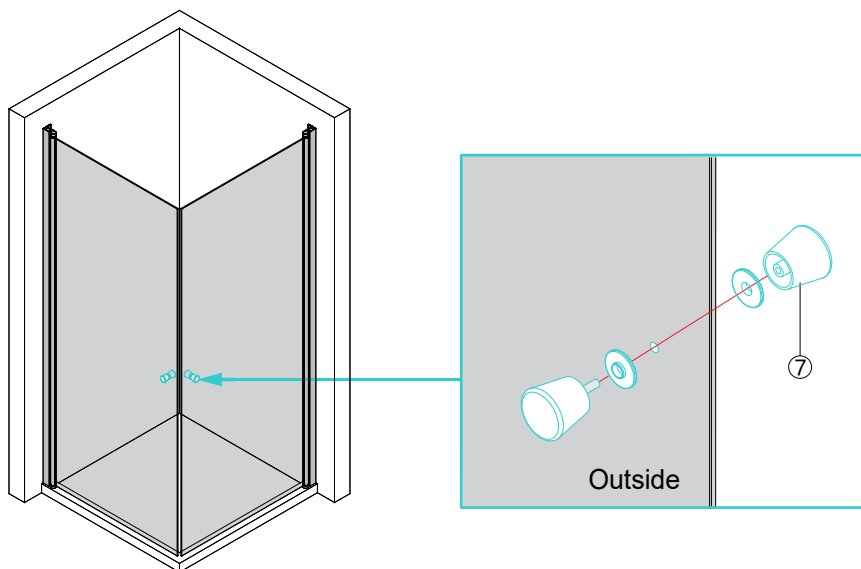



### Step 4: Magnetic profiles and bottom seal strips installation

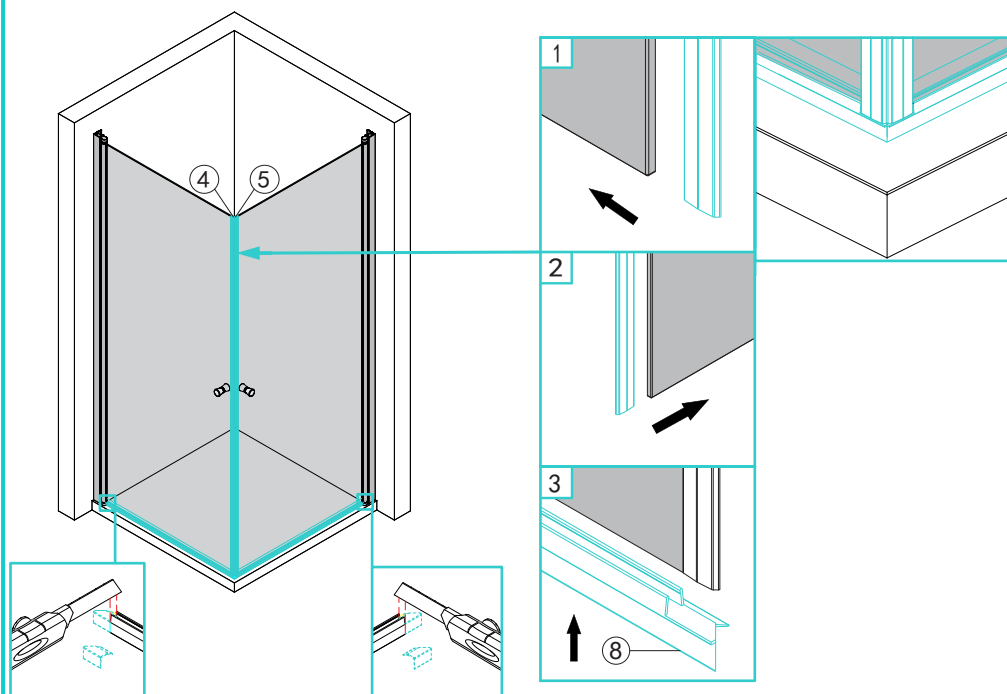

## Step 5: Adjustment

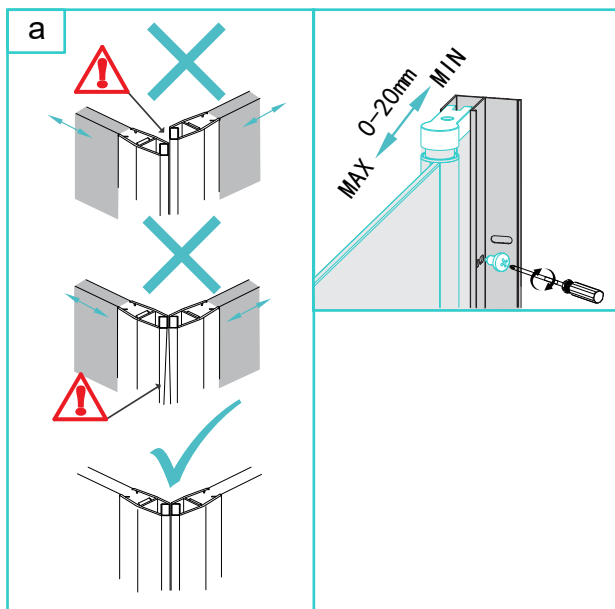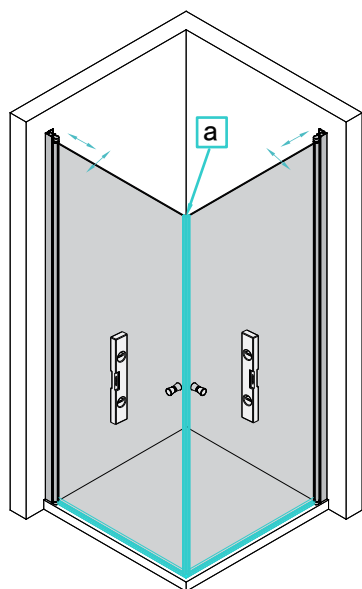


## Step 6: Clip profiles and decoration caps installation

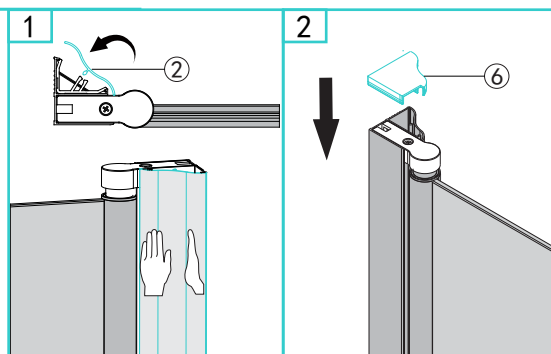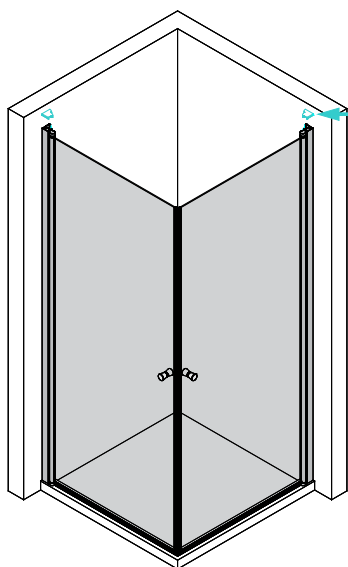


# Step 7: Bottom water fender profiles installation

| A1/A2 | B1/B2 <sub>(mm)</sub> |
|-------|-----------------------|
| 800   | 700                   |
| 900   | 800                   |
| 1000  | 900                   |

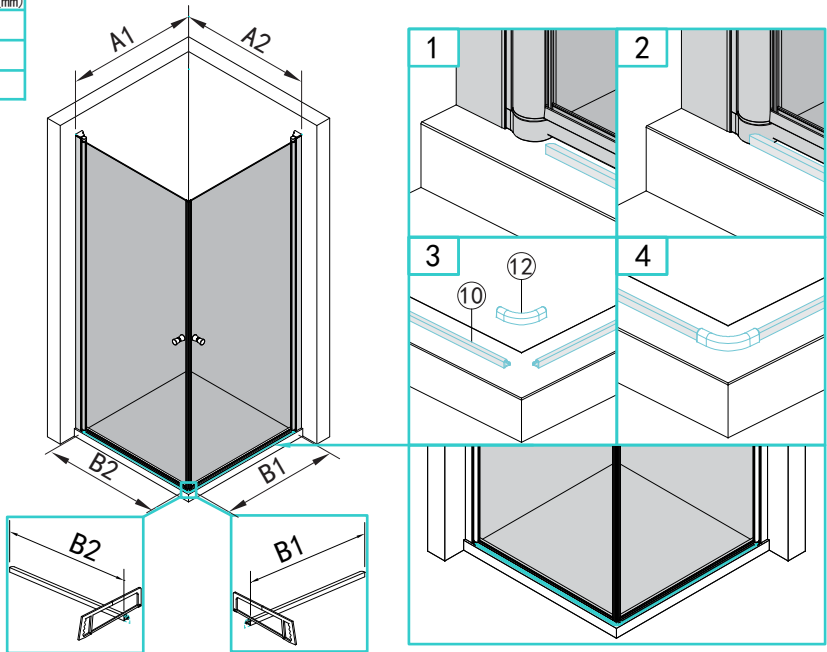



# Step 8: Silicon

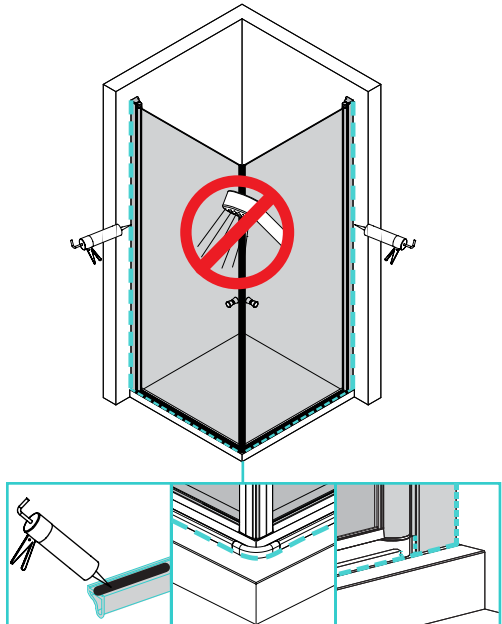

 **DO NOT USE IN 24hrs**


# HD+HD Combine in straight

## Step 1: Wall profiles installation

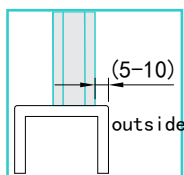
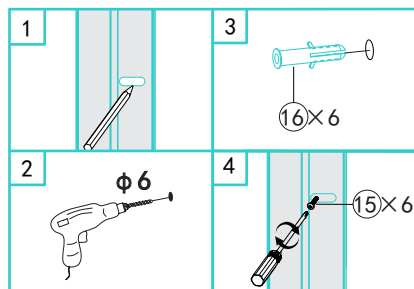


A1+A2 Size Overview



| A1 \ A2 | 800       | 900       | 1000      |
|---------|-----------|-----------|-----------|
| 800     | 1535~1575 | 1635~1675 | 1735~1775 |
| 900     | 1635~1675 | 1735~1775 | 1835~1875 |
| 1000    | 1735~1775 | 1835~1875 | 1935~1975 |

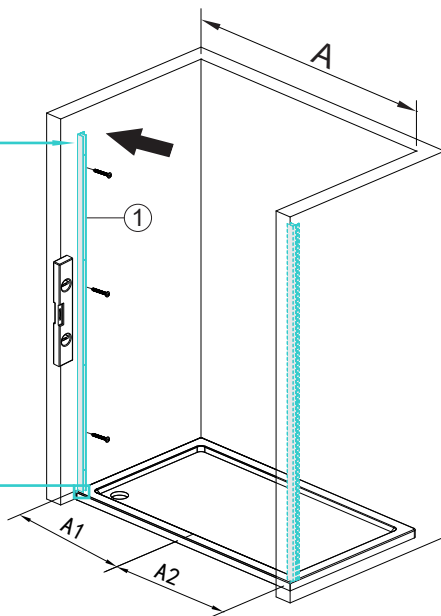








## Step 2: Door panels installation

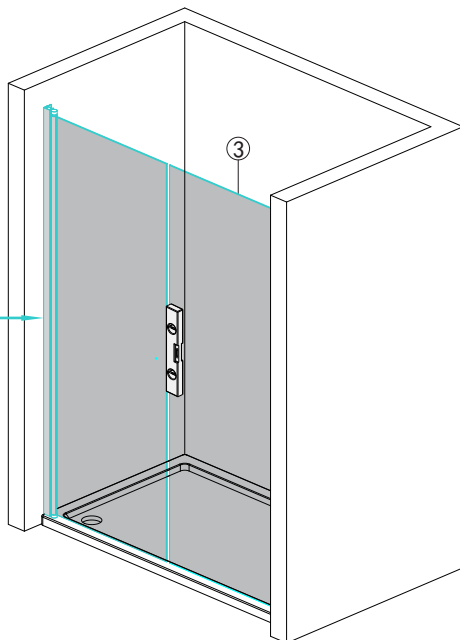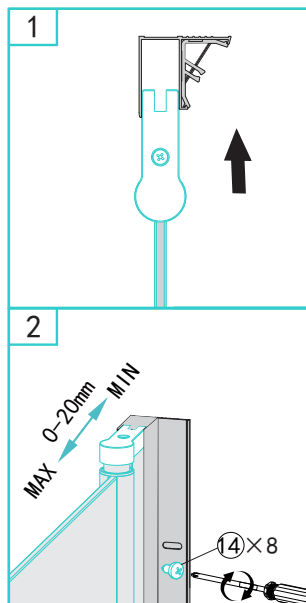


### Step 3: Handle

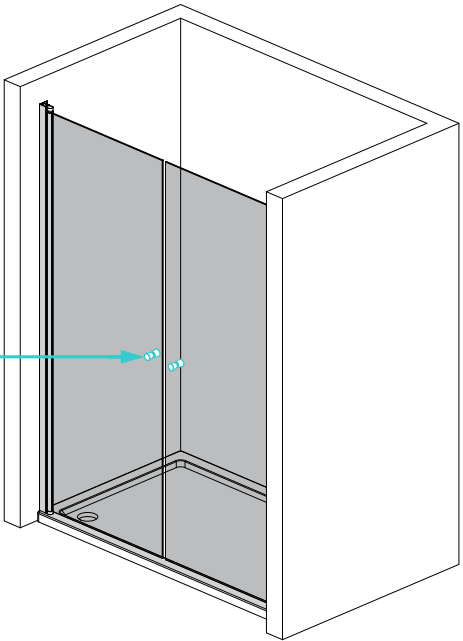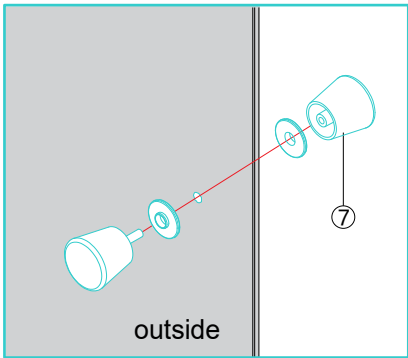


### Step 4: Magnetic strips and bottom seal strips installation

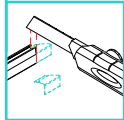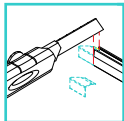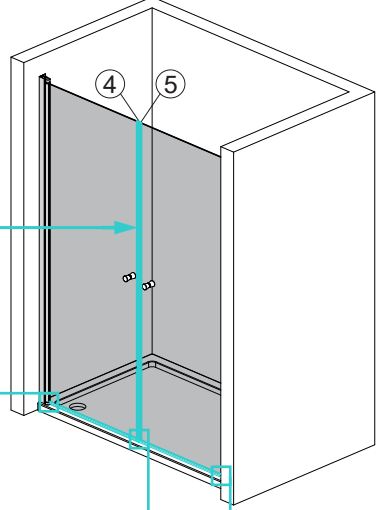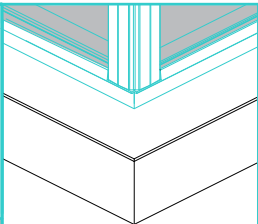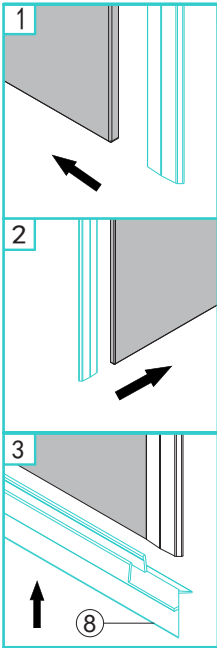


# Step 5: Adjustment

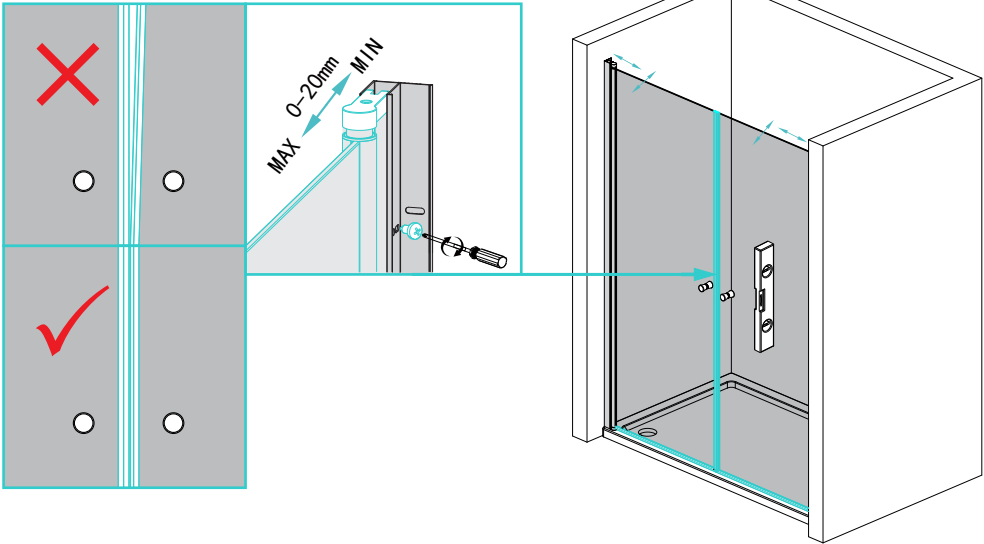

# Step 6: Clip profiles and decoration caps installation

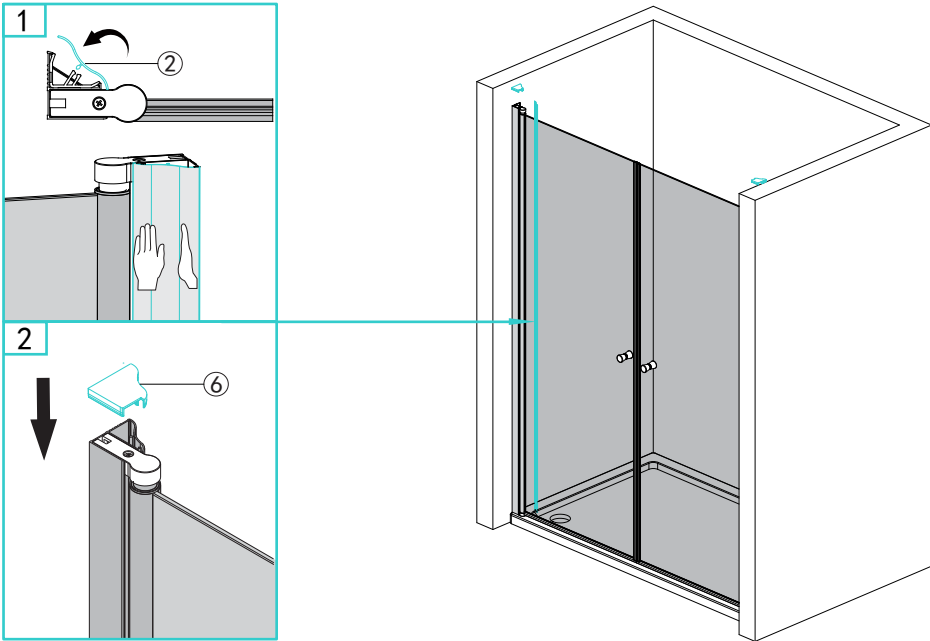

## Step 7: Bottom water fender profiles installation

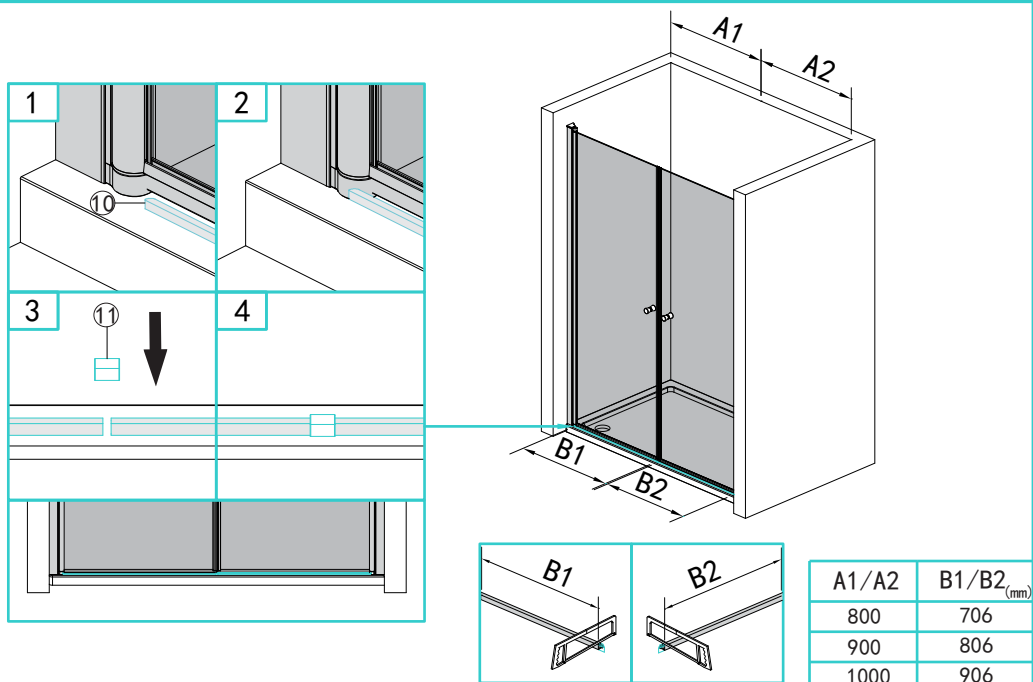

## Step 8: Silicon

