

UK Corner Base Cabinet
DK Hjørneunderskab
NO Hjørneunderskap

FI Kulmakaapi
SE Hörnbänkskåp

N1FPCB900 R1



Important: Installation shall be carried out exactly according to the manufacturer's instructions otherwise a safety risk can occur if incorrectly installed.

Warning: Assess the suitability of the wall/ceiling to ensure that the fastening devices will withstand the forces generated.

Viktig: Installationen skal udføres fuldstændig i overensstemmelse med producentens instruktioner. Ellers kan der opstå en sikkerhedsrisiko ved ukorrekt installation.

Advarsel: Vurder væggen/loftets egnethed for at sikre, at fastgørelsesenhederne kan modstå de kræfter, der genereres.

Tärkeää: Asennus on tehtävä tarkalleen valmistajan ohjeiden mukaan, sillä väärin tehty asennus voi aiheuttaa turvallisuusrisikin.



Varoitus: Arvioi seinän/katon sopivuus varmistaaksesi, että kiinnitysvälineet kestävät syntyneet voimat.

Viktig: Installasjonen må utføres nøyaktig som beskrevet i produsentens instruksjoner, hvis ikke kan det sette sikkerheten i fare.

Advarsel: Vurder om veggen/taket er egnet for å sikre at festeenheterne vil kunne tåle påkjenningen de vil bli utsatt for.

Viktig: Installationen måste utföras exakt enligt tillverkarens anvisningar annars kan en säkerhetsrisk uppstå om installationen är felaktigt utförd.

Varning: Utvärdera väggen/takets lämplighet för att säkerställa att fästordningarna kommer att motstå de krafter som uppstår.

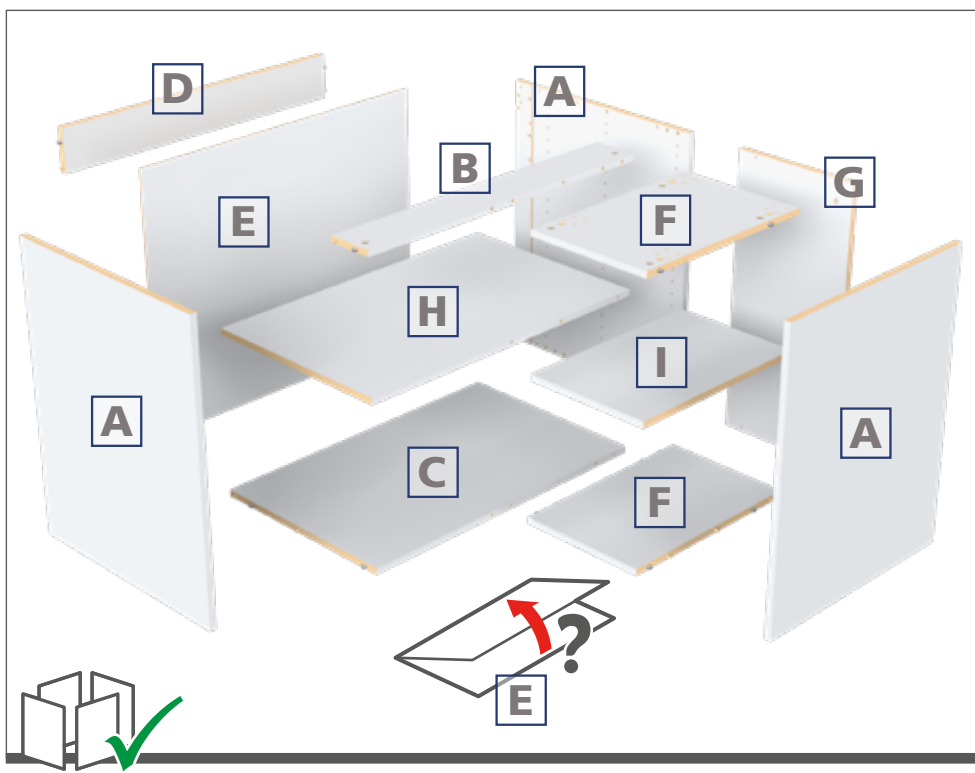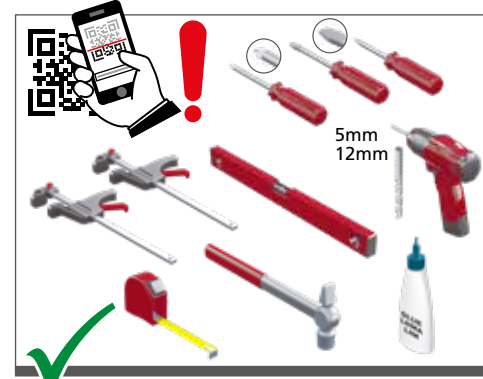

1

Diagram illustrating the assembly of the frame structure. The components are labeled A, B, C, and D. Panel A is the base, C is the left side, D is the back, and B is the right side. The assembly is shown in a 3D perspective view. A callout shows a close-up of the corner joint with four screws. A legend indicates the correct screw orientation with green checkmarks and incorrect orientation with a red X.

2


Warning: Two people are required to lift the box correctly. The correct lifting technique is shown with a green checkmark, and the incorrect technique is shown with a red X.


BLAUW LIME LIME

E

4

'A' = 'B' = 

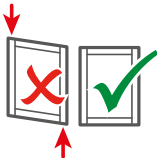

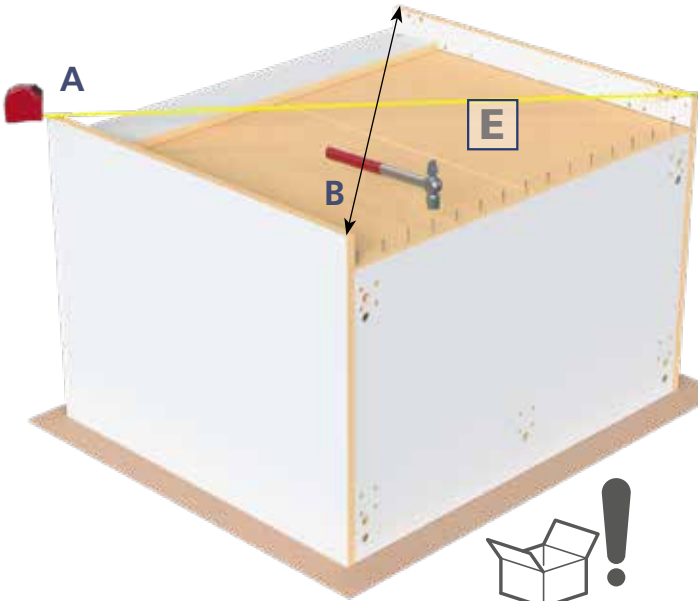



 A034 x15


5





12mm
x2

6

'A' = 'B' = 

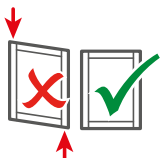

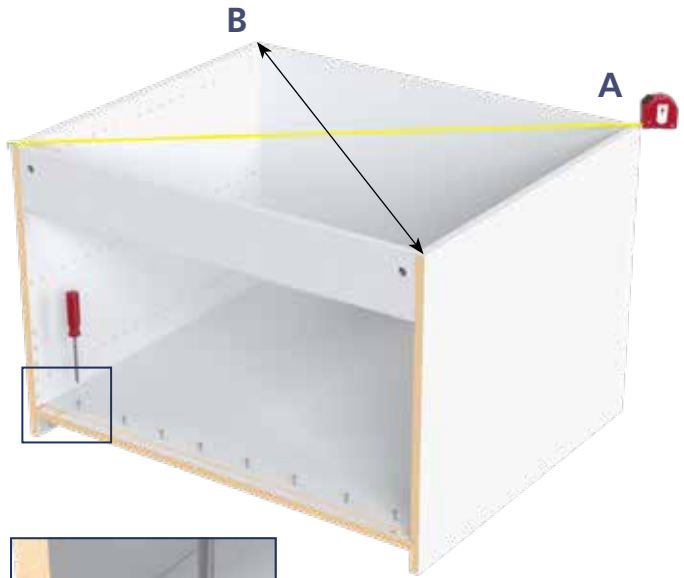

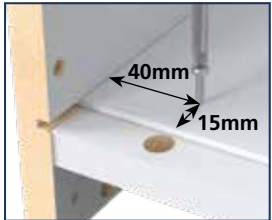

 A048 x8

7

Diagram illustrating the assembly of the back panel (F) to the cabinet. The back panel is shown being attached to the rear of the cabinet structure. A close-up inset shows the panel being secured with screws. A legend indicates that 4 screws (x4) are required, and the correct orientation for the screws is shown with green checkmarks, while incorrect orientations are marked with red X's.

8

Diagram illustrating the assembly of the top panel (A) onto the side panel. The top panel is shown being placed onto the side panel, which is already attached to the main cabinet structure. The top panel is labeled 'A'.


Inset showing the connection point between the top panel and the side panel, highlighting the alignment of the panels and the use of screws.

Inset showing the correct and incorrect ways to attach the top panel. The correct way is shown with a green checkmark and the text 'x4', indicating that 4 screws should be used. The incorrect way is shown with a red X, indicating that 2 screws should not be used.


9









10

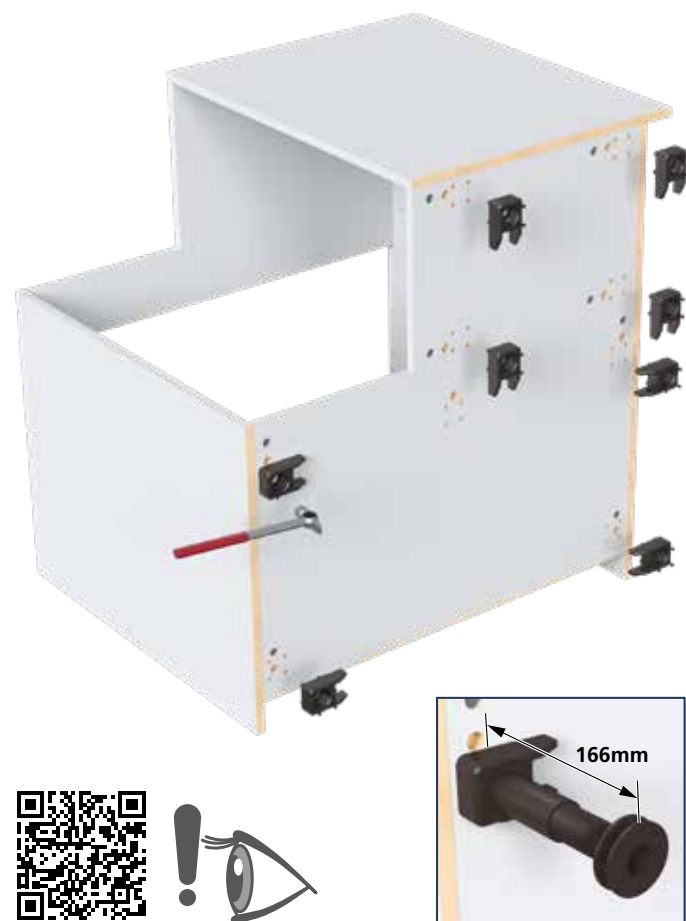

11

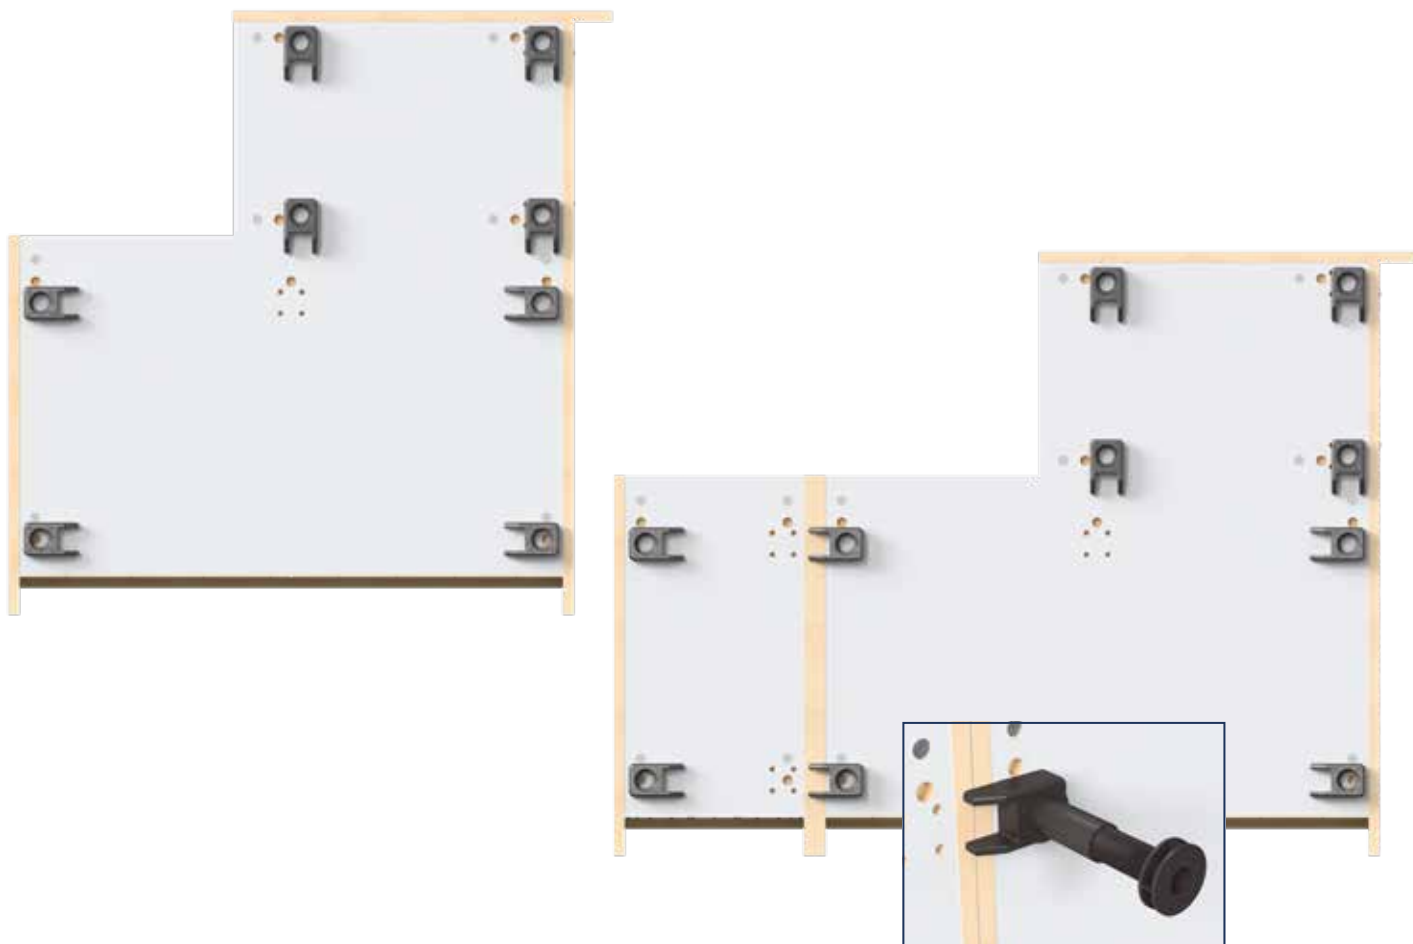

12

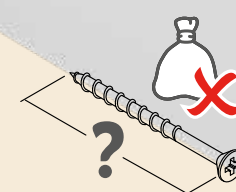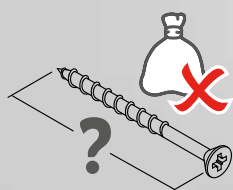



13




14




15

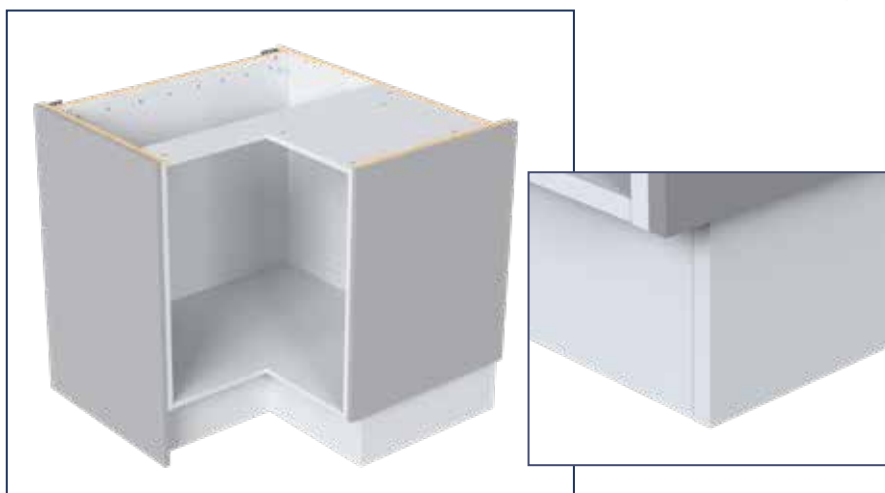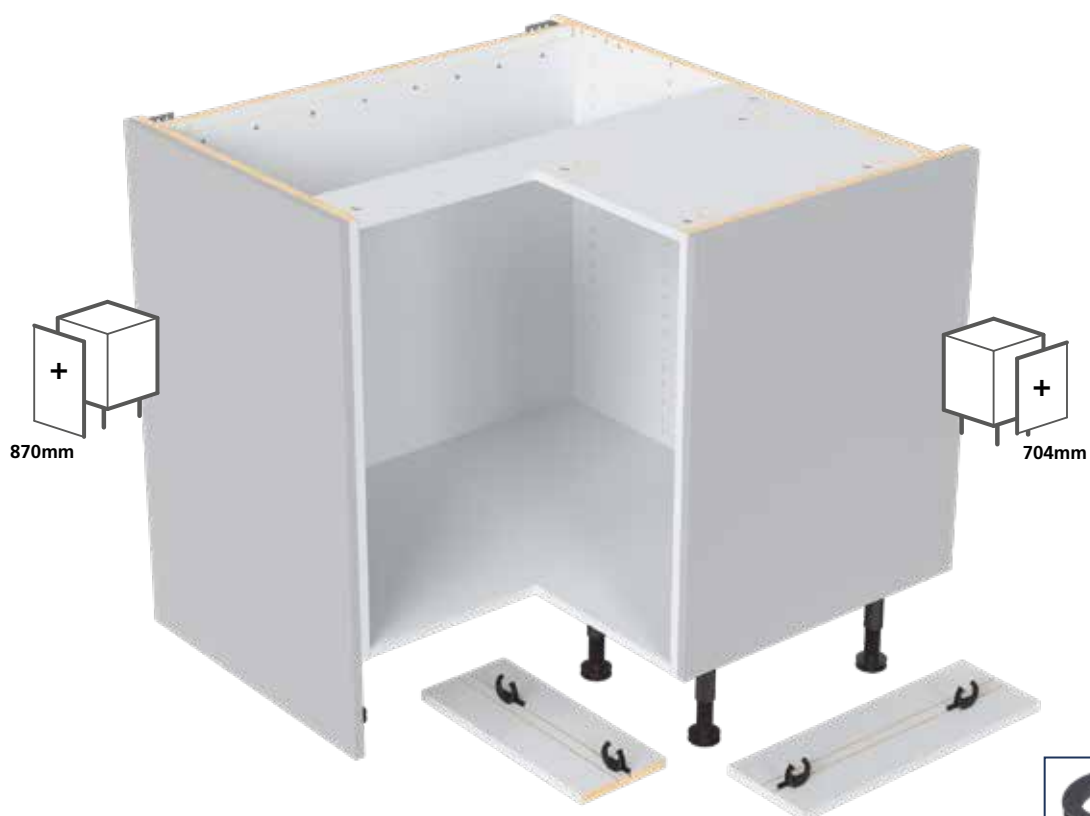

16

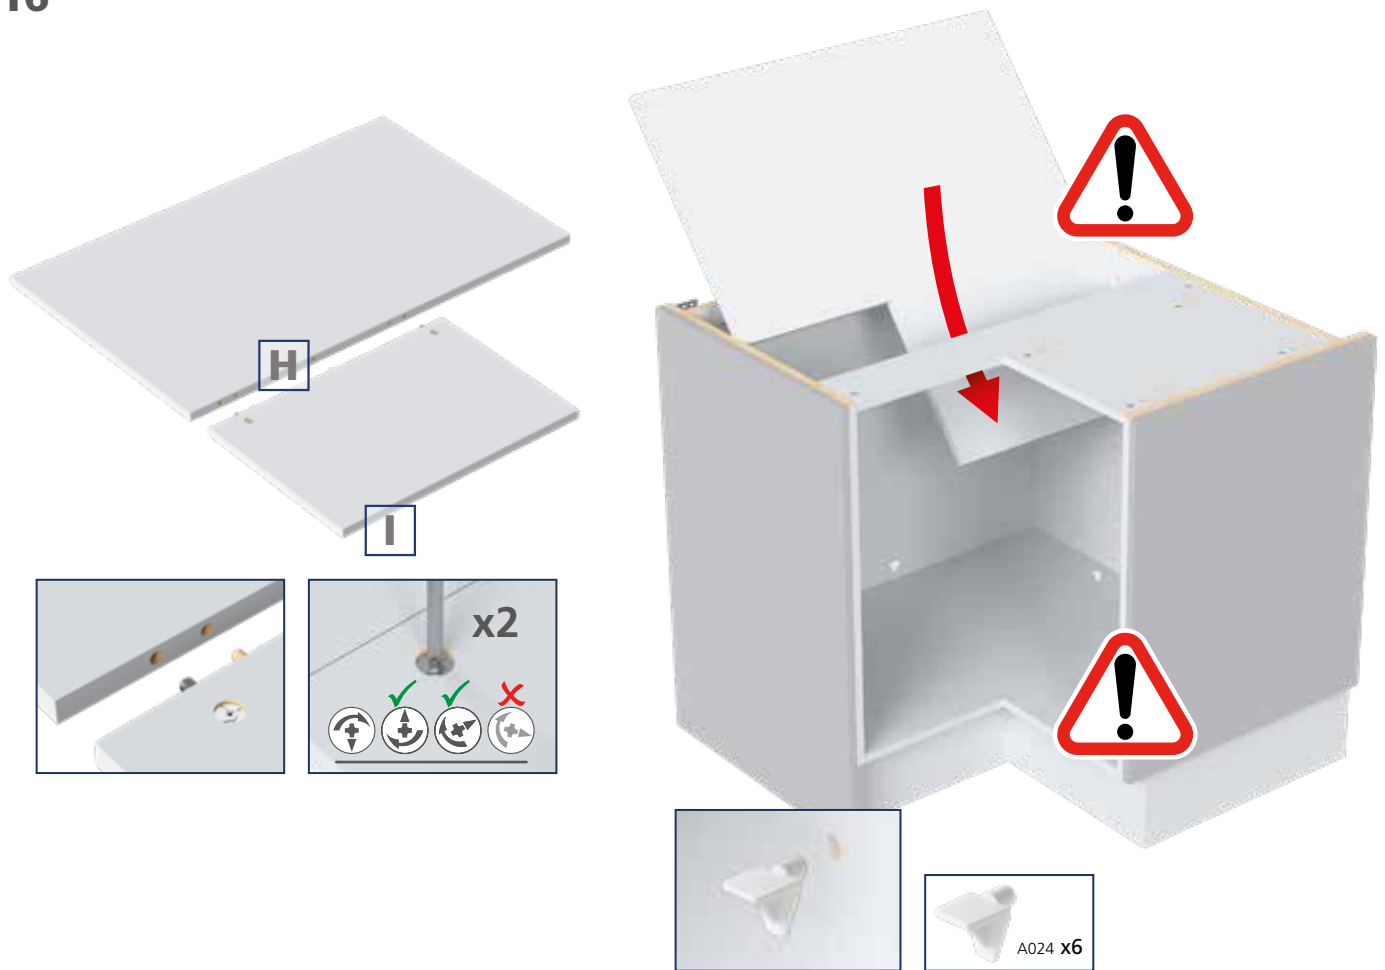

17

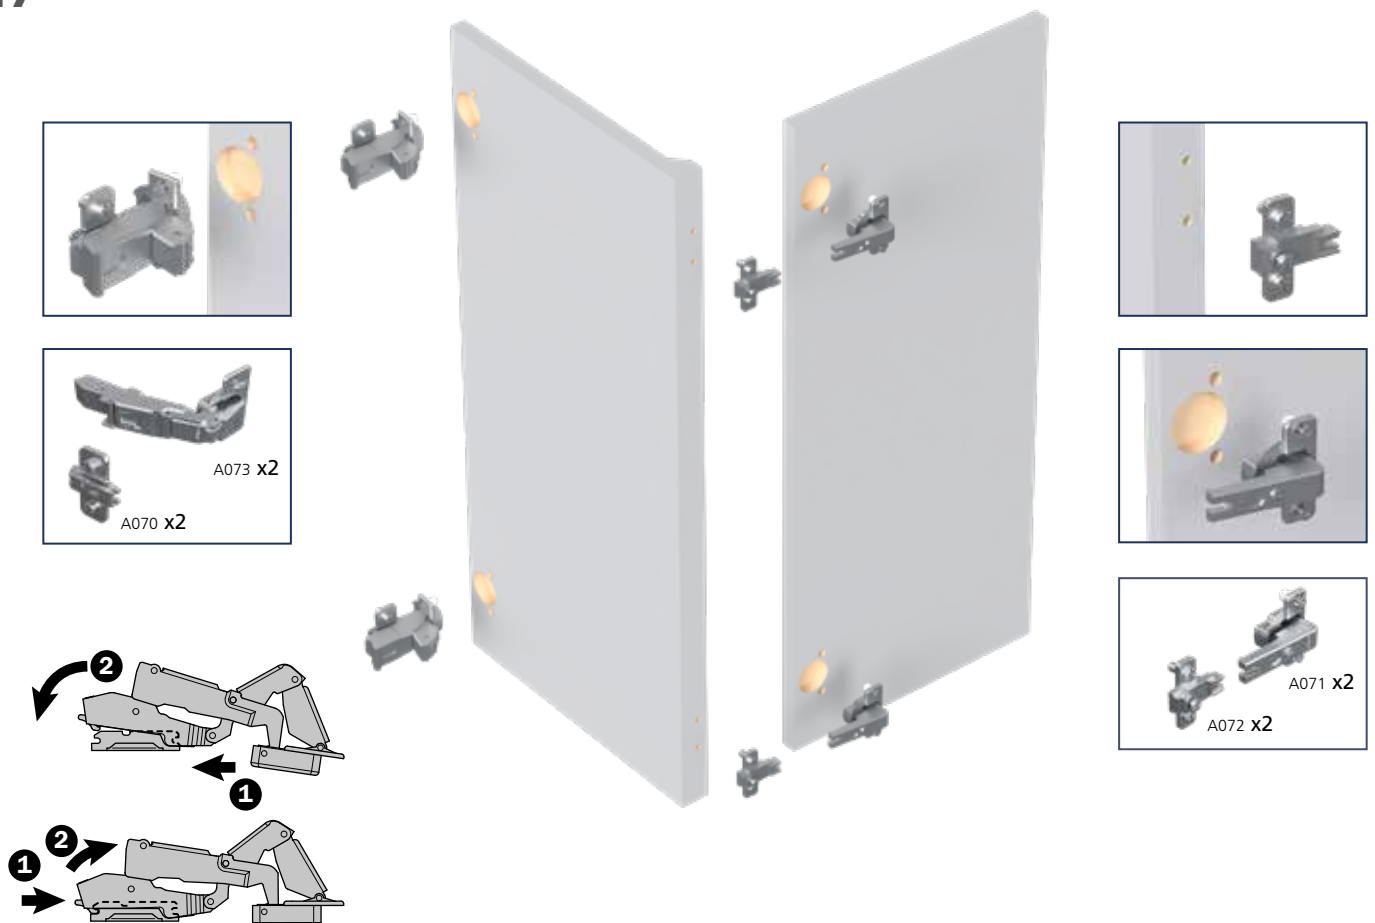

18

