

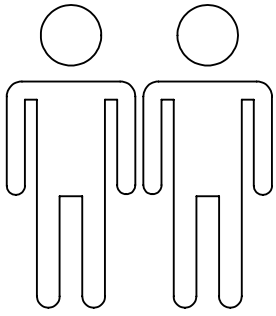



Recommended tools for assembly

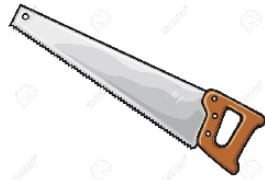









3mm


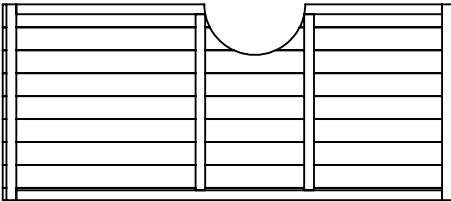
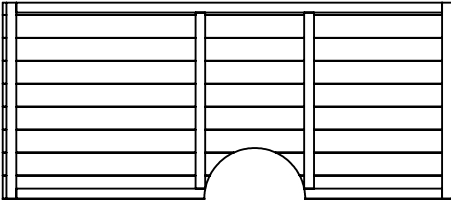
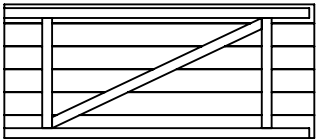
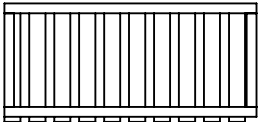
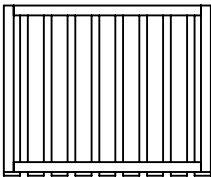
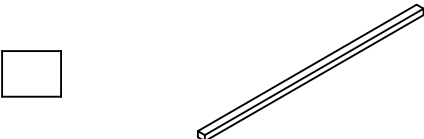

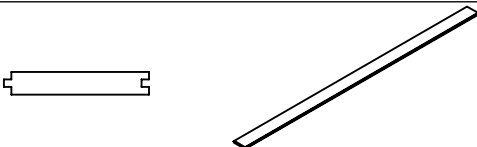


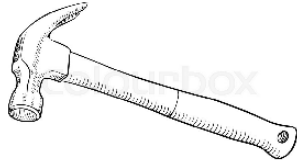

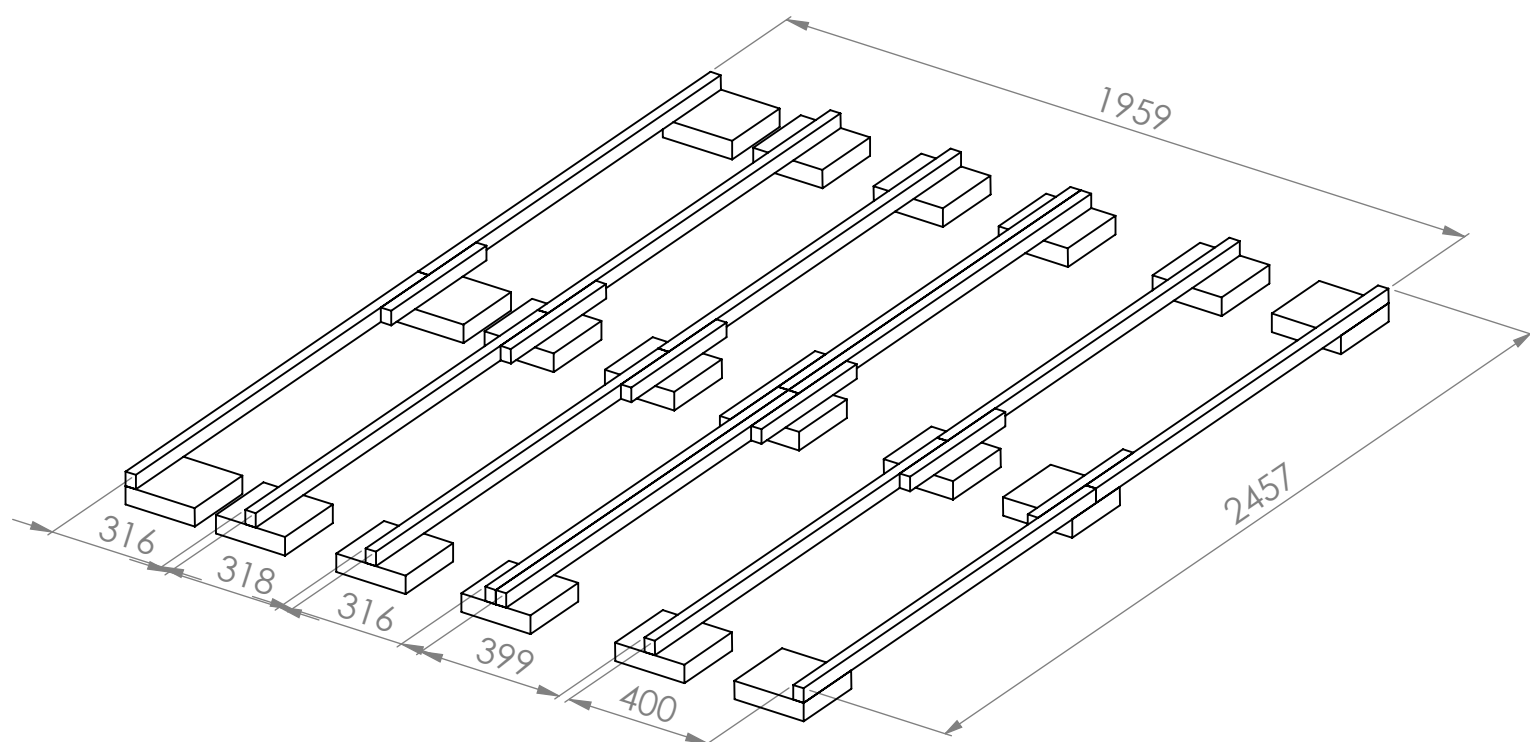









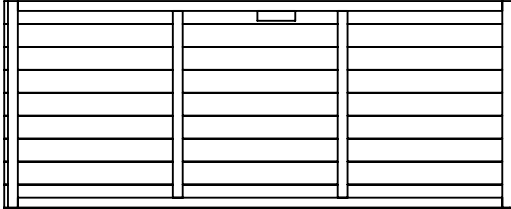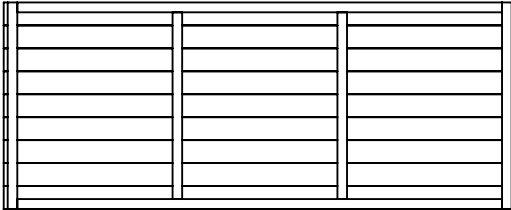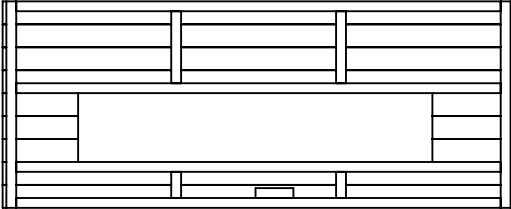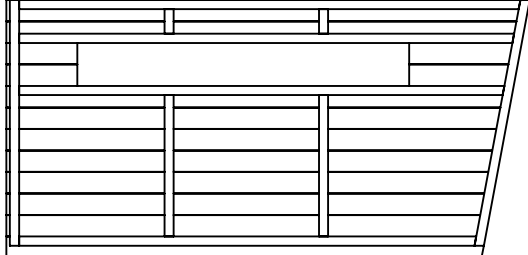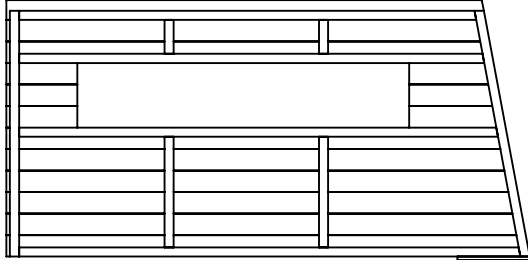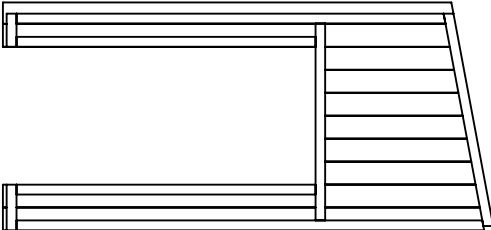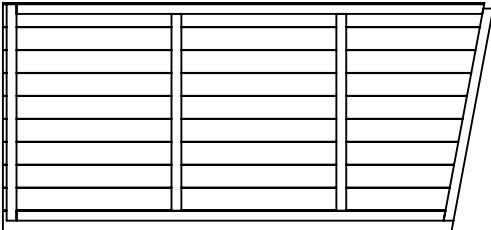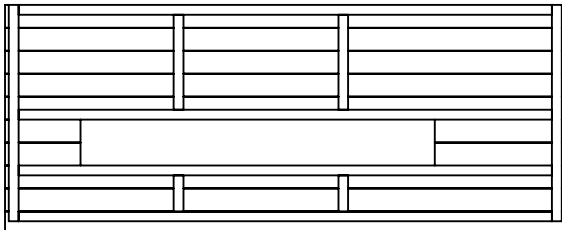












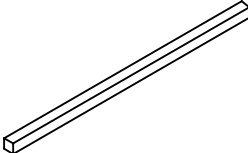


Foundation plan






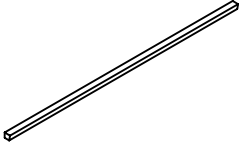







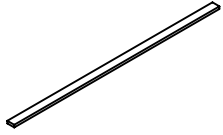

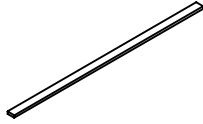

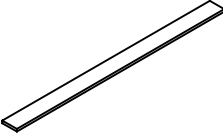

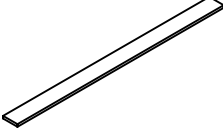





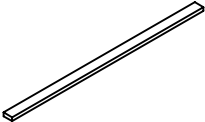
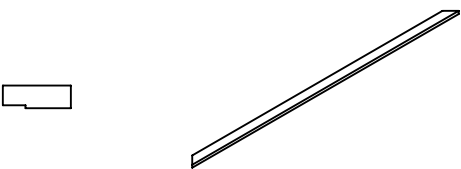








Plintar är ej inkluderade i byggsatsen
Grunnster er ikke inkludert i byggesettet
Grundsten er ikke inkluderet i byggesættet
Foundation stones are not included in the building kit
Perustuksen kivet eivät kuulu rakennussarjan toimitukseen

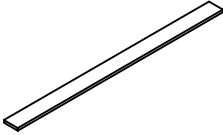

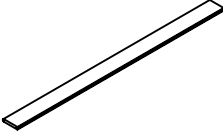

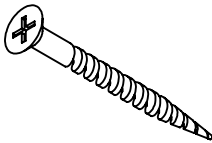
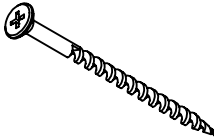
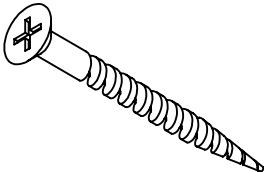
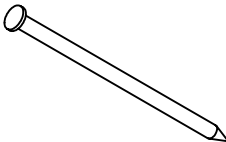
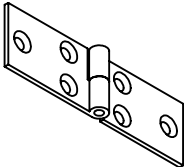
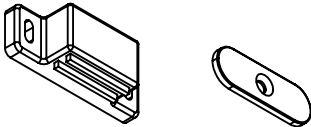
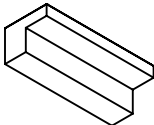
| | | | |
|------|---|--------------|---|
| BW 1 |  | 819x2015x45 | 1 |
| BW 2 |  | 819x2015x45 | 1 |
| BW 3 |  | 819x2015x45 | 1 |
| SW 1 |  | 1085x2215x45 | 1 |
| SW 2 |  | 1085x2215x45 | 1 |
| SW 3 |  | 904x1945x45 | 1 |
| SW 4 |  | 904x1945x45 | 1 |
| FW 1 |  | 904x2215x45 | 1 |

| | | | |
|------|---|-------------|----|
| FW 2 |  | 306x1538x45 | 1 |
| FW 3 |  | 776x1782x45 | 1 |
| FW 4 |  | 776x1782x45 | 1 |
| DOOR |  | 530x1230x45 | 1 |
| RAIL |  | 470x1000x45 | 1 |
| RAIL |  | 675x820x45 | 1 |
| 1.1 |  | 30x39x1228 | 14 |
| 1.2 |  | 30x39x400 | 7 |
| 2.1 |  | 15x95x1959 | 17 |
| 2.2 |  | 15x95x1070 | 10 |
| 2.3 |  | 15x95x874 | 9 |



| | | | |
|-----|---|------------|----|
| 3.1 |   | 28x72x1000 | 6 |
| 3.2 |   | 28x72x1607 | 1 |
| 3.3 |   | 28x72x788 | 1 |
| 3.4 |   | 28x72x1567 | 1 |
| 3.5 |   | 28x72x858 | 1 |
| 3.6 |   | 19x95x1008 | 27 |
| 4.1 |   | 28x72x1091 | 1 |
| 4.2 |   | 28x72x1091 | 1 |
| 4.3 |   | 28x72x453 | 3 |
| 4.4 |   | 39x60x985 | 1 |
| 4.5 |   | 15x95x955 | 1 |
| 5.1 |   | 68x68x1776 | 1 |
| 5.2 |   | 15x95x820 | 1 |

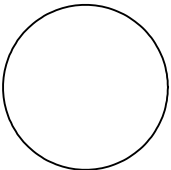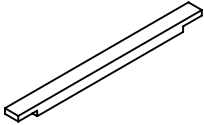

| | | | |
|-----|---|------------|----|
| 6.1 |   | 15x95x1343 | 5 |
| 6.2 |   | 15x95x1129 | 1 |
| 6.3 |   | 30x37x1490 | 1 |
| 6.4 |   | 30x37x888 | 1 |
| 7.1 |   | 15x95x1350 | 30 |
| 7.2 |   | 15x95x1020 | 27 |
| 7.3 |   | 15x45x1343 | 4 |
| 7.4 |   | 15x45x1236 | 2 |
| 7.5 |   | 15x95x1358 | 2 |
| 7.6 |   | 15x95x1350 | 2 |
| 7.7 |   | 15x95x1026 | 2 |
| 7.8 |   | 19x45x150 | 1 |

| | | | |
|-----|---|------------|---|
| 8.1 |  | 15x45x1495 | 8 |
| 8.2 |  | 15x45x363 | 4 |
| 8.3 |  | 15x45x272 | 4 |
| 8.4 |  | 2x299x1431 | 2 |
| 8.5 |  | 2x208x1431 | 2 |
| 8.6 |  | 10x480 | 1 |
| 8.7 |  | 2x430 | 1 |
| 8.8 |  | 18x25x343 | 4 |
| 8.9 |  | 18x25x252 | 4 |


| | | |
|-------------|---|-----|
| 3x15 |  | 3 |
| 3x25 |  | 76 |
| 3,5x30 |  | 56 |
| 3,5x40 |  | 72 |
| 4x50 |  | 43 |
| 4x60 |  | 150 |
| 4,5x70 |  | 7 |
| 2x40 |  | 674 |
| Hinge |  | 2 |
| Magnet |  | 1 |
| Door handle |  | 1 |

NB Drill the pilot holes for the screws

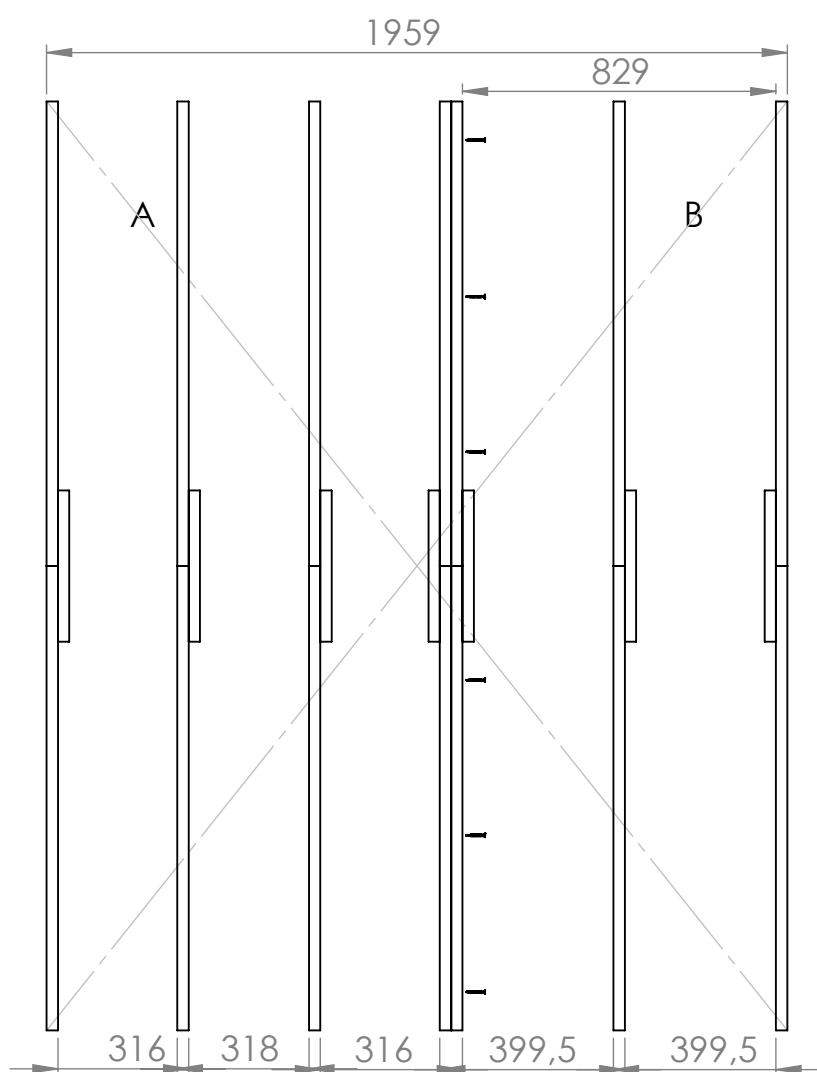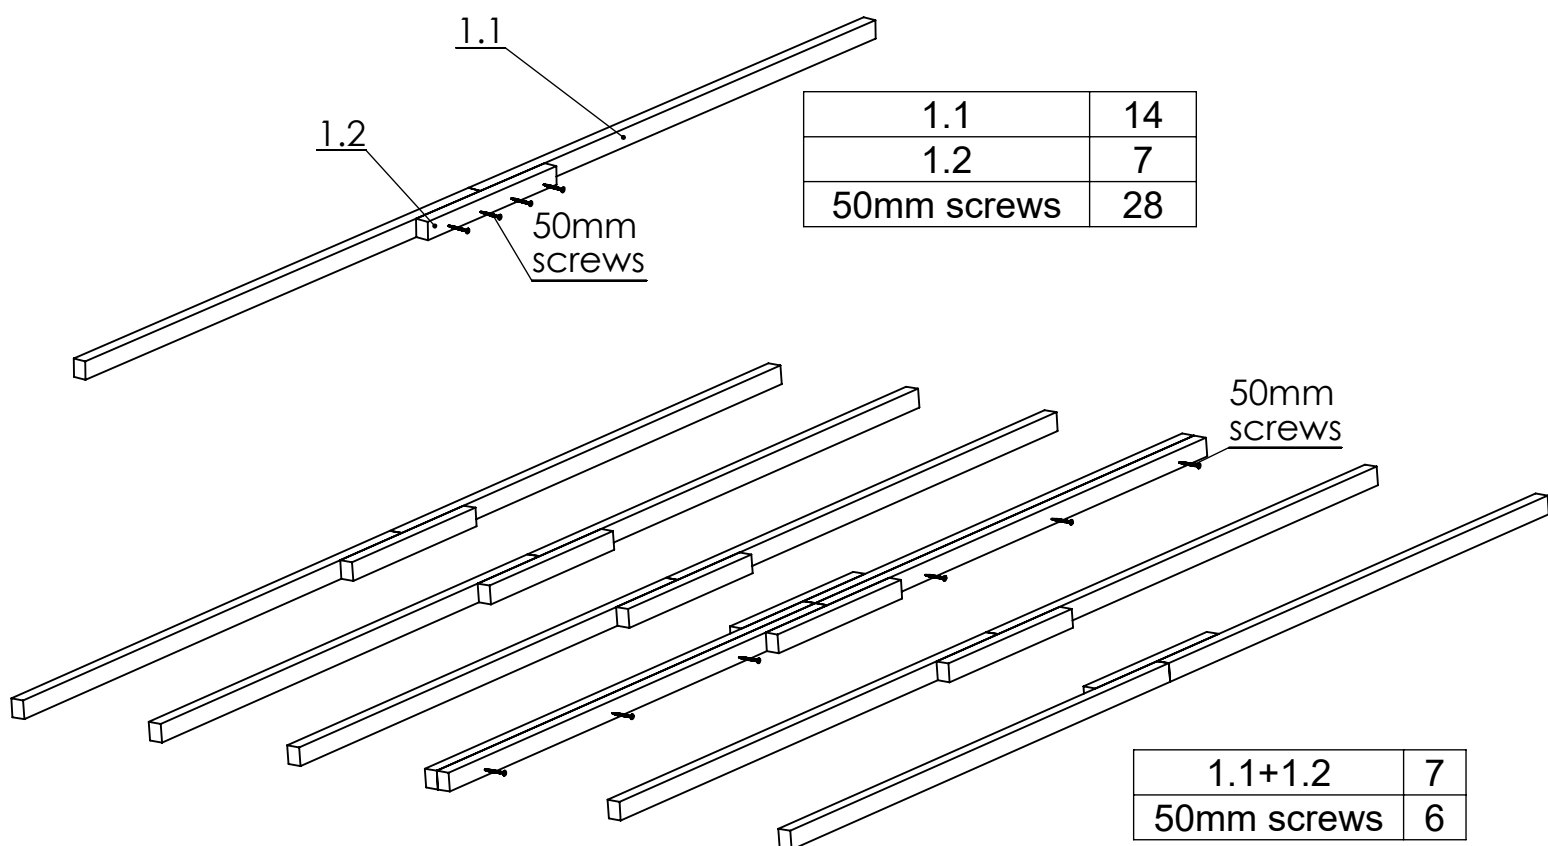


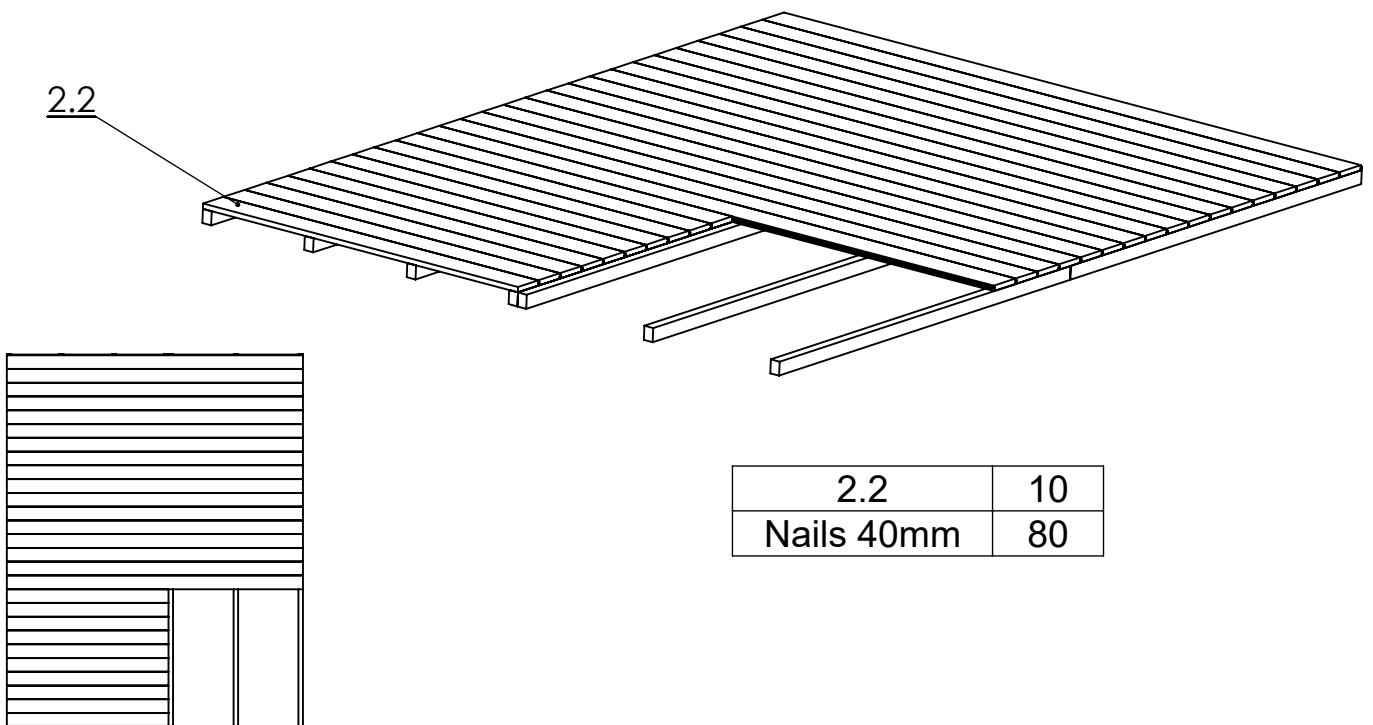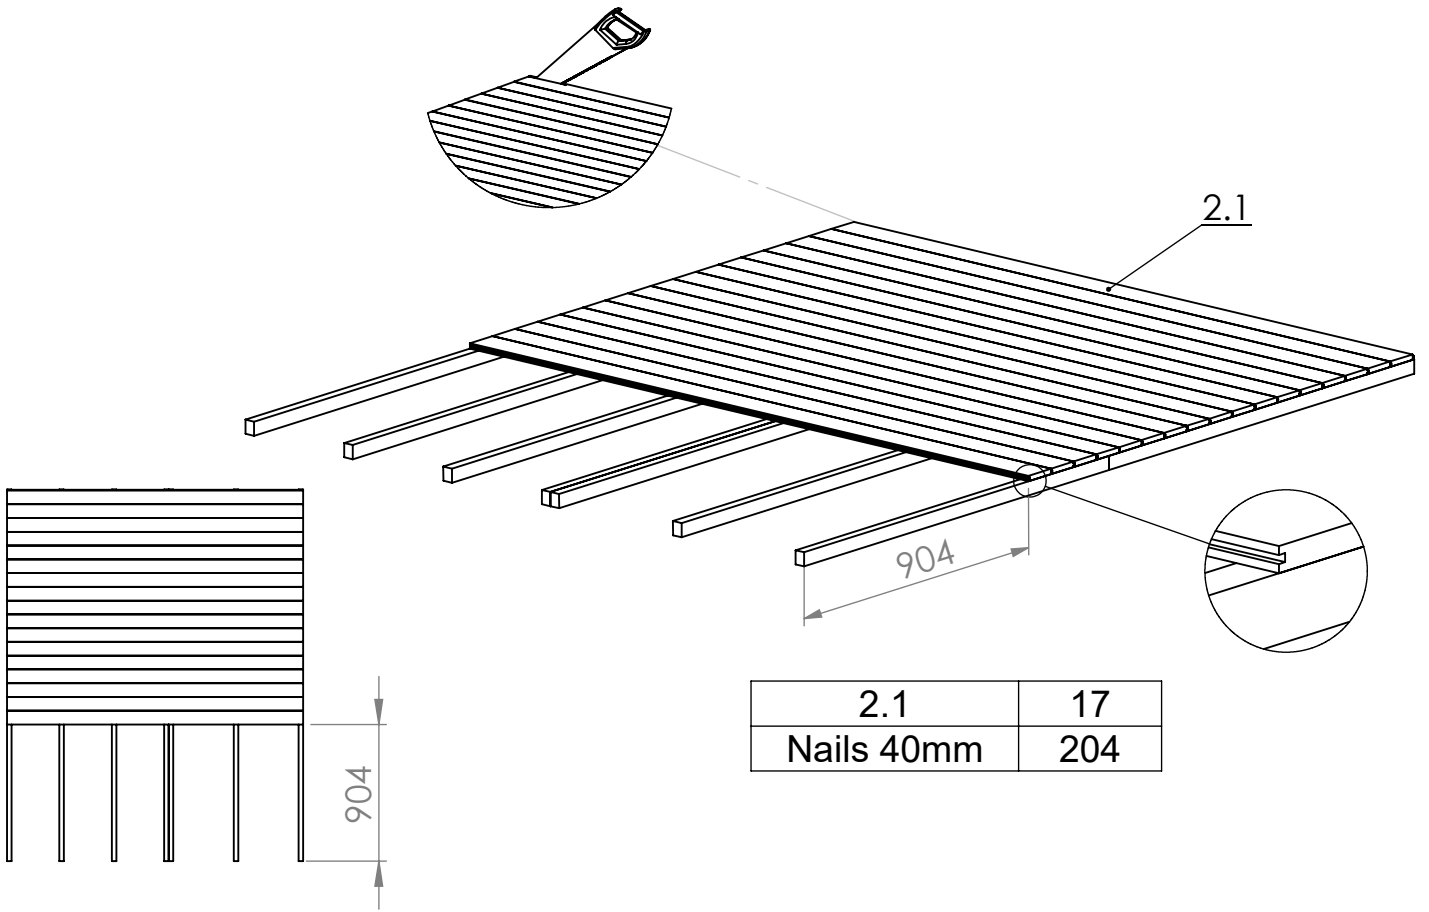

NB Drill the pilot holes
for the screws

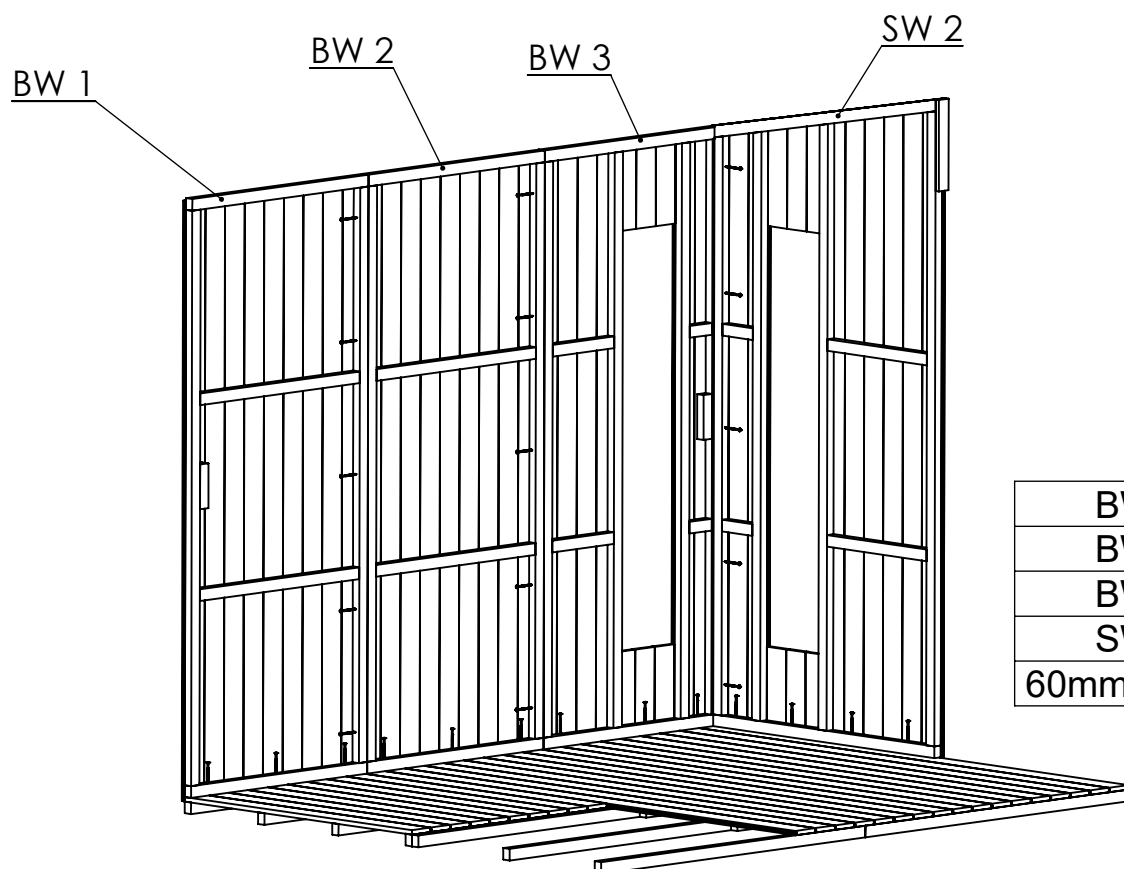



| | |
|-------------|----|
| BW 1 | 1 |
| BW 2 | 1 |
| BW 3 | 1 |
| SW 2 | 1 |
| 60mm screws | 28 |

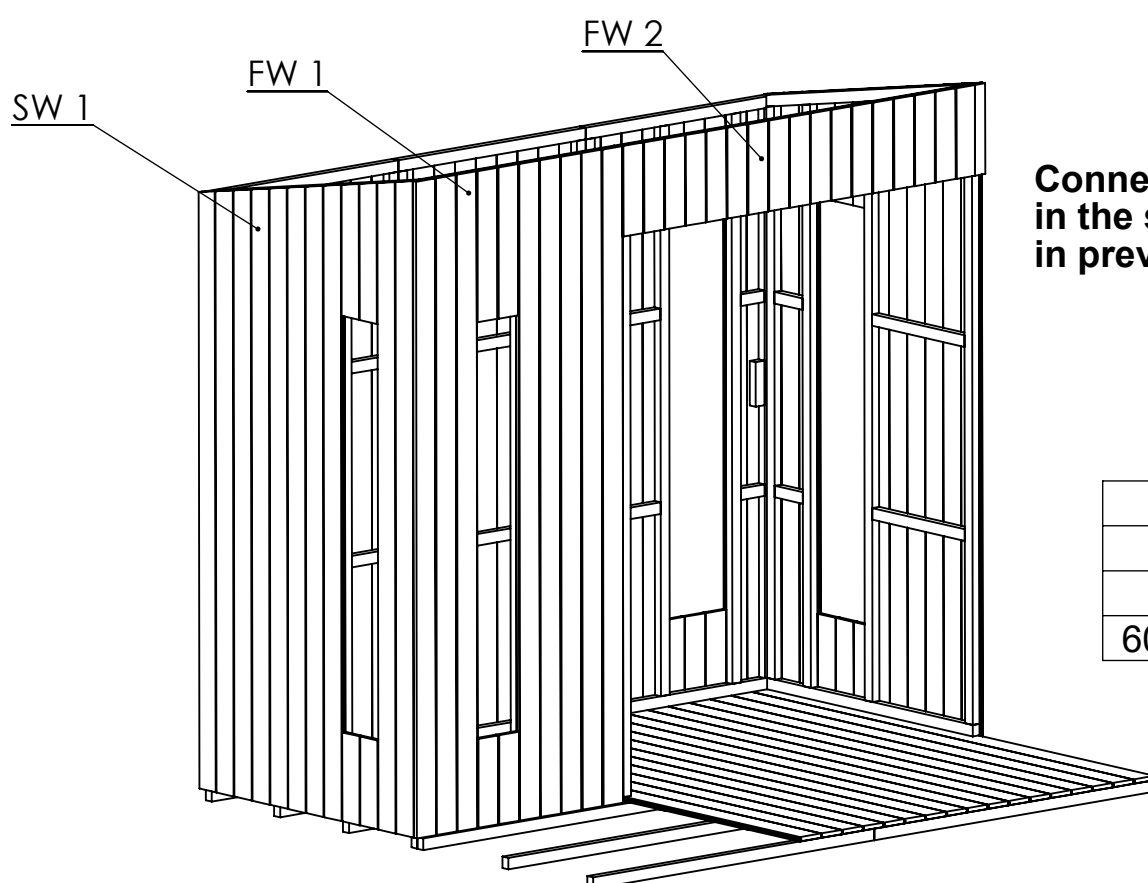

**Connect the panels
in the same way, as
in previous assembly.**


| | |
|-------------|----|
| SW 1 | 1 |
| FW 1 | 1 |
| FW2 | 1 |
| 60mm screws | 21 |

NB Drill the pilot holes
for the screws

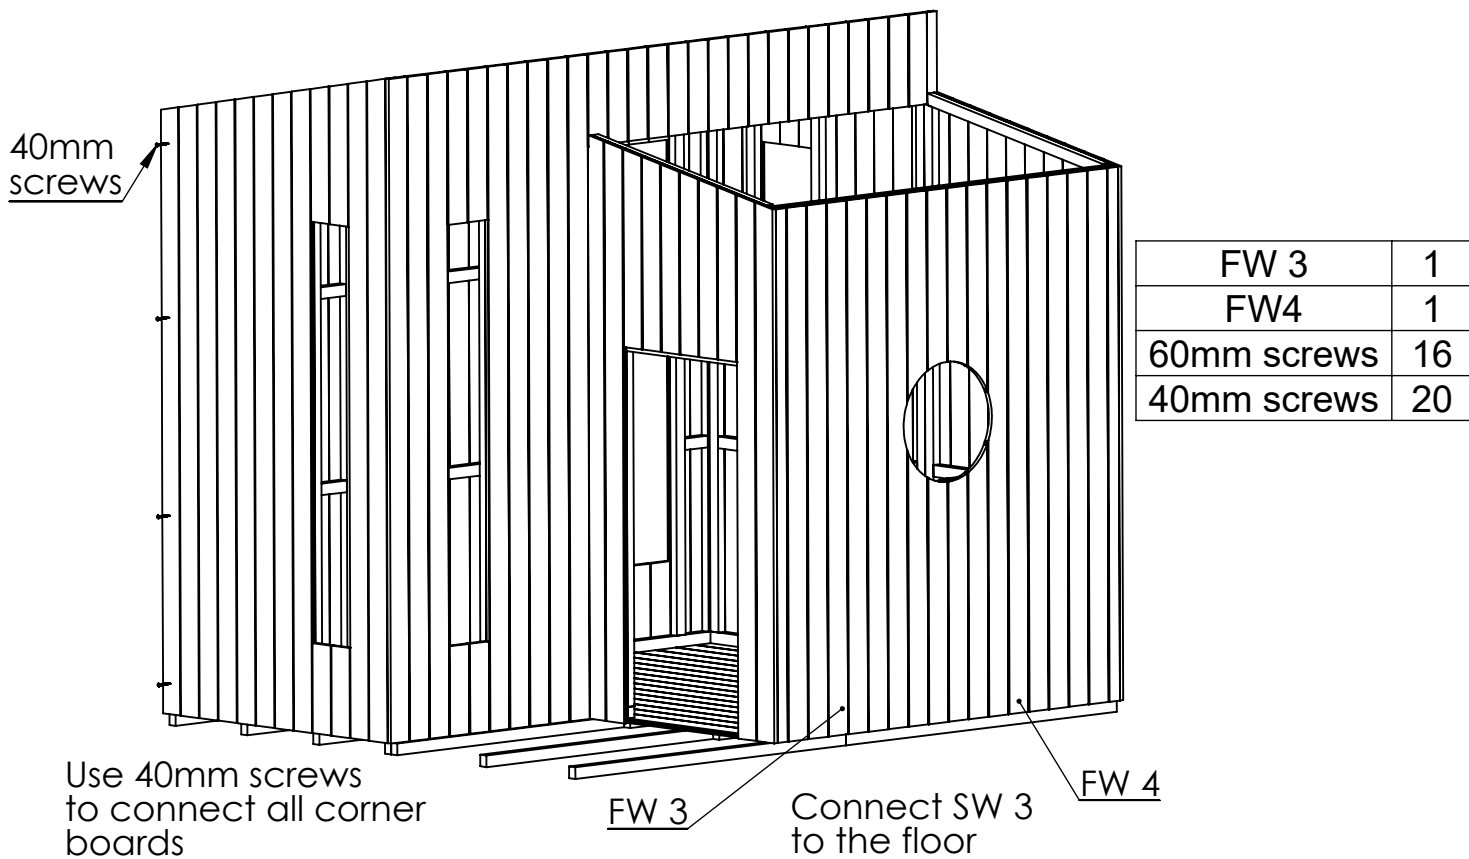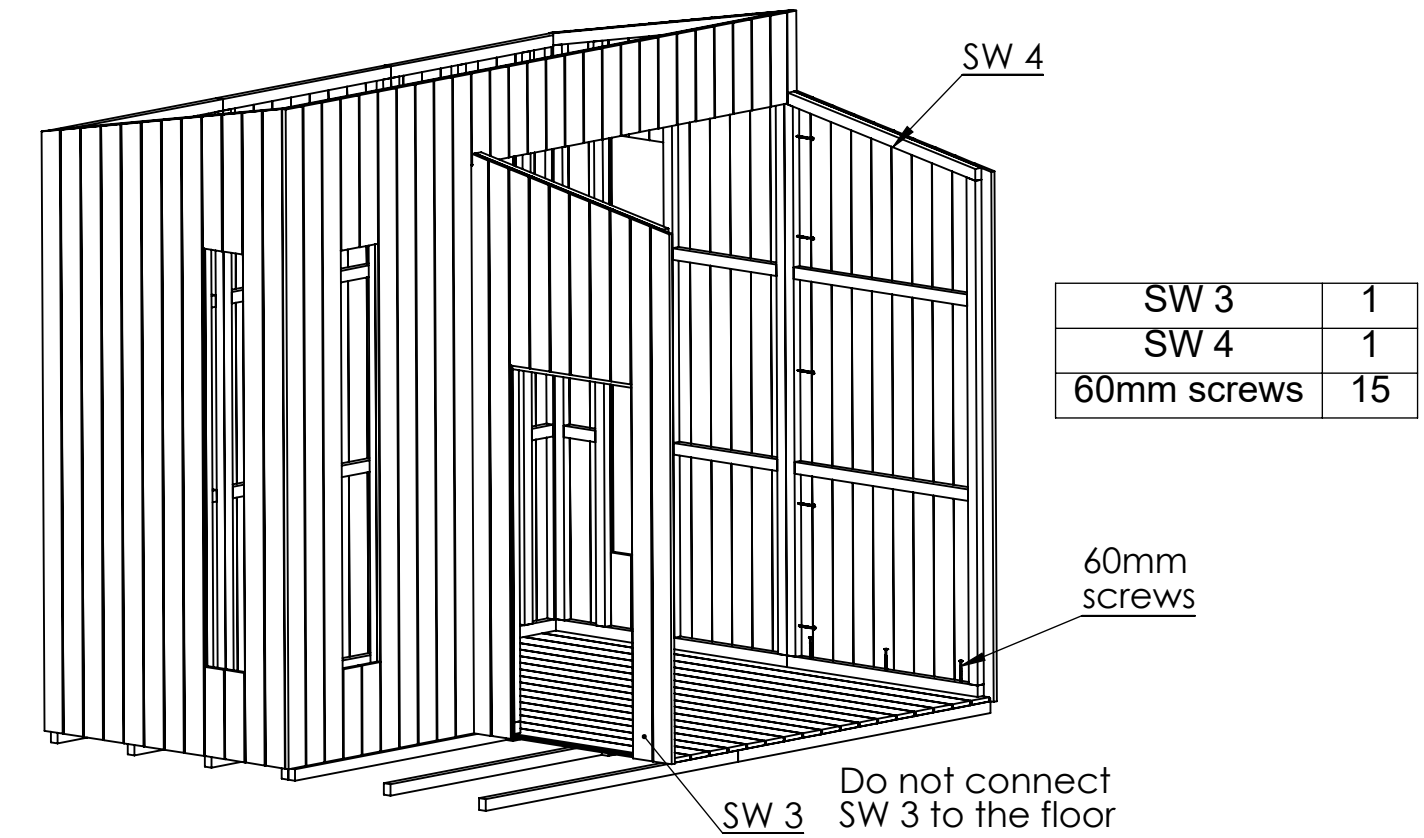


NB Drill the pilot holes
for the screws


Start the loft
assembly when
all wall panels
are connected.

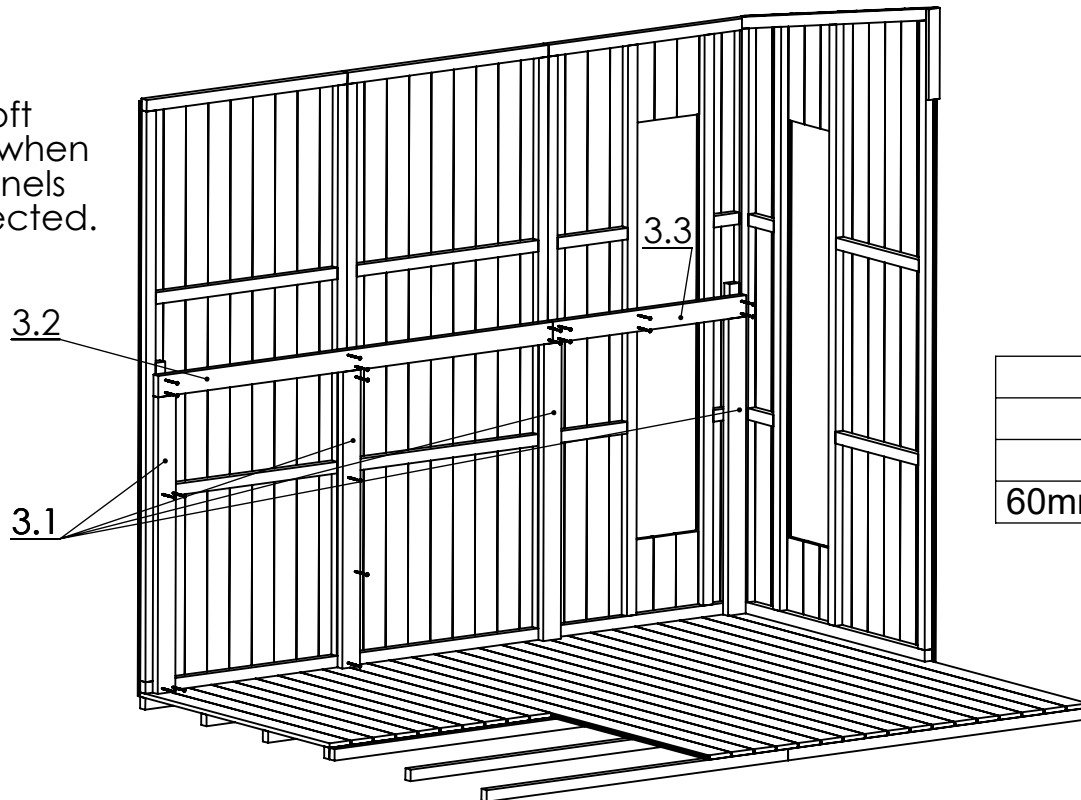

| | |
|-------------|----|
| 3.1 | 4 |
| 3.2 | 1 |
| 3.3 | 1 |
| 60mm screws | 28 |

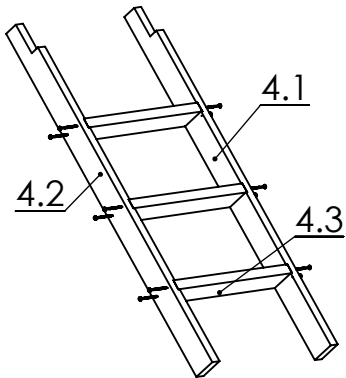


| | |
|-------------|----|
| 4.1 | 1 |
| 4.2 | 1 |
| 4.3 | 3 |
| 60mm screws | 12 |


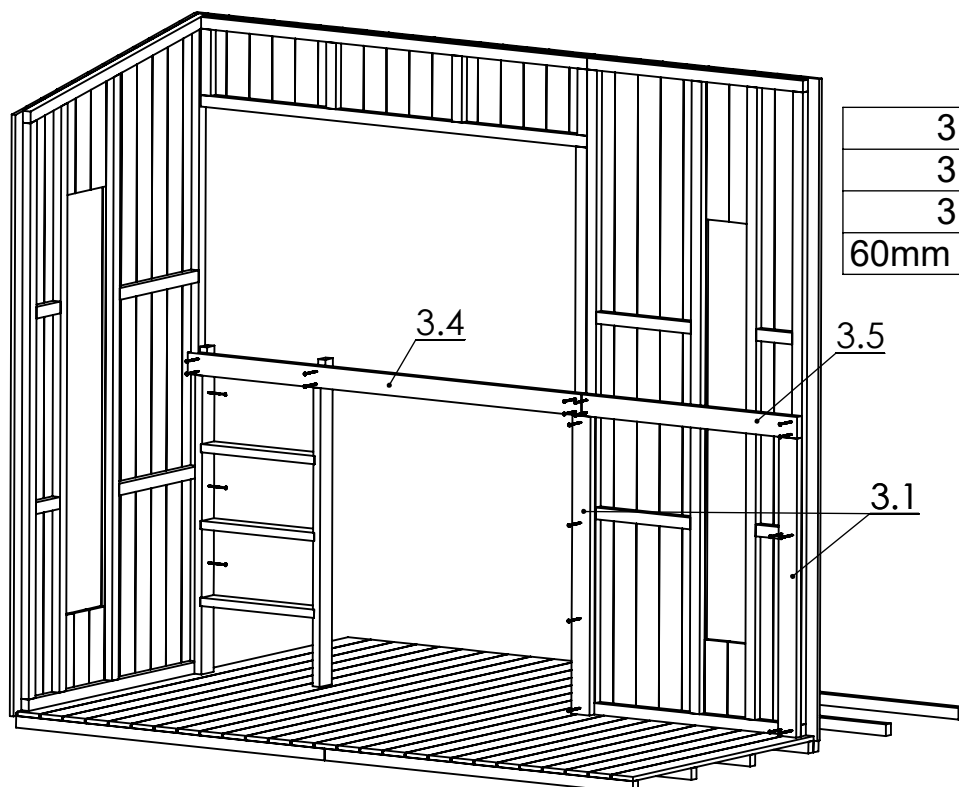


| | |
|-------------|----|
| 3.1 | 2 |
| 3.4 | 1 |
| 3.5 | 1 |
| 60mm screws | 21 |

NB Drill the pilot holes for the screws

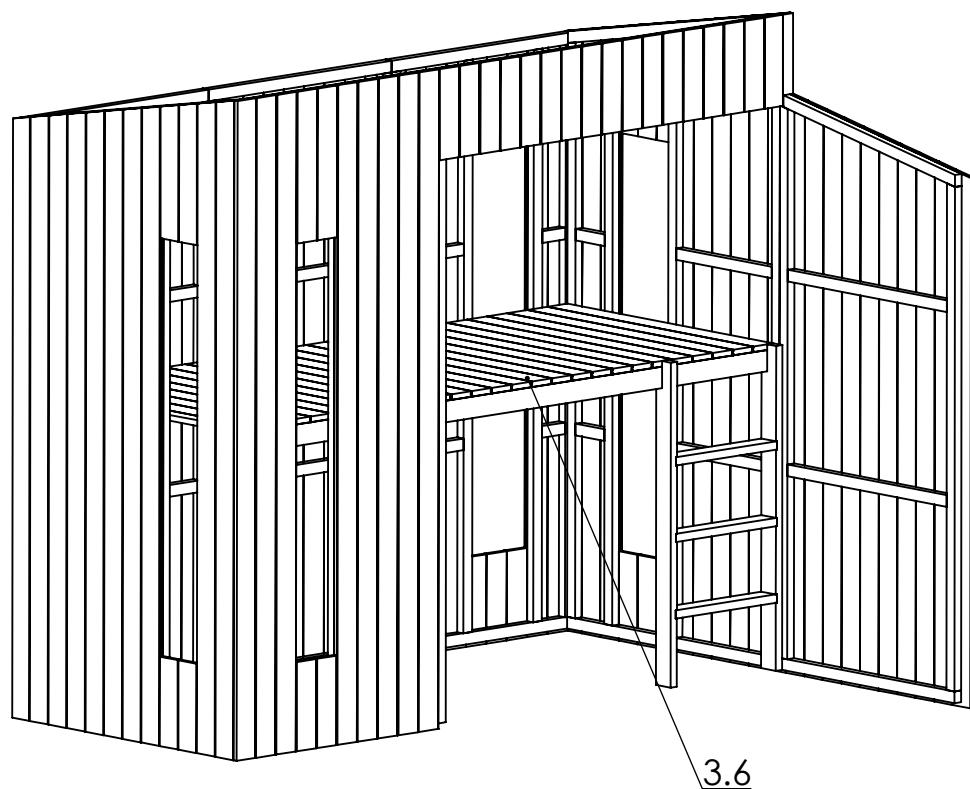


| | |
|------------|-----|
| 3.6 | 27 |
| 40mm nails | 108 |

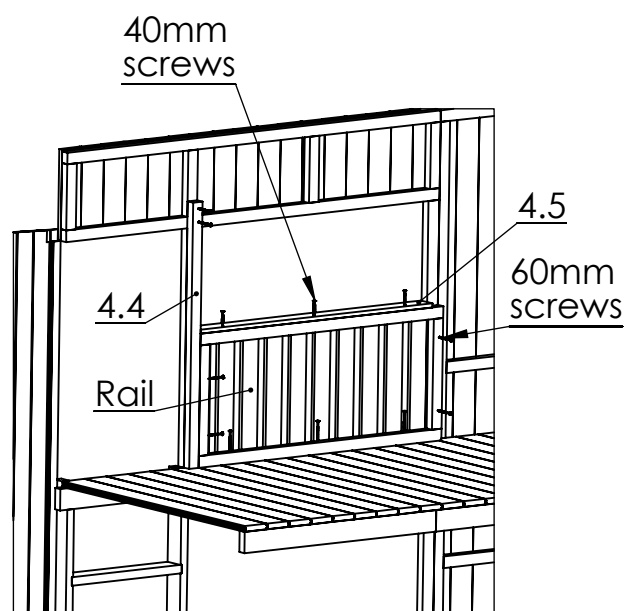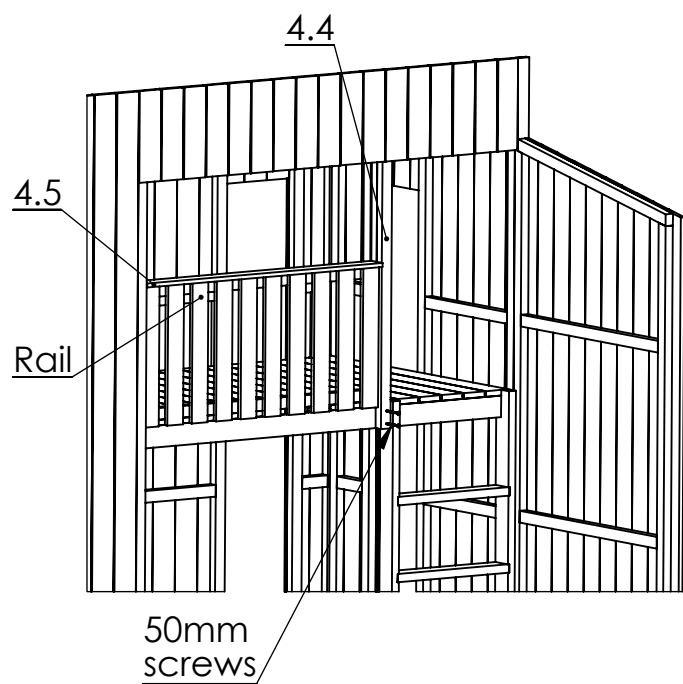


| | |
|-------------|---|
| 4.4 | 1 |
| 4.5 | 1 |
| Rail | 1 |
| 40mm screws | 3 |
| 50mm screws | 2 |
| 60mm screws | 9 |

NB Drill the pilot holes
for the screws

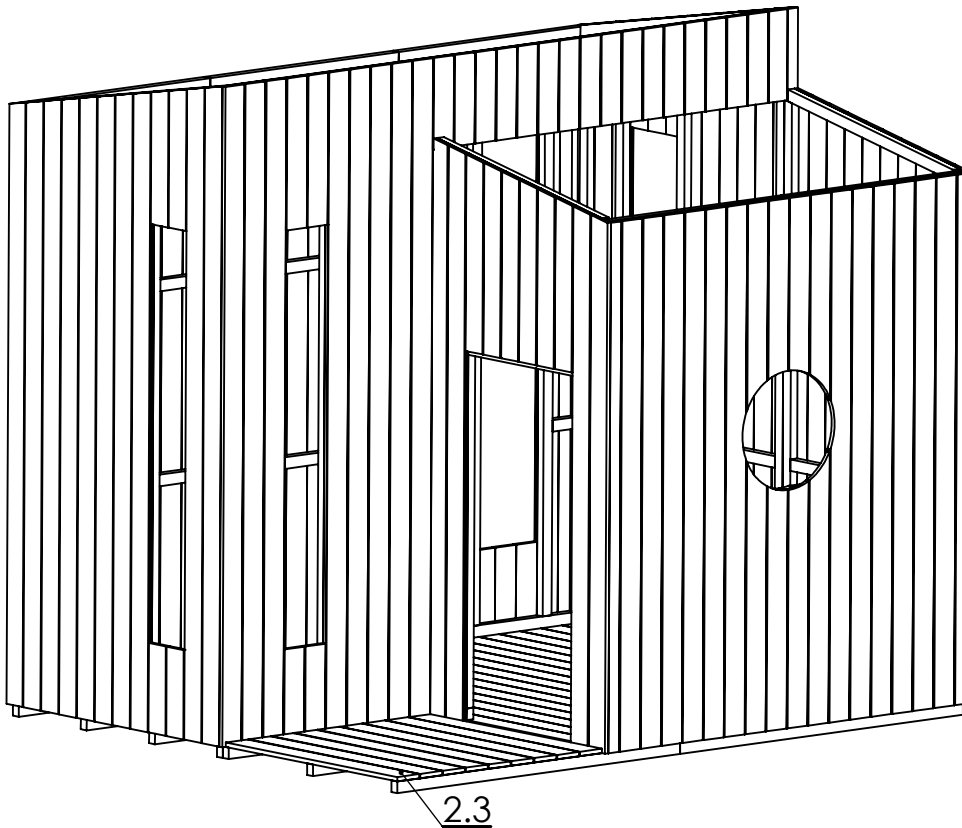


| | |
|------------|----|
| 2.3 | 9 |
| 40mm nails | 54 |

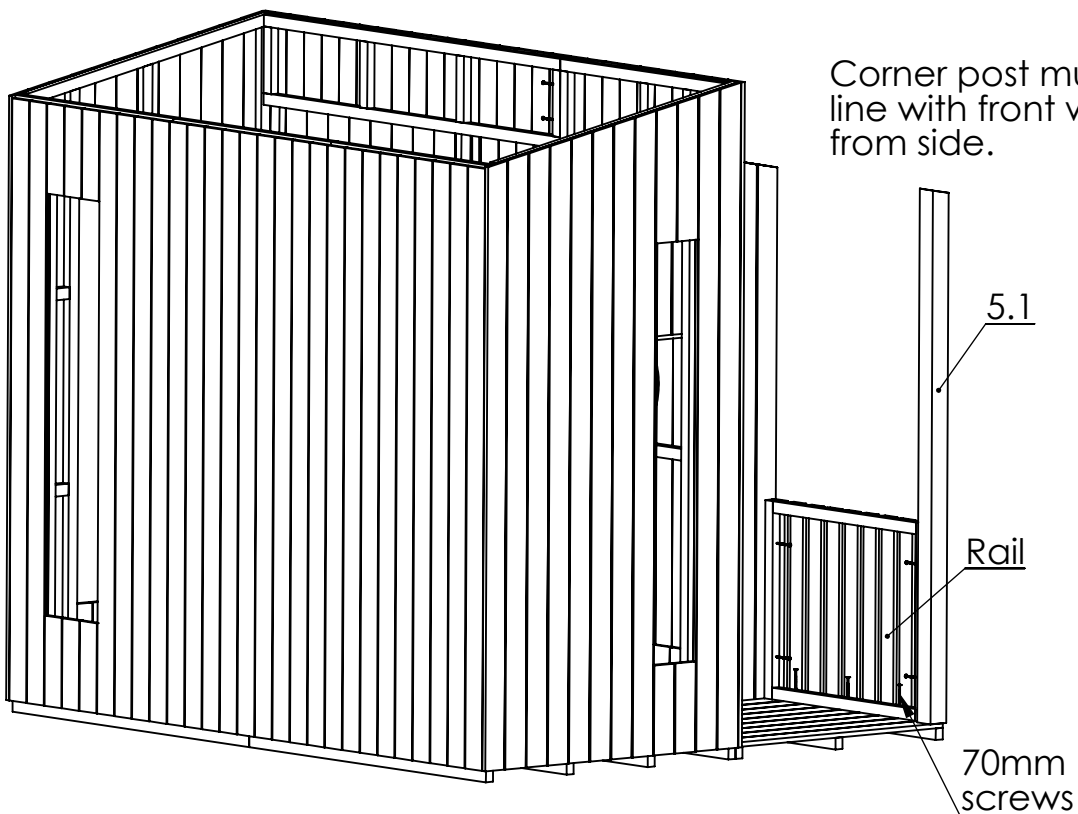


| | |
|-------------|---|
| 5.1 | 1 |
| Rail | 1 |
| 70mm screws | 7 |

NB Drill the pilot holes for the screws

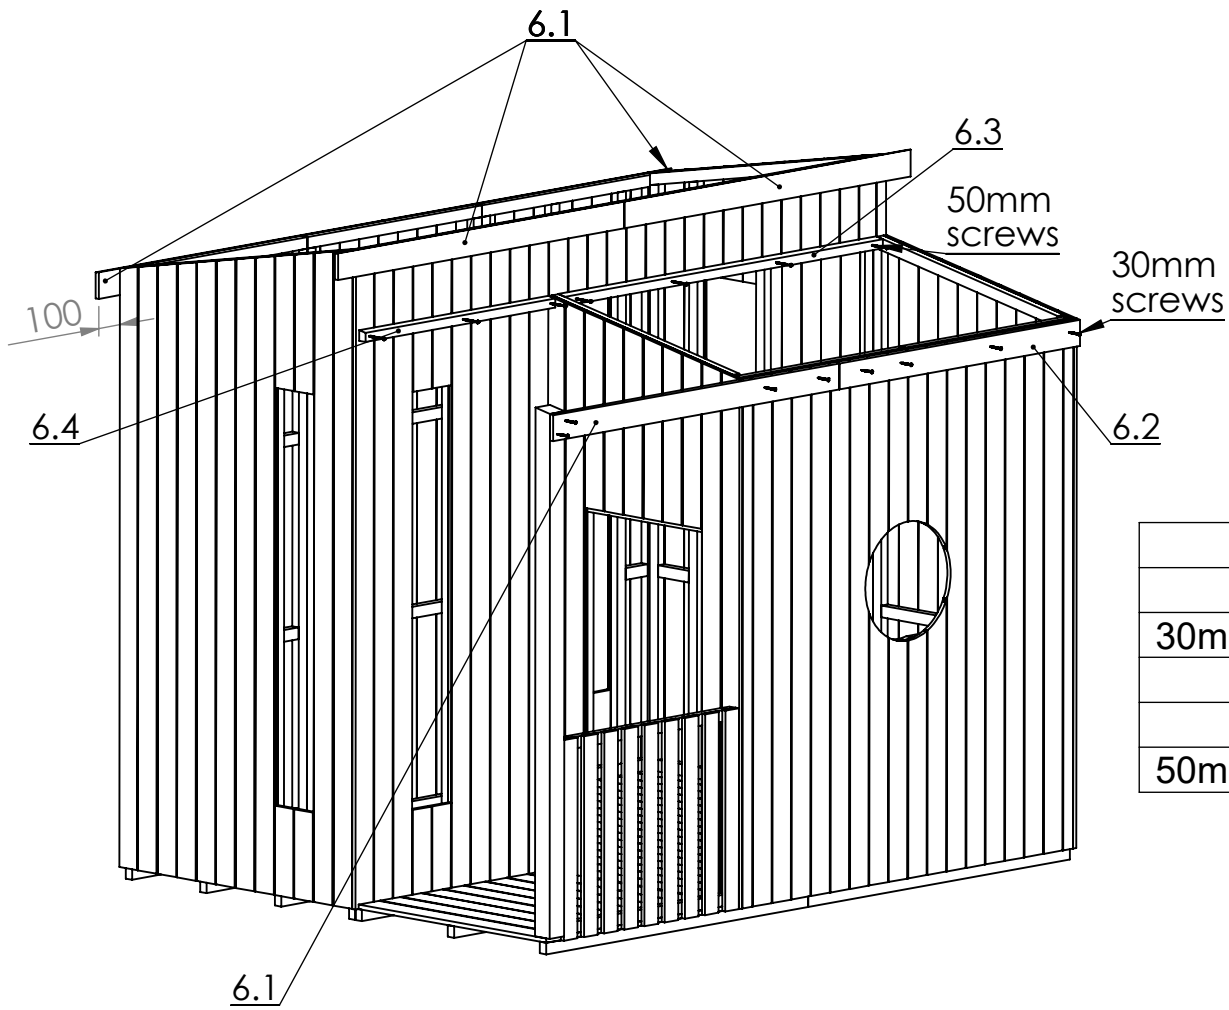


| | |
|-------------|----|
| 6.1 | 5 |
| 6.2 | 1 |
| 30mm screws | 24 |
| 6.3 | 1 |
| 6.4 | 1 |
| 50mm screws | 7 |

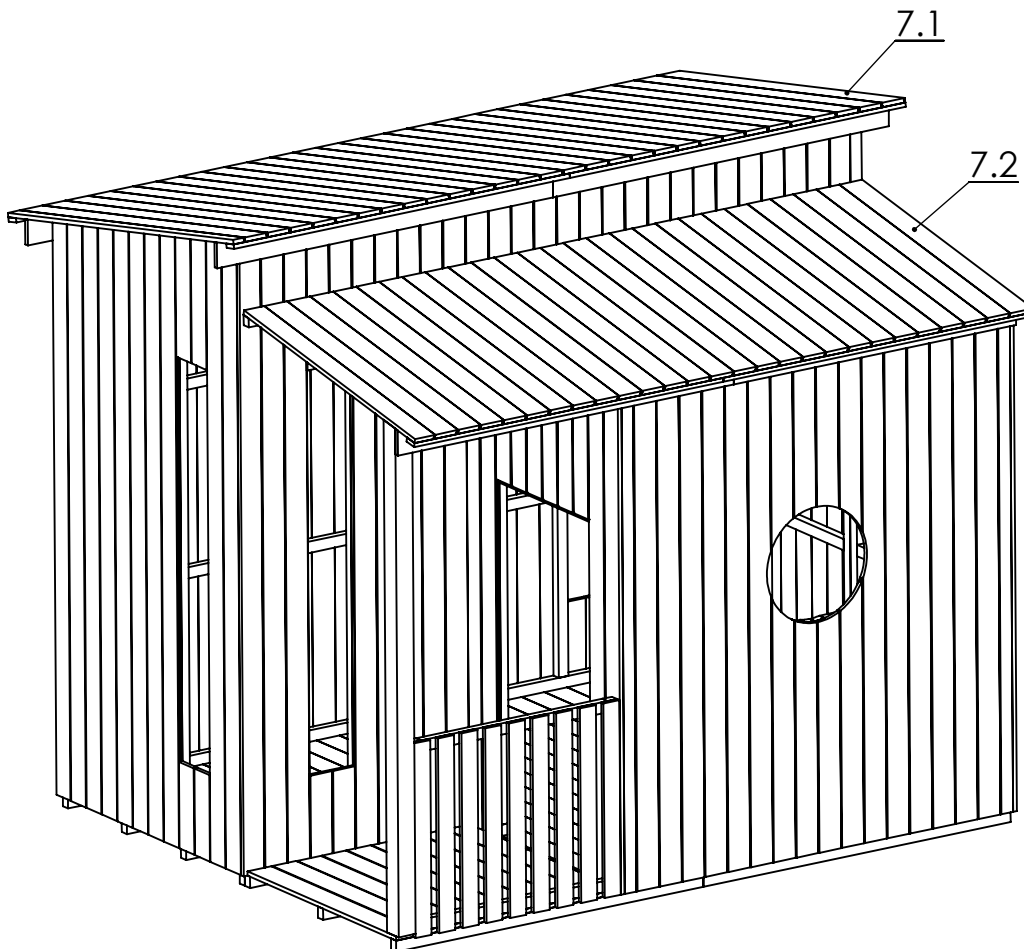


The last roof boards must be cut in right width

| | |
|------------|-----|
| 7.1 | 30 |
| 7.2 | 27 |
| 40mm nails | 228 |


NB Drill the pilot holes for the screws

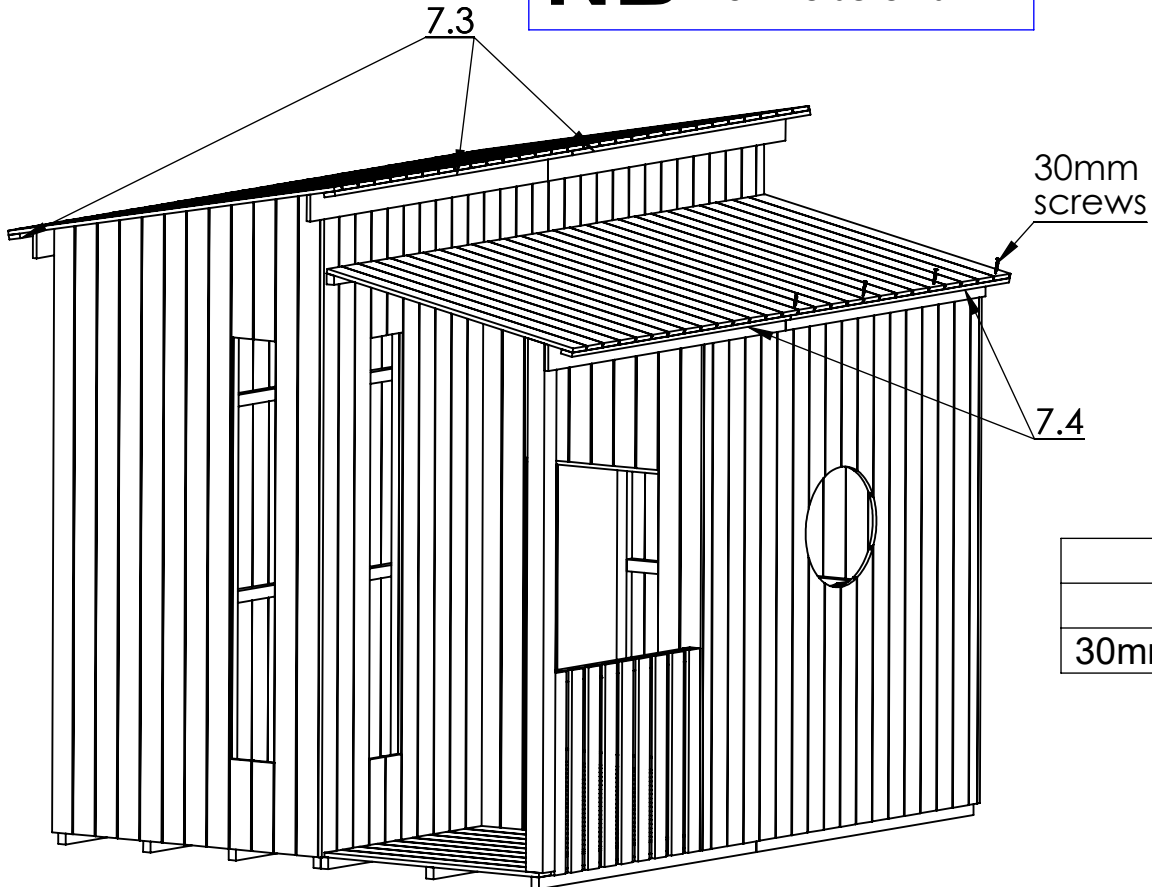



| | |
|-------------|----|
| 7.3 | 4 |
| 7.4 | 2 |
| 30mm screws | 24 |

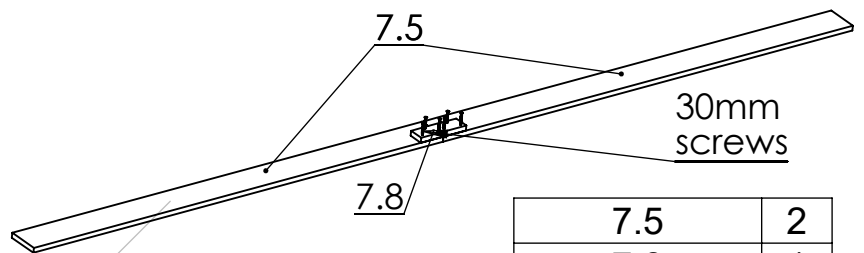




| | |
|-------------|---|
| 7.5 | 2 |
| 7.8 | 1 |
| 30mm screws | 6 |

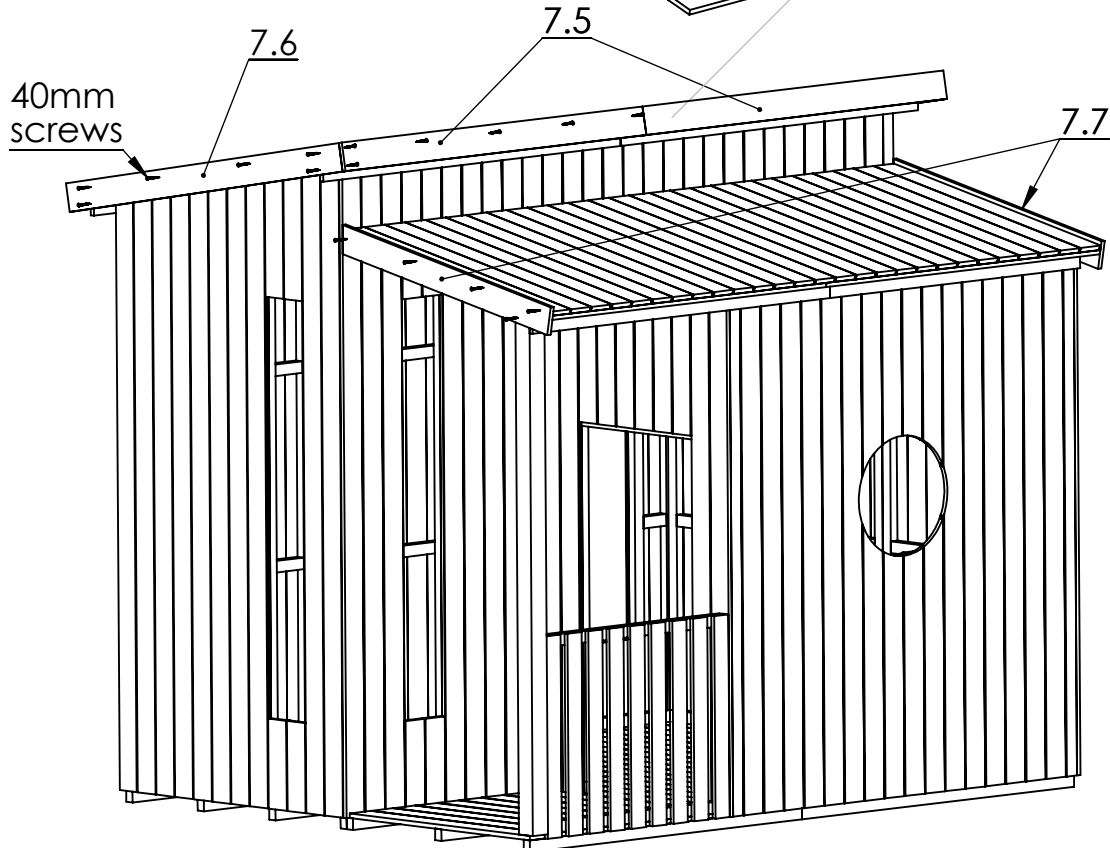



| | |
|-------------|----|
| 7.5 | 2 |
| 7.6 | 2 |
| 7.7 | 2 |
| 40mm screws | 34 |

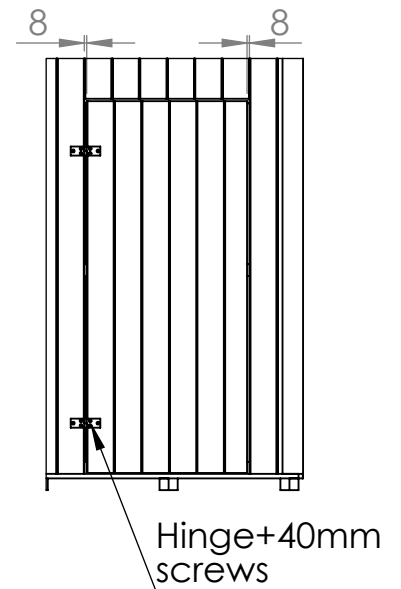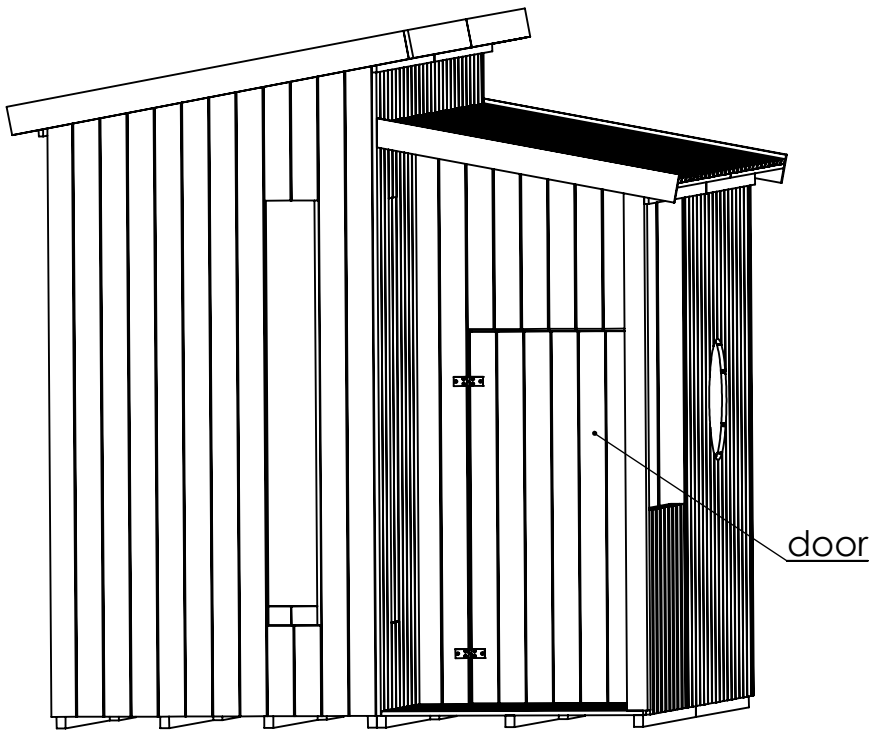


| | |
|-------------|----|
| Door | 1 |
| Hinge | 2 |
| 40mm screws | 12 |
| Magnet | 1 |
| 15mm screws | 3 |
| Door handle | 1 |
| 30mm screws | 2 |

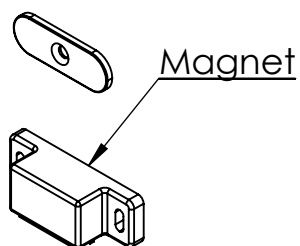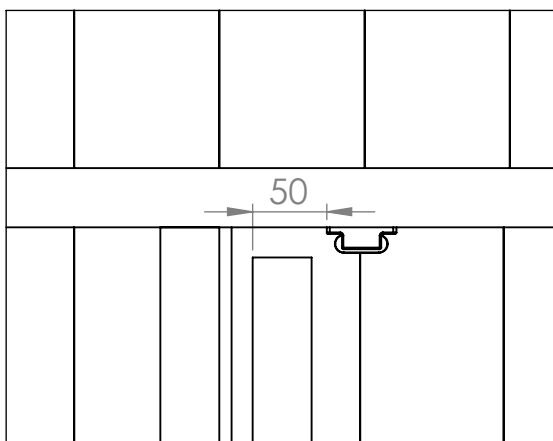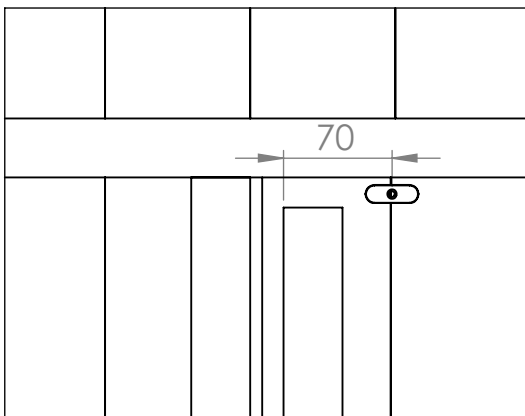


Connect the door handle from inside using 2x30mm screws

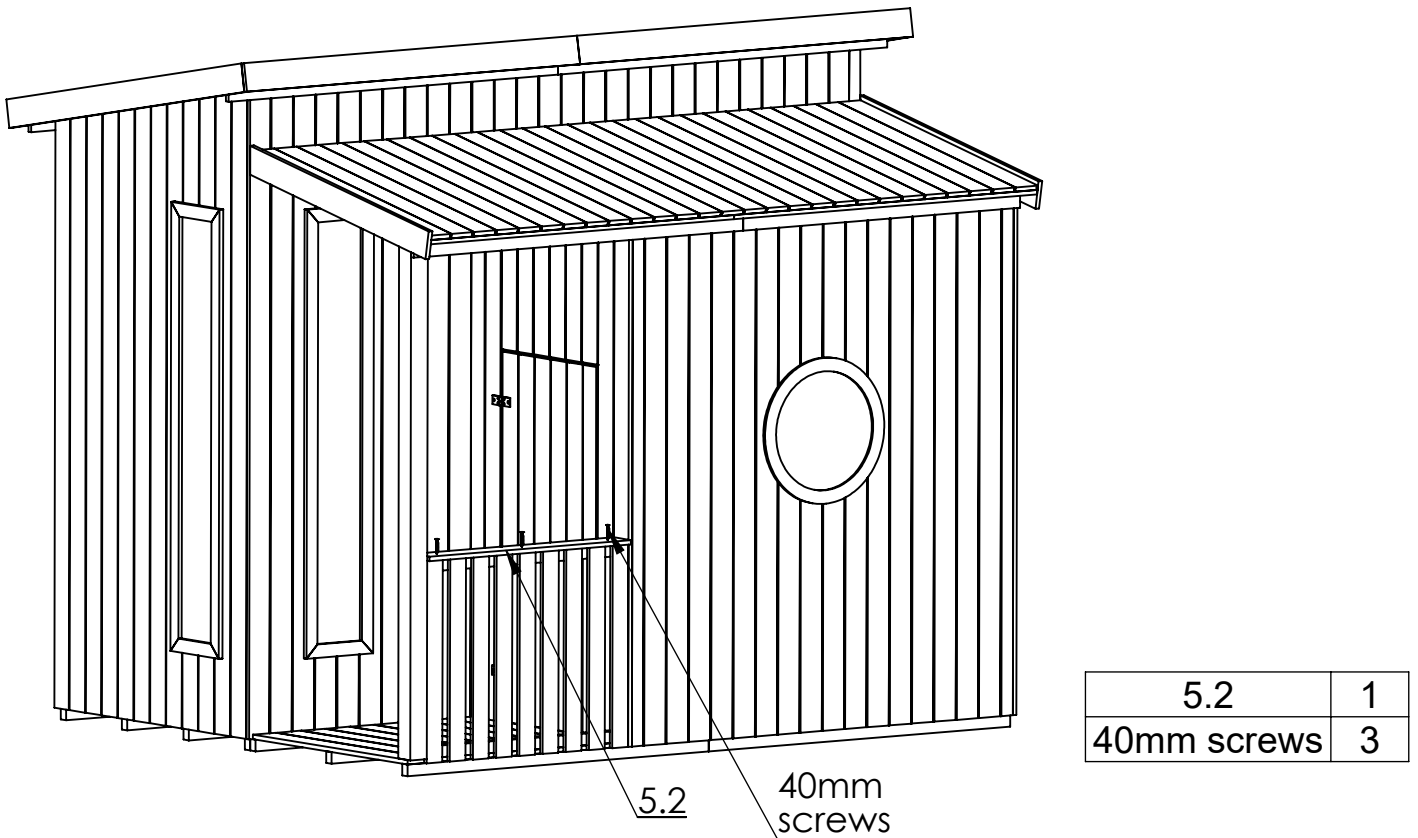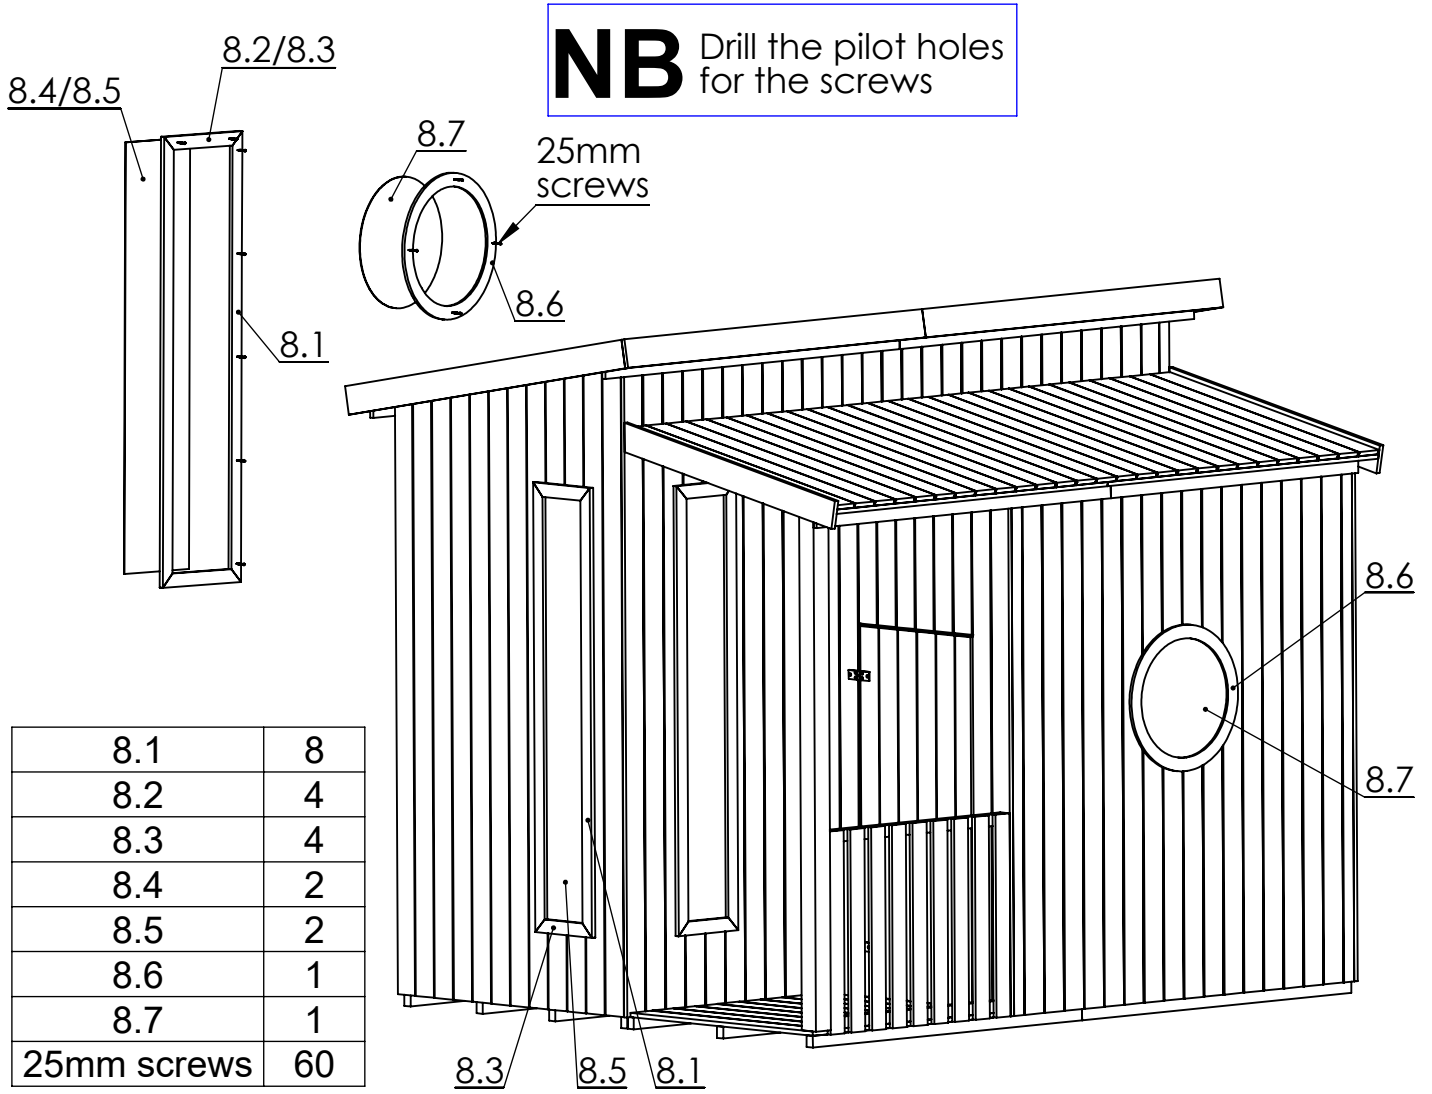

NB! Drill the pilot holes
for the screws

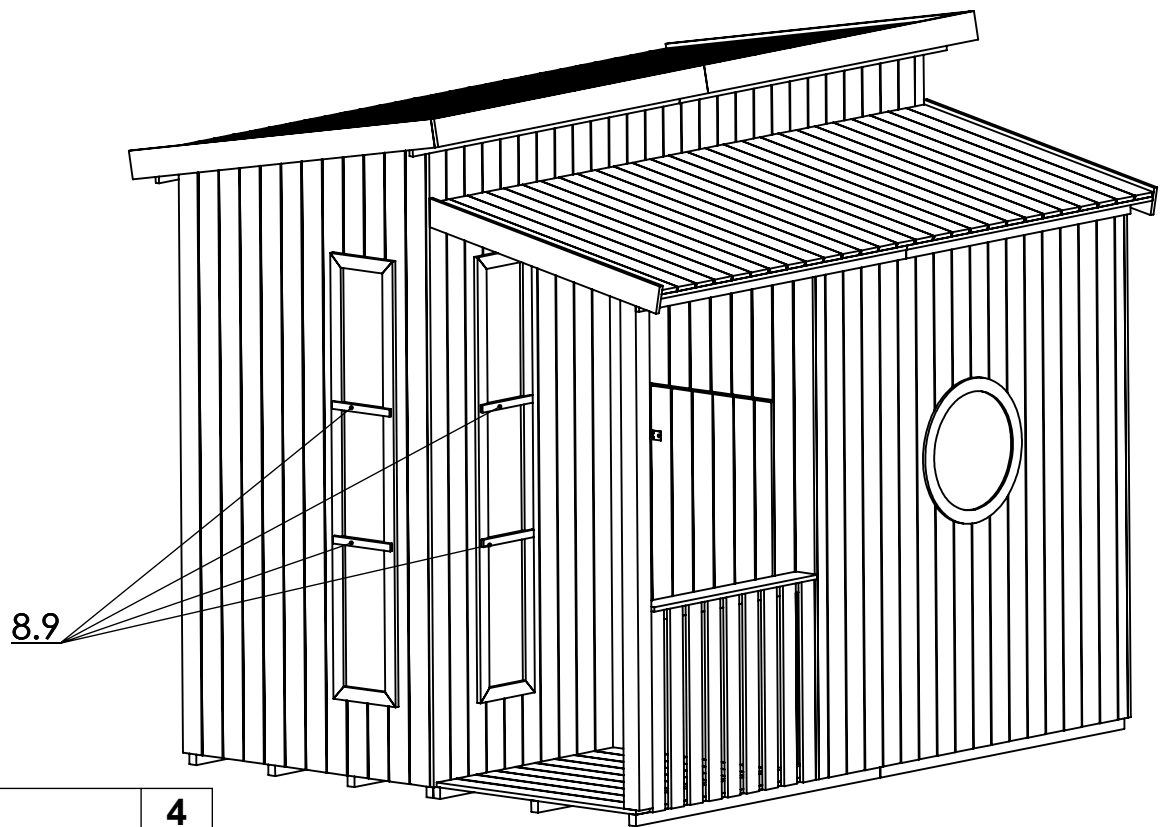

| | |
|-------------|---|
| 8.9 | 4 |
| 25mm screws | 8 |

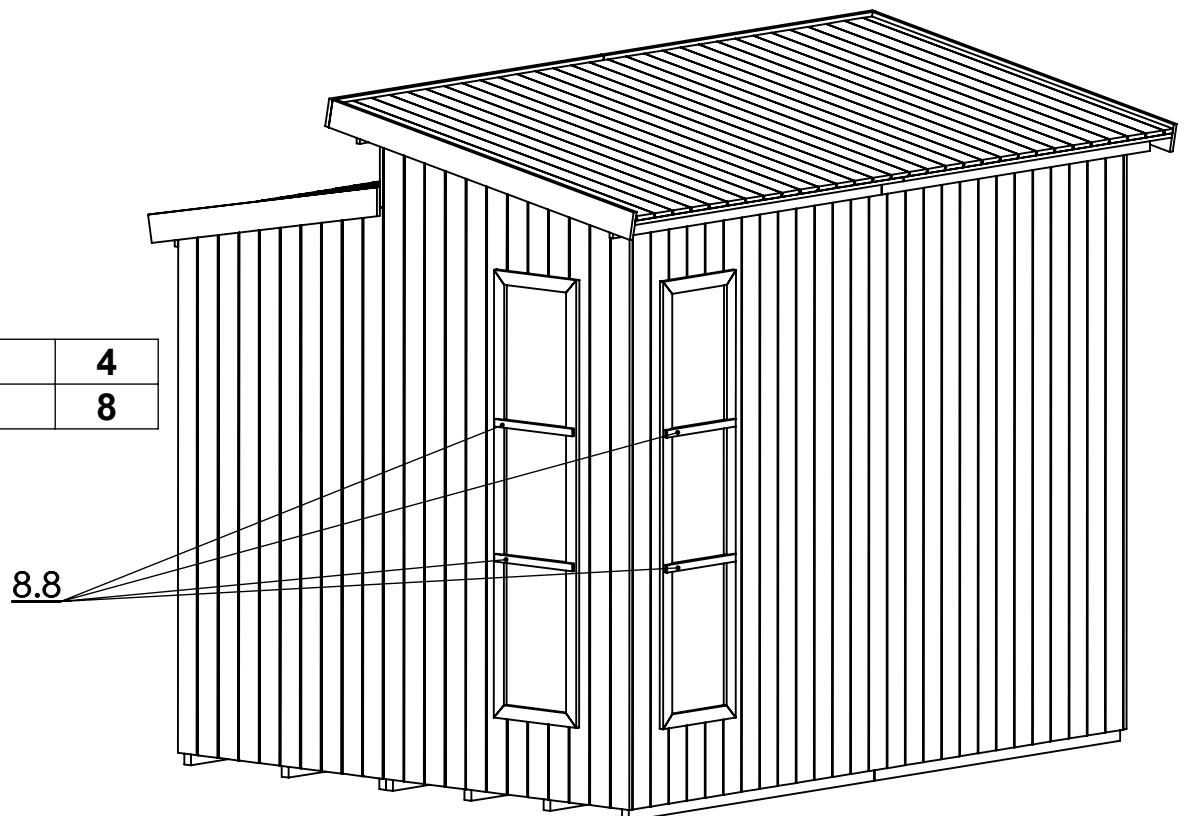

| | |
|-------------|---|
| 8.8 | 4 |
| 25mm screws | 8 |