

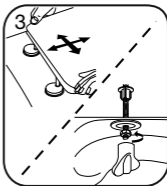
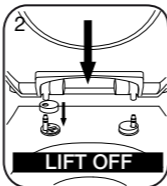
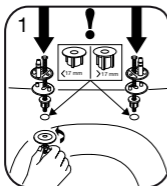
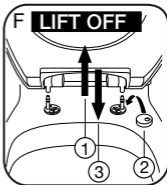
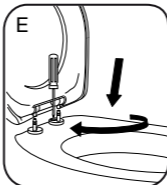
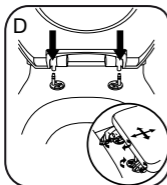
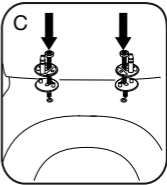


# D99

## Bund monteret / Bottom mounted

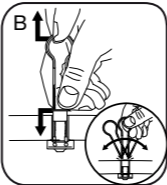

## Top monteret / Top mounted

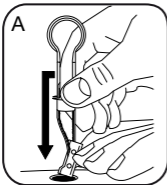

### ATTENTION:

IFÖ 6775 / ONLY 6 MM SCREW, NO TOGGLE HINGE



24-08-2017



LDPE

