

Monteringsanvisning / Installation instruction

FMM: 100 89 23 - Rev.001 - 22.12.09

FM Mattsson 9000XE duschset


FM Mattsson 9000XE shower set

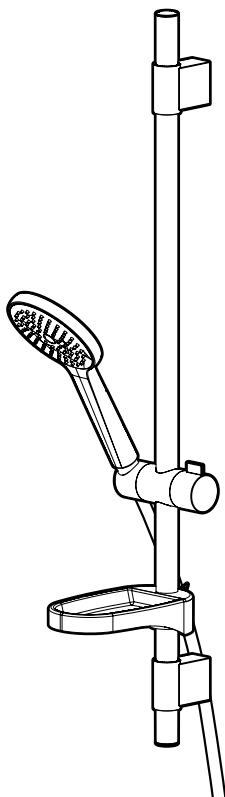


Montera duschsetet

Install the shower set


1 A ————— Trä / Wood

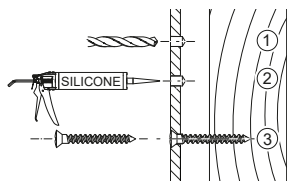


1 B ————— Betong / Concrete

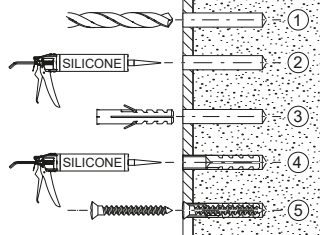


2

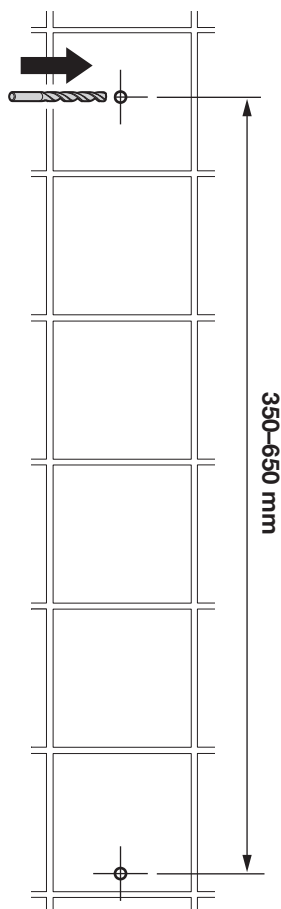


3

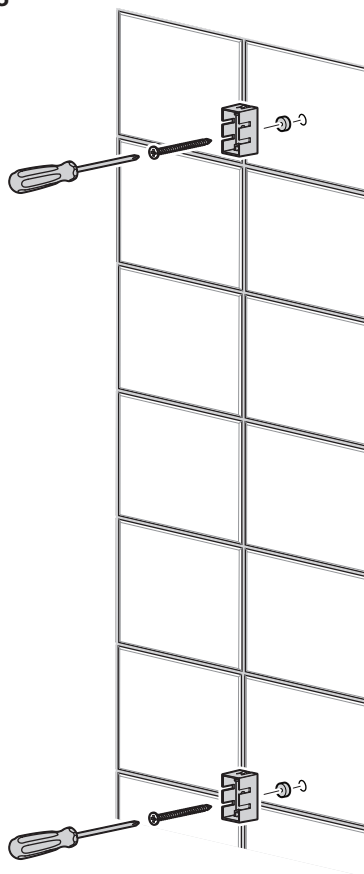


4

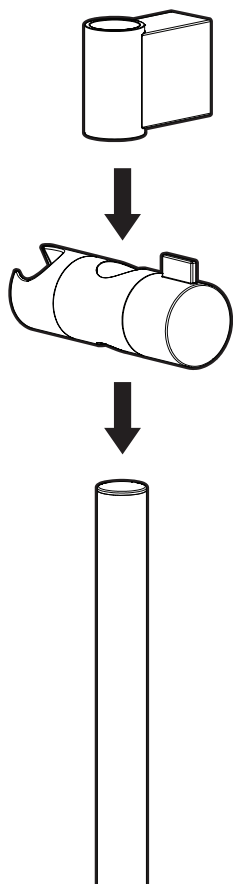

5

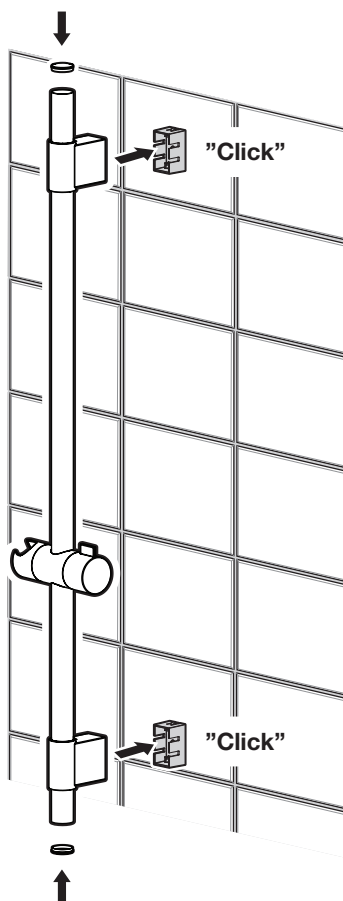

6

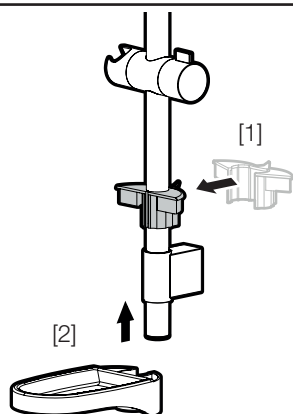

7

