


Solar brackets / Solar-Trägerstütze

Assembly instruction

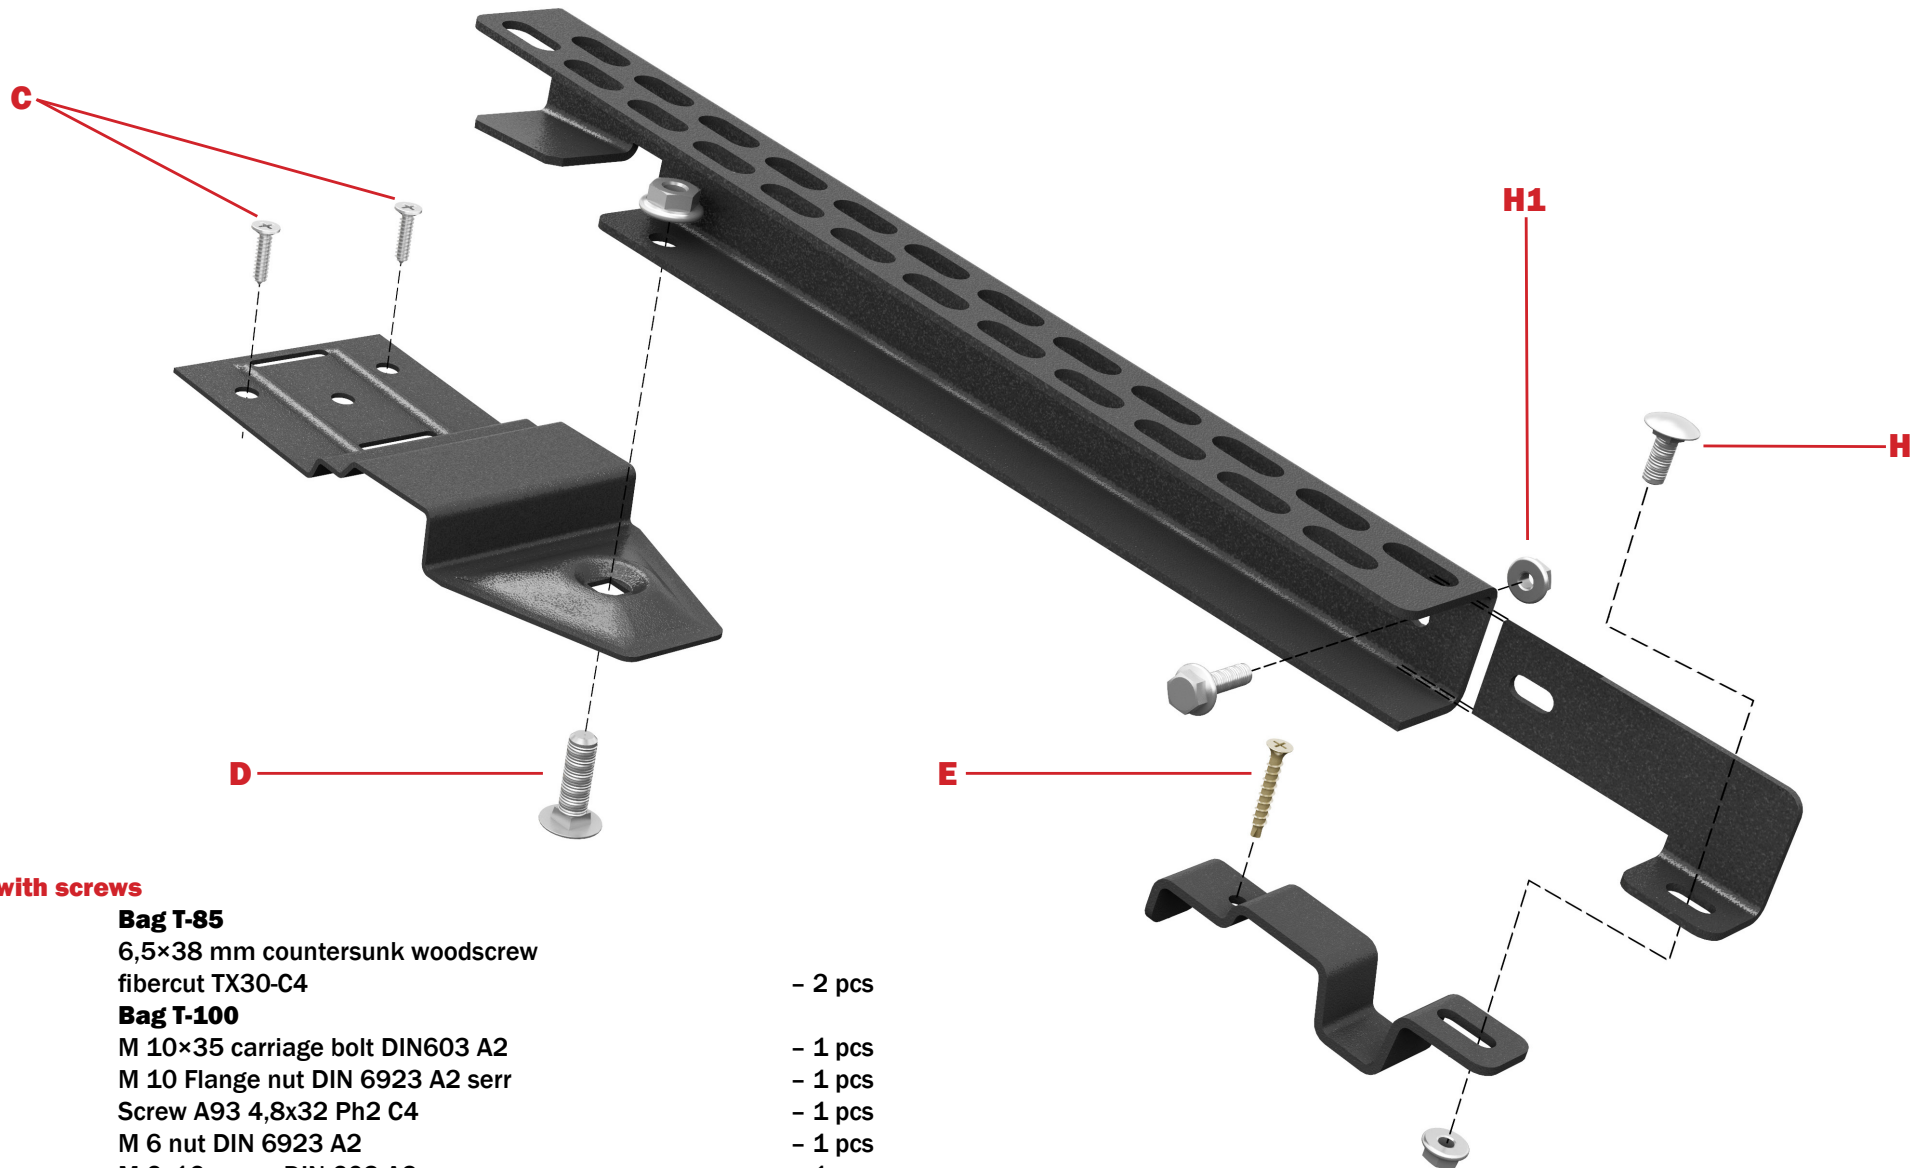

Bags with screws

C	Bag T-85 6,5×38 mm countersunk woodscrew fibercut TX30-C4	- 2 pcs
D	Bag T-100 M 10×35 carriage bolt DIN603 A2 M 10 Flange nut DIN 6923 A2 serr	- 1 pcs - 1 pcs
E	Screw A93 4,8x32 Ph2 C4	- 1 pcs
H	M 6 nut DIN 6923 A2	- 1 pcs
H1	M 6x16 screw DIN 603 A2	- 1 pcs
	M 6 nut DIN 6923 A2	- 1 pcs
	M 6x20 screw Din 6921 A2	- 1 pcs